

WATER PUMP

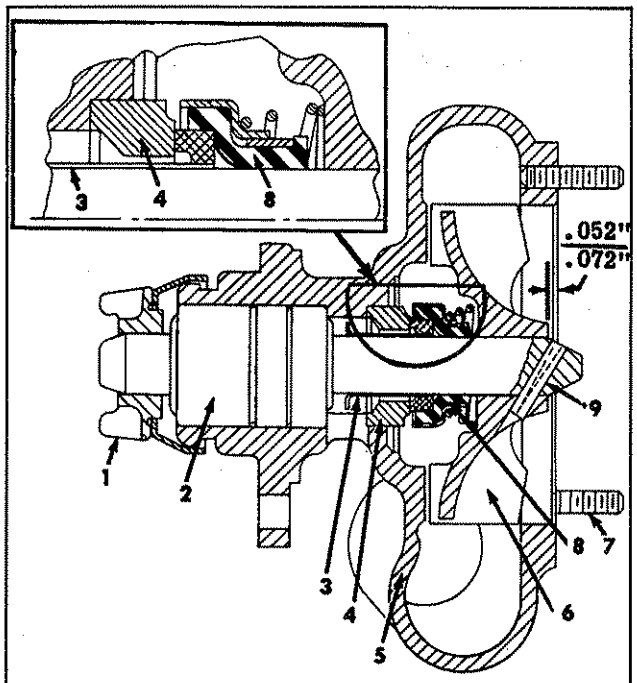

1 Coupling and Slinger Assembly
2 Shaft and Bearing Assembly
3 Shaft Slinger
4 Body Insert
5 Body Assembly
6 Impeller
7 Body Stud
8 Seal Assembly
9 Impeller Pin

TPM-2357

Figure 2—Water Pump Assembly

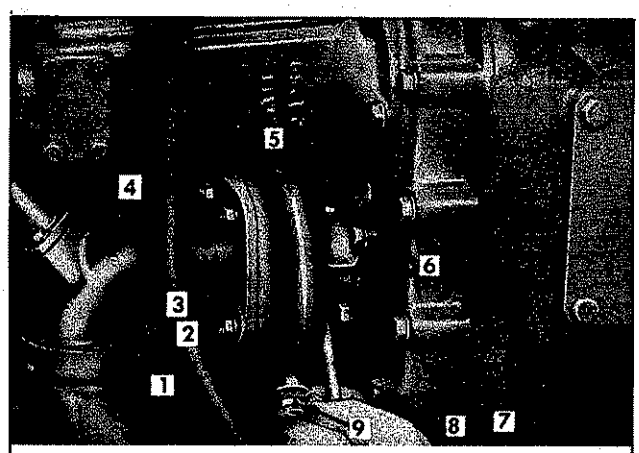

1 Oil Cooler
2 Seal Clamp
3 Inlet Seal
4 Pump Inlet
5 Water Pump
6 Mounting Bolts
7 Blower End Plate
8 Special Wrench
9 Drain Cock

TPM-2739 -1

Figure 3—Water Pump Mounting and Use of Special Wrench

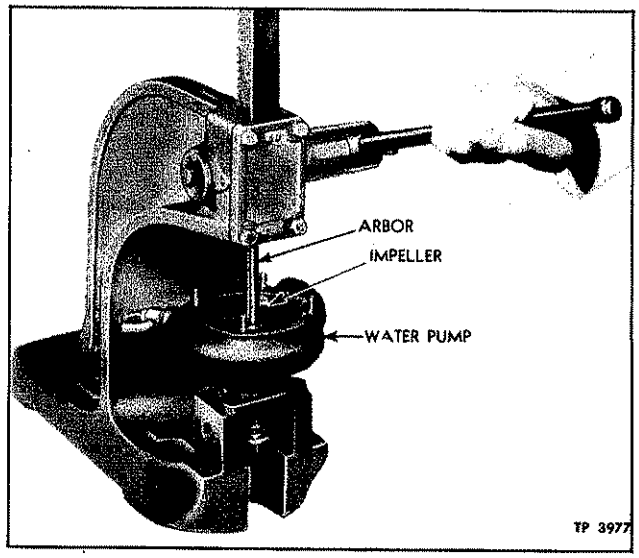


Figure 4—Pressing Water Pump Impeller from Drive Shaft

2. Loosen clamp (9); then slip inlet seal (5) down on oil cooler neck.
3. Remove two cap screws (8) and loosen flange (1) which holds pump outlet to cylinder block. Move flange and packing towards pump body.
4. Remove cap screws (7) which holds pump to blower. The inner cap screw can be removed by using a special wrench as shown in figure 3.
5. Remove water by-pass tube from water pump inlet.
6. Loosen pump by jarring with palm of hand, then rotate assembly until pump will clear the governor drive housing and oil cooler housing neck.

DISASSEMBLY

If removal of the spring seal assembly or the impeller is necessary, the following sequence of operation will apply:

1. Remove pump cover or inlet from body.
2. Drive out pin retaining impeller to shaft.
3. Support the water pump in an arbor press flange down as shown in figure 4 and press the shaft through the impeller. Shaft and bearing assembly will also be removed from the pump body during this operation.
4. If the water seal only is to be inspected or changed, no further disassembly is necessary and the new seal may be installed and pump reassembled. The water seal is an assembly and is furnished complete with spring.
5. If further disassembly is necessary the pump