that they will attain while the engine is running at full load.

6. To be sure of the proper rack adjustment, hold the speed control lever in the maximum speed position and press down on the injector rack with a screwdriver or finger tip and note the "rotating" movement of the injector control rack when the speed control lever is in the maximum speed position (Fig. 5). Hold the speed control lever in the maximum speed position and, using a screwdriver, press downward on the injector control rack. The rack should tilt downward and when the pressure of the screwdriver is released, the control rack should "spring" back upward (Fig. 6).

If the rack does not return to its original position, it is too loose. To correct this condition with the *Two Screw Assembly*, back off the outer adjusting screw slightly and tighten the inner adjusting screw slightly. To correct this condition with the *One Screw and Locknut Assembly*, loosen the locknut and turn the adjusting screw clockwise a slight amount and retighten the locknut.

The setting is too tight if, when moving the speed control lever from the idle speed position to the maximum speed position, the injector rack becomes tight before the speed control lever reaches the end of its travel (as determined by the stop under the governor cover). This will result in a step-up in effort required to move the speed control lever to the end of its travel. To correct this condition with the *Two Screw Assembly*, back off the inner adjusting screw slightly and tighten the outer adjusting screw slightly. To correct this condition with the *One Screw and Locknut Assembly*, loosen the locknut and turn the adjusting screw counterclockwise a slight amount and retighten the locknut.

7. To adjust the remaining injector rack control levers, remove the clevis pin from the fuel rod and the injector control tube lever. Hold the injector control racks in the full-fuel position by means of the lever on the end of the control tube, and proceed as follows:

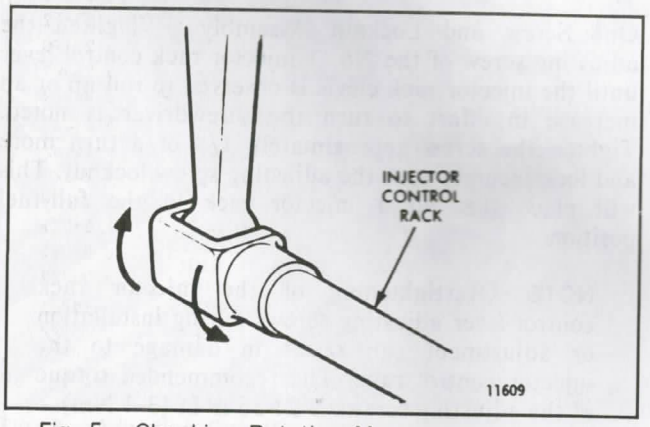


Fig. 5 - Checking Rotating Movement of Injector Control Rack

Two Screw Assembly:

a. Turn down the inner adjusting screw of the No. 2 injector until the injector rack has moved into the full-fuel position and the inner adjusting screw is bottomed on the injector control tube. Turn the outer adjusting screw down until it bottoms lightly on the injector control tube. Then, alternately tighten both the inner and outer adjusting screws.

NOTE: Overtightening of the injector rack control lever adjusting screws during installation or adjustment can result in damage to the injector control tube. The recommended torque of the adjusting screws is 24-36 **lb-in** (3-4 Nm).

b. Recheck the No. 1 injector rack to be sure that it has remained snug on the ball end of the injector rack control lever while adjusting the No. 2 injector. If the rack of the No. 1 injector has become loose, back off slightly on the inner adjusting screw on the No. 2 injector rack control lever and tighten the outer adjusting screw.

One Screw and Locknut Assembly:

a. Tighten the adjusting screw of the No. 2 injector rack control lever until the injector rack clevis is observed to roll up or an increase in effort to turn the screwdriver is noted. Securely lock the adjusting screw locknut.

NOTE: Overtightening of the injector rack control tube lever adjusting screws during installation or adjustment can result in damage

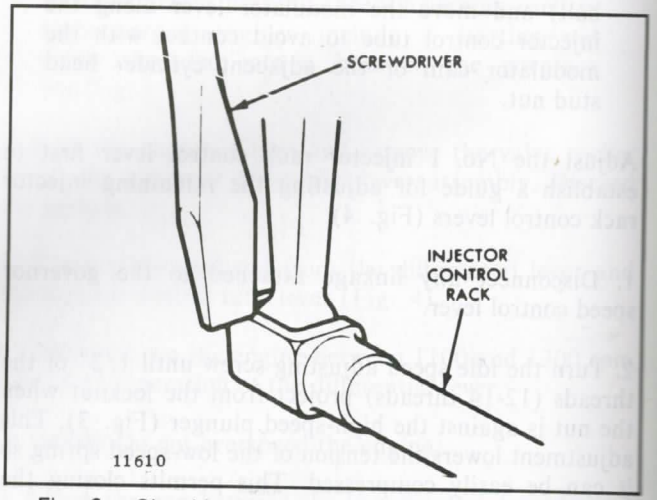


Fig. 6 - Checking Injector Control Rack "Spring"

© 1984 General Motors Corp.