Firmware Flashing

1. Usage Notice

The module comes with the voice recognition firmware pre-installed. The factory firmware is also provided in the same directory as this document.

2. Firmware Flashing Instructions

1) Connect the voice interaction module to the PC using the Type-C data cable.

2) Open the "Upgrade.bat" file located in the "Firmware Flashing Tool\ **PACK_UPDATE_TOOL.exe**" folder, which can be found in the same directory as this document, and then click on "**Update**".

3) Click to select the firmware and locate the “Factory Firmware\CI1302_Chinese_SingleMic_V00729_UART1_115200_2M.bin” file in the same directory as this document.

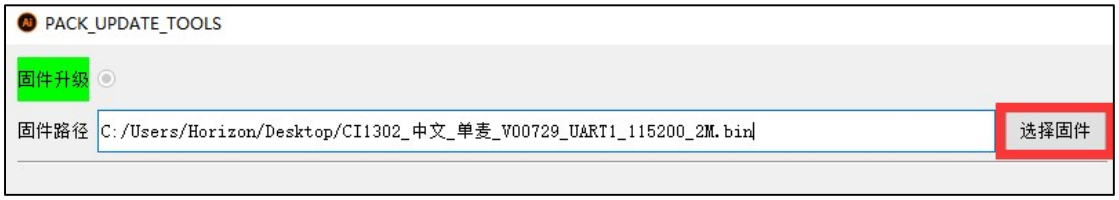

4) Find the corresponding serial port and select it.

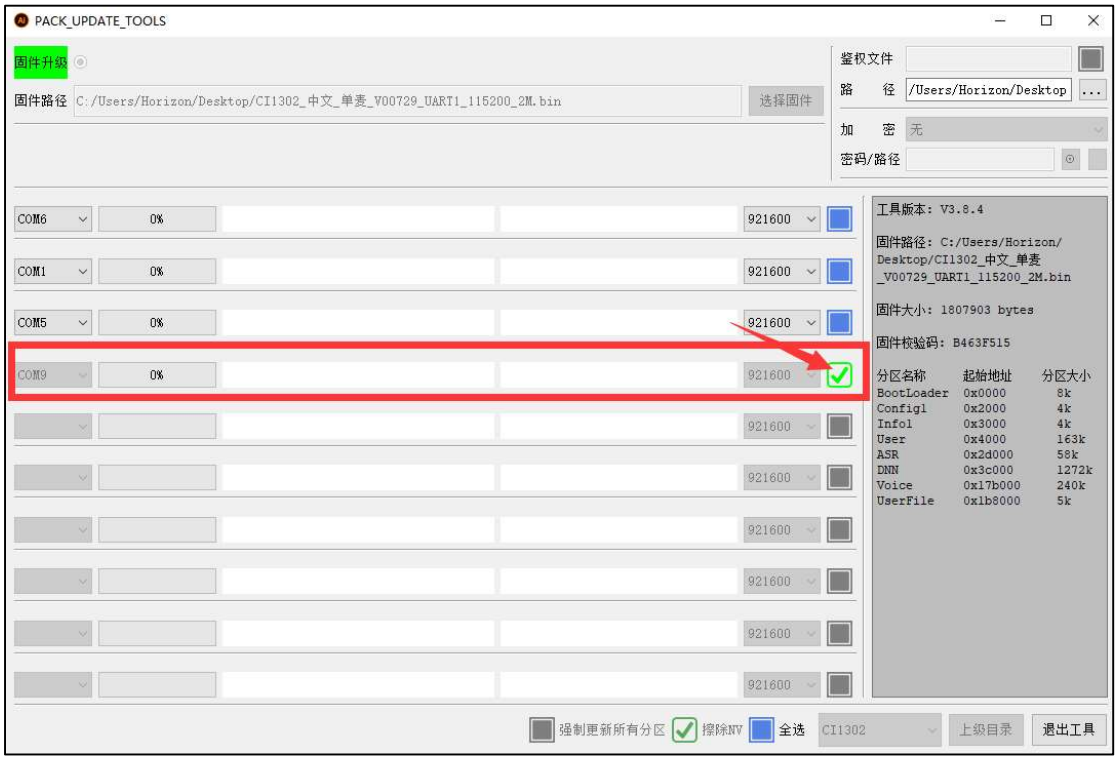

5) Press the RST button on the voice interaction module to begin the flashing process, and wait for it to complete successfully.