

		Rev.00
	WinLoader Tera	Page 1 of 11

WinLoader Tera Manual

Rev	Date	ObjectOggetto	Developed	Approved
00	15/11/2010	Emissione	R&D Dept.– Picco S.	Resp. R&D – Flamini D.

		Rev.00
	WinLoader Tera	Page 2 of 11

Index

1	Scope	3
2	INSTALLATION	3
3	USER INTERFACE	7
4	SELECT UNIT	7
5	UPLOAD DEVICE.....	9
6	UPGRADE DEVICE.....	10
7	CLOSE TOOL.....	11

Rev	Date	ObjectOggetto	Developed	Approved
00	15/11/2010	Emissione	R&D Dept.– Picco S.	Resp. R&D – Flamini D.

		Rev.00
	WinLoader Tera	Page 3 of 11

1 SCOPE

The purpose of this document is to define the installation and functionality of Winloader Tera Tool.

2 INSTALLATION



- Select WinloaderTeraSetUp.exe
 - o Select Nex for each iteration
 - o Instalation contains the PEAK driver
 - o During OEM Driver installation select this components :



Rev	Date	ObjectOggetto	Developed	Approved
00	15/11/2010	Emissione	R&D Dept.– Picco S.	Resp. R&D – Flamini D.


- At the end of WinloaderTera installation:

- o Set dongle on usb port

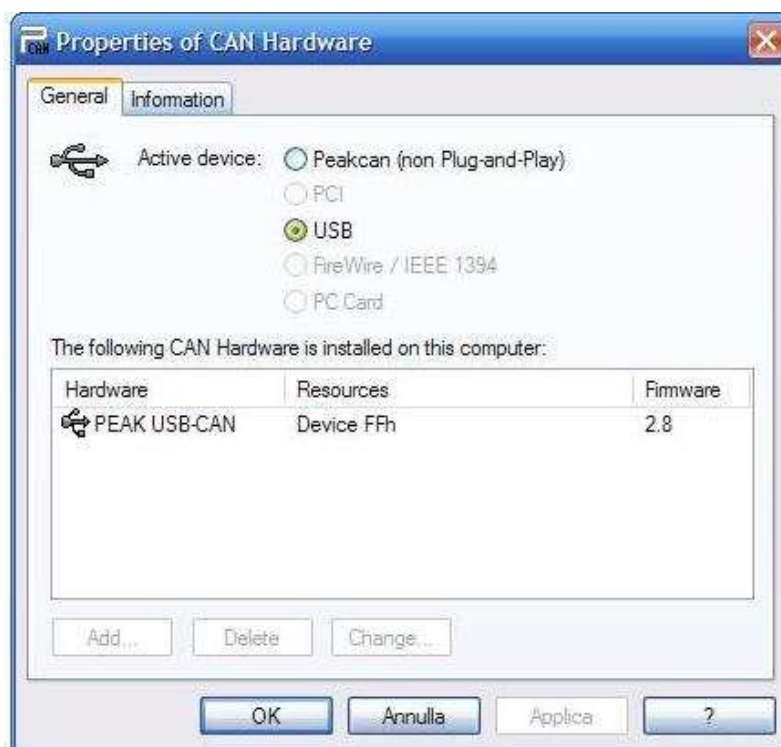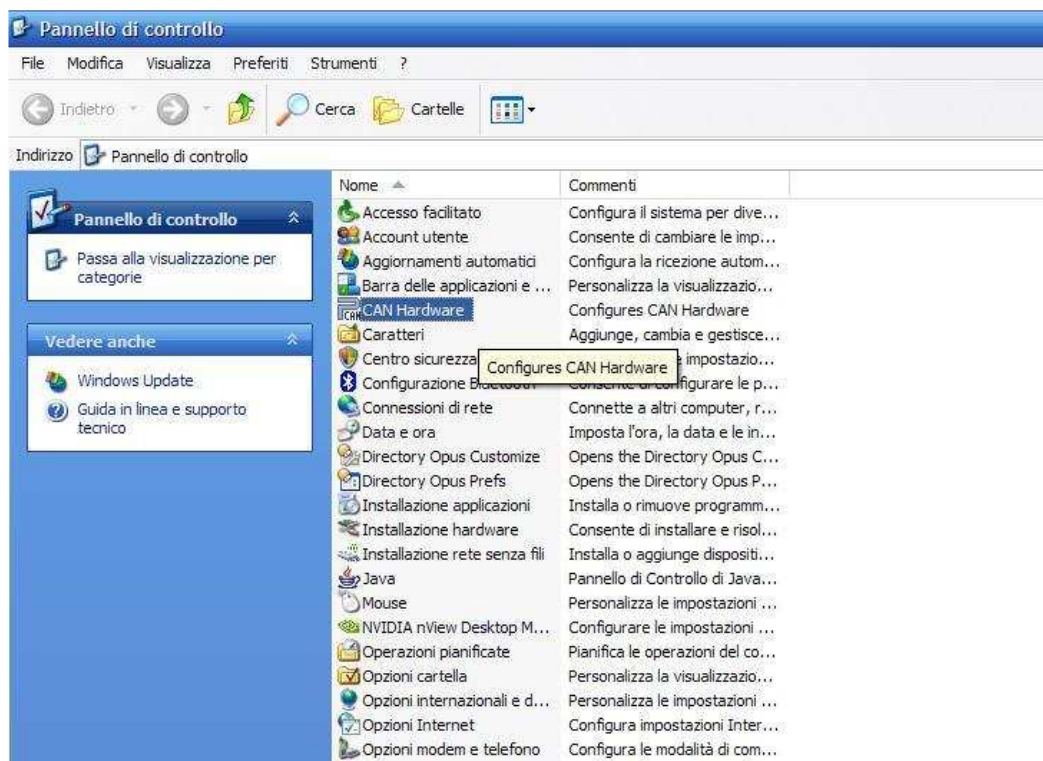

Rev	Date	ObjectOggetto	Developed	Approved
00	15/11/2010	Emissione	R&D Dept.– Picco S.	Resp. R&D – Flamini D.

- o Connect the dongle to pc and then config the following network through NetConfig, supplied with the PEAK driver:

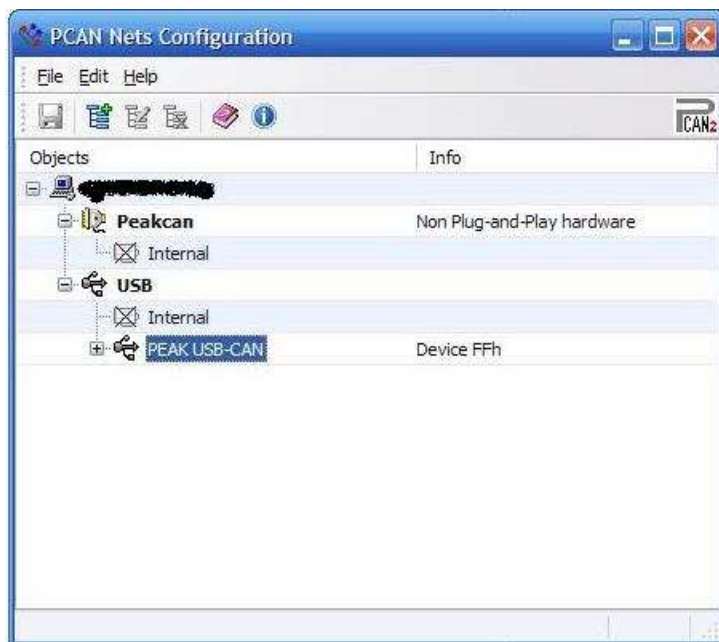

Rev	Date	ObjectOggetto	Developed	Approved
00	15/11/2010	Emissione	R&D Dept.– Picco S.	Resp. R&D – Flamini D.


		Rev.00
	WinLoader Tera	Page 6 of 11

ATTENTION:.. As shown in the picture above, baud rate must be 250, **save the created net with the name “250”**.



Rev	Date	ObjectOggetto	Developed	Approved
00	15/11/2010	Emissione	R&D Dept.– Picco S.	Resp. R&D – Flamini D.

3 USER INTERFACE

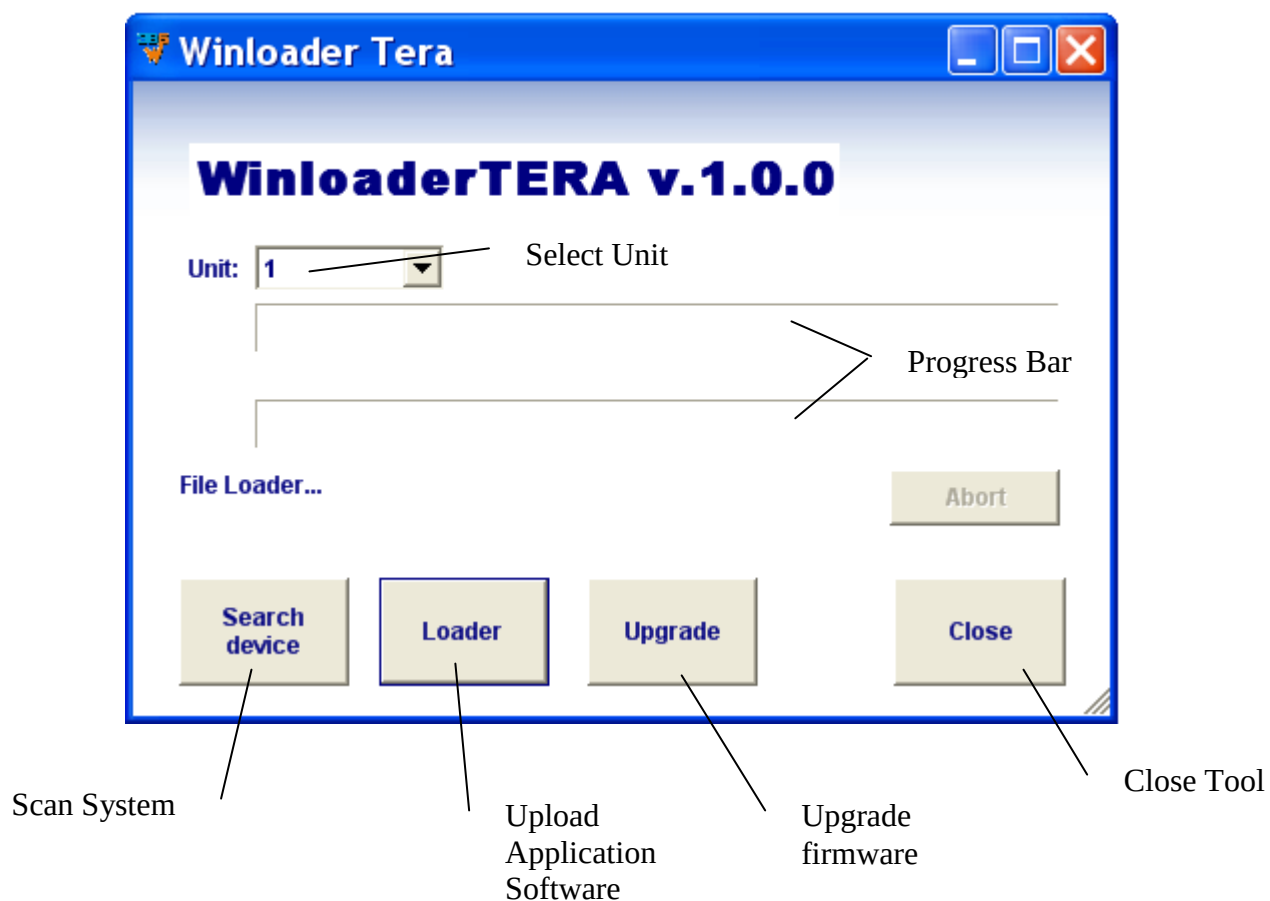

4 SELECT UNIT

In Order to select the drive there are two methods:

- I know the number of Unit:

select from the menu " Select Unit" the unit number (the default value is "1")

Rev	Date	ObjectOggetto	Developed	Approved
00	15/11/2010	Emissione	R&D Dept.– Picco S.	Resp. R&D – Flamini D.



- Don't know the number of connected units:
start scanning the system press "Search Device" button, in the drop down menu we see only the number of connected units
Select in the drop down menu one unit .



Rev	Date	ObjectOggetto	Developed	Approved
00	15/11/2010	Emissione	R&D Dept.– Picco S.	Resp. R&D – Flamini D.


		Rev.00
	WinLoader Tera	Page 9 of 11

5 UPLOAD DEVICE


Press “Loader” button and select a “.zip” file generate from vt3.

If the MD5 of each file in file.zip is different from what is loaded on device the sw are loaded on unit otherwise no.

During Loaded if you want stop tool press “Abort” button.

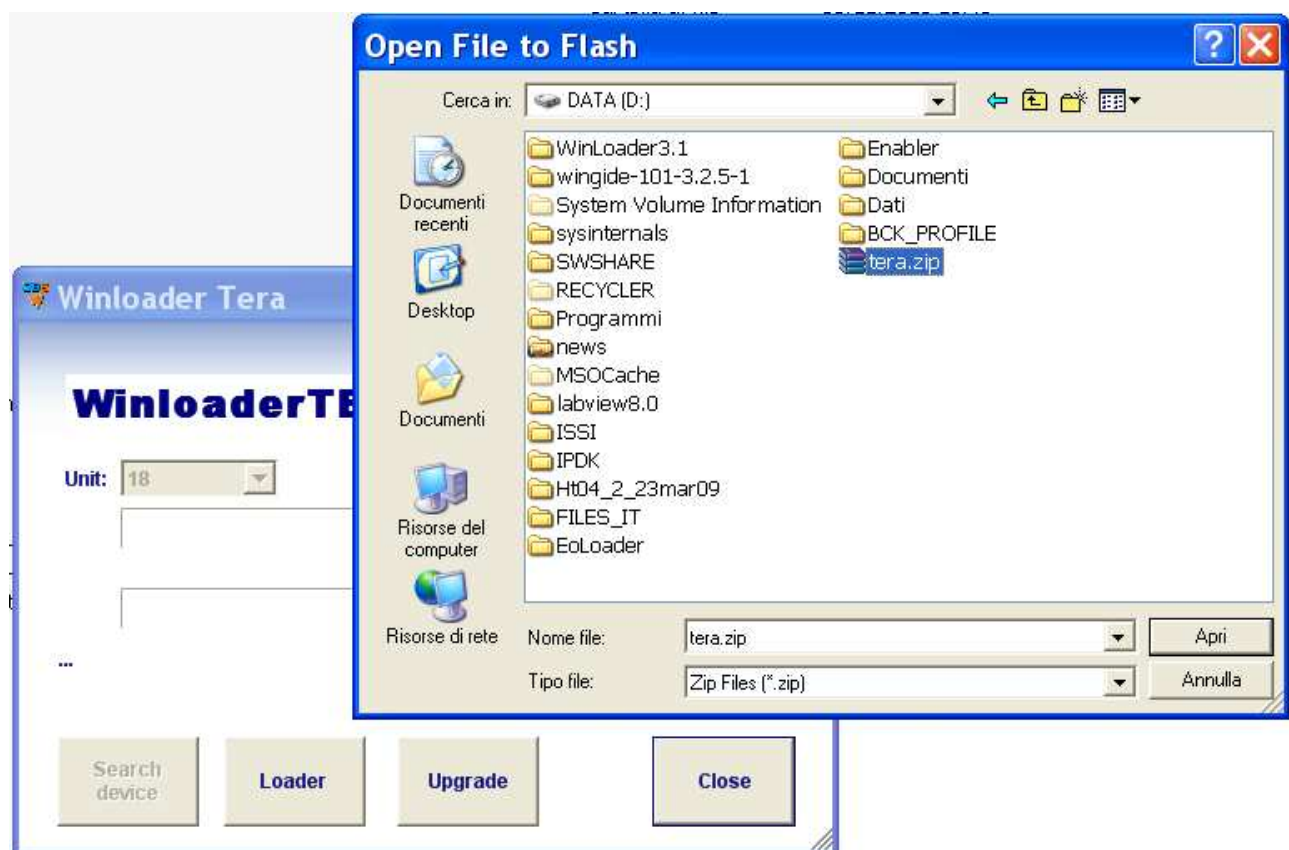

Rev	Date	ObjectOggetto	Developed	Approved
00	15/11/2010	Emissione	R&D Dept.– Picco S.	Resp. R&D – Flamini D.

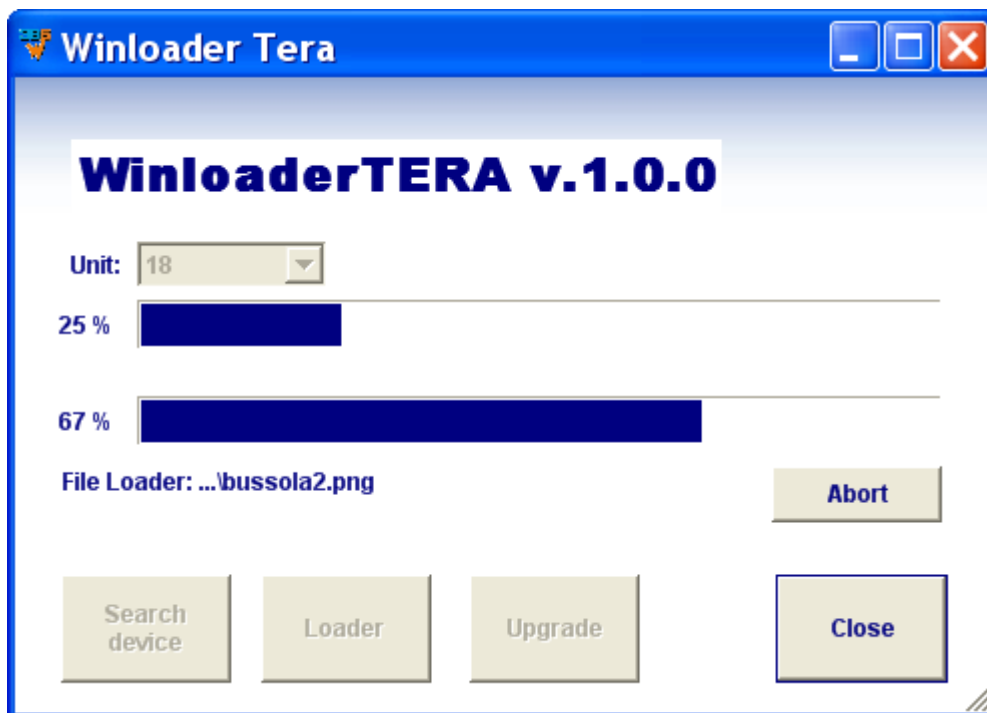

6 UPGRADE DEVICE

Press "Upgrade" button and select a particular ".zip" contains firmware upgrade.

Rev	Date	ObjectOggetto	Developed	Approved
00	15/11/2010	Emissione	R&D Dept.– Picco S.	Resp. R&D – Flamini D.

		Rev.00
	WinLoader Tera	Page 11 of 11

7 CLOSE TOOL

Press “close” Button

Rev	Date	ObjectOggetto	Developed	Approved
00	15/11/2010	Emissione	R&D Dept.– Picco S.	Resp. R&D – Flamini D.