

	Toyota Landcruiser 100 series SUV Interface Agreement	Effective Date /2023	Doc Number SPA-ENG-SOW-230001
		Doc Type Scope of Works	Revision 1

SCOPE OF WORKS:

Toyota Landcruiser 100 series SUV



	Toyota Landcruiser 100 series SUV Interface Agreement	Effective Date /2023	Doc Number SPA-ENG-SOW-230001
		Doc Type Scope of Works	Revision 1

Overview

1. Project Background and Description

This document will define the agreed equipment, functionality and responsibilities of Strata and Newcrest Cadia to ensure supply and installation of the HazardAvert PDS performs as expected.

2. Purpose of HazardAvert PDS

- To provide a warning to personnel entering the “No Go” zones around the machine/vehicle
- To warn the machine operator of personnel entering the “No Go” zones around the machine/vehicle
- To activate the HazardAvert System when the machine is moving and de-activate the system when the machine is not moving

3. Installation Scope

Equipment hardware requirements

The Toyota Landcruiser 100 series SUV will be fitted with a single Generator proximity system consisting of the following equipment:

- 1 x HA-SHR-IM-01: 12/24 Volt Controller Box.
- 1 x HA-SHR-PM-01: Proximity Module (generator).
- 1 x HA-SHR-DSPLAY-01: 4.3” CANbus display
- 1 x Silent Zone Loop
- Cabling and consumables for all the above equipment

Excluded is the bracket required for the Generator, which will be provided by Newcrest Cadia

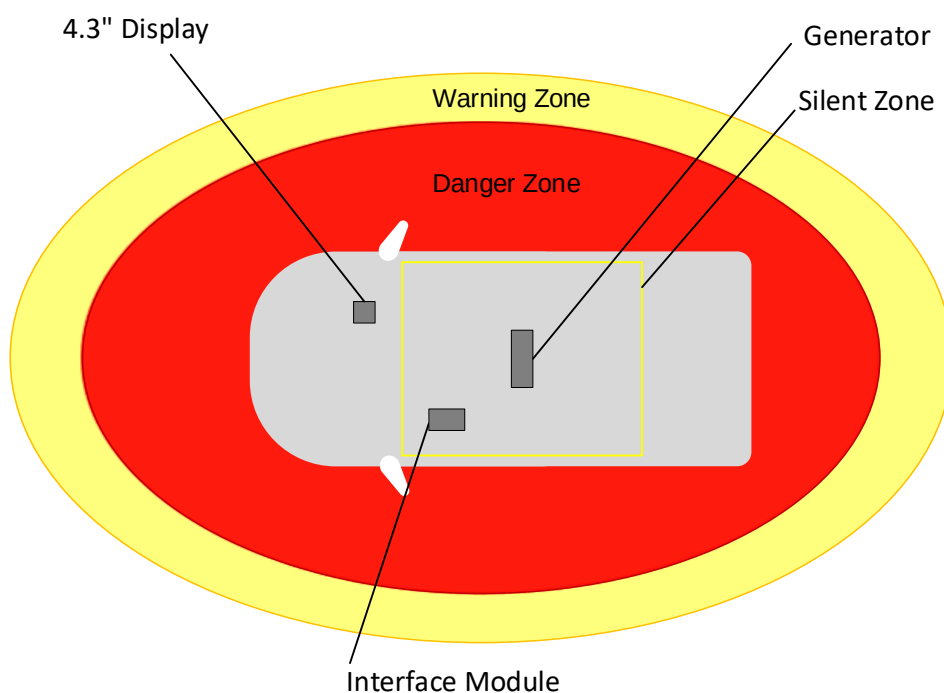


Figure 1: General arrangement of HA Equipment Layout and zones

	Toyota Landcruiser 100 series SUV Interface Agreement	Effective Date /2023	Doc Number SPA-ENG-SOW-230001
		Doc Type Scope of Works	Revision 1

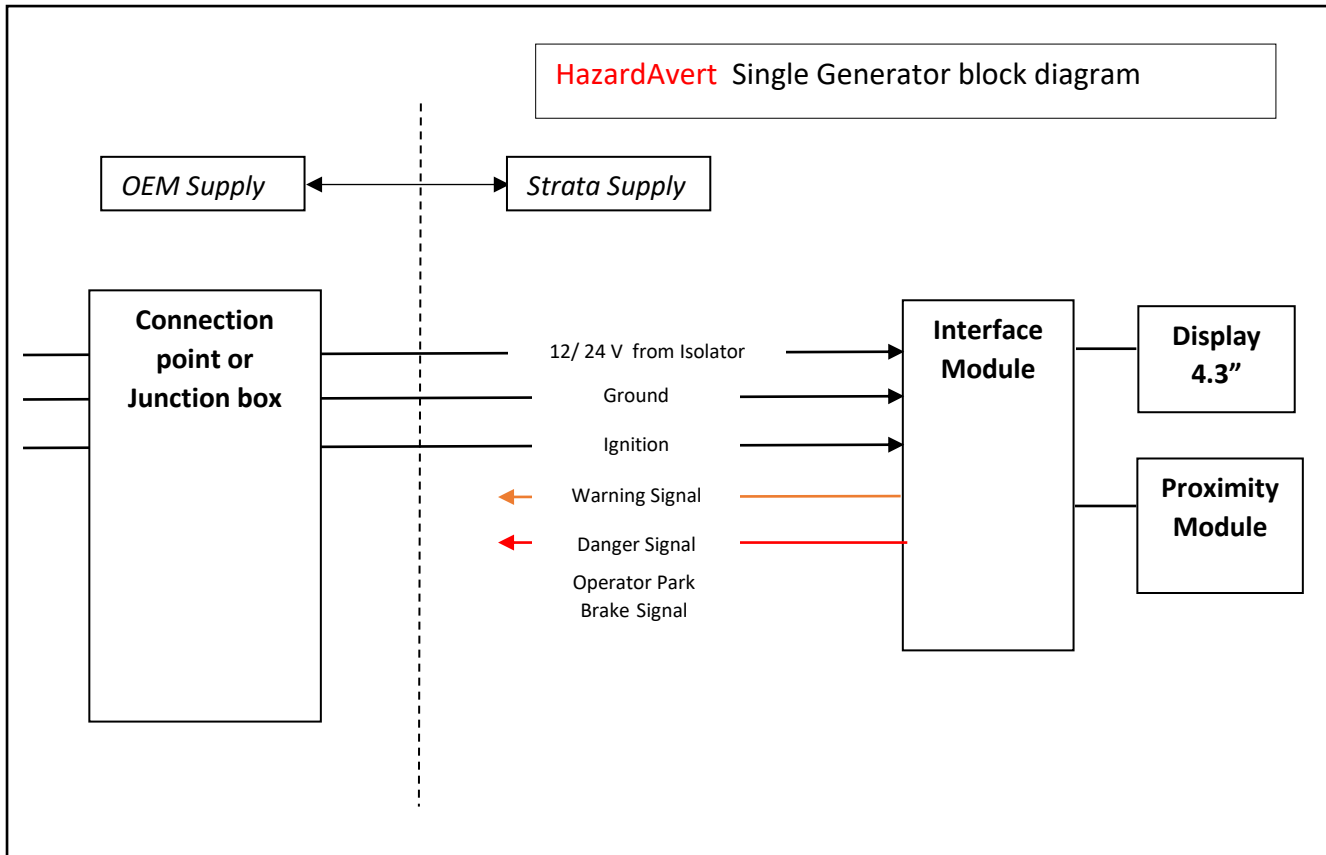


Figure 2: Hardware and connection layout

Definition of Danger Zone

HazardAvert™ establishes an electromagnetic marker field or zone around machinery using a device called the generator. One or more generators may be fitted onto machinery and create fields designated as the ‘WARNING ZONE’ and ‘DANGER ZONE’. This marker field can encompass the entire machine and its turning radius, or be specific to certain areas. Personnel wear a Personal Alarm Device (PAD) which detects and measures the magnetic marker field to determine their proximity to the machine, and alert them of possible danger to their safety. The warning buzzer emits audible and visual alarms. The generator also incorporates a vehicle alarm device (VAD) which detects the electromagnetic fields of other machinery to help avoid vehicle collision.



Figure 1. Generator Magnetic Field Detection

	Toyota Landcruiser 100 series SUV Interface Agreement	Effective Date /2023	Doc Number SPA-ENG-SOW-230001
		Doc Type Scope of Works	Revision 1

Definition of Activate Fields Signal

The magnetic marker field described above is only required when the machine's park brake is released. HazardAvert is not required to alarm when the machine is considered to be safe.

The activate fields signal are provided to the HazardAvert system when:

- An input from the Operator Park Brake provides a +12/24V signal to the HA Controller unit when the Operator Park Brake is in de-activated and the ignition is on.

Note: A risk assessment should be completed to ensure the above definition of a safe machine state is adequate for the customer's specific site requirements.


Installation notes

Caution:

- Consult fleet supervisor prior to drilling into vehicle/machine
- No modifications are to be made on ROPs (Roll over Protection structure) or on FOPs (Falling object Protective structures)
- Follow all existing OEM cable routes. Do not cable tie onto or follow the fire suppression system on the machine. Do not route or secure to hydraulic hoses. Keep cable routes away from potential impact, rub points and moving parts.
- Magnets with ladders are acceptable where needed for cable routes
- Apply Densyl tape to all connections outside of the cab
- All external cabling must be run in corrugated conduit (no split conduit). Adhesive heat shrink to be applied on the Generator cables to prevent water ingress into the conduit, at both conduit start and end points.
- All cables installed internal (inside cab) must run inside finger trap / guard flex
- Cables must be labelled as per MDG15 standard
- Ensure all bracketry is prepared before installation
- Do not impeded driver's vision with placement of screen

	Toyota Landcruiser 100 series SUV Interface Agreement	Effective Date /2023	Doc Number SPA-ENG-SOW-230001
		Doc Type Scope of Works	Revision 1

Toyota Land Cruiser 100 series SUV

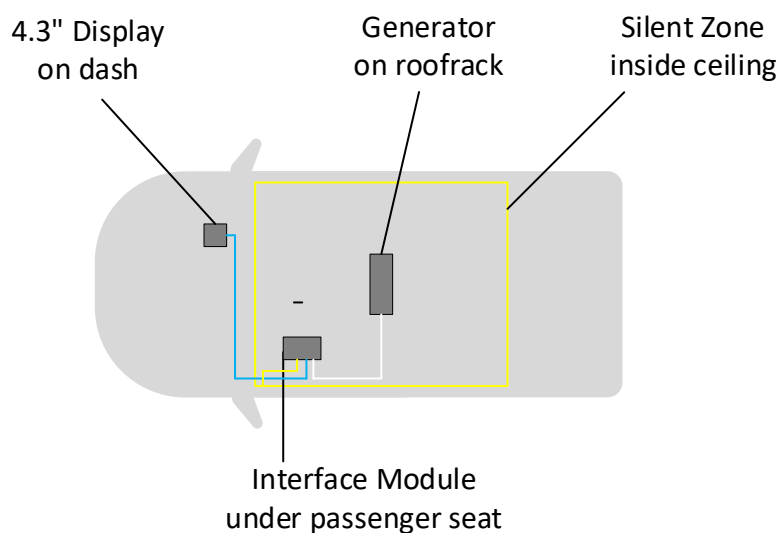

Location of Interface Module (IM)

- Mount the interface module underneath the passenger seat

Note: the seat will have to be removed during installation, to mount IM and to run other cables. Care must be taking not to pinch cables during seat re-fitment. The Deutsch plugs must face forward and consider rear passenger feet/boot positions during placement of IM.



	Toyota Landcruiser 100 series SUV Interface Agreement	Effective Date /2023	Doc Number SPA-ENG-SOW-230001
		Doc Type Scope of Works	Revision 1



Location of Proximity Module (PM)

- Mount the Proximity Module on a bracket in the centre of the roof rack. Bracket must have 4 x M6 holes drilled and tapped.
- Proximity Module to be mounted on rubber standoffs, with Amphenol connector end facing the left-hand side of the vehicle. Cable to be inserted in corrugated conduits (non-split) and waterproofed by securing adhesive heat shrink where conduit starts and ends
- Drill roof top and insert compression gland – make sure there is sufficient silicon applied to prevent leakage and rust
- Run cable inside ceiling toward the floor and underneath the passenger seat



	Toyota Landcruiser 100 series SUV Interface Agreement	Effective Date /2023	Doc Number SPA-ENG-SOW-230001
		Doc Type Scope of Works	Revision 1


Location of the 4.3" CANbus display

- Mount the display on right hand side on the dash
- Drill a 20mm hole behind screen bracket and insert compression gland
- Run cable through compression gland and underneath dash towards the left-hand side, then down to the floor and towards the passenger seat



Location of Silent Zone Cable

- Use short SZ coil secured next to IM
- Alternatively run a SZ loop around the cab, underneath the side covers of the floor

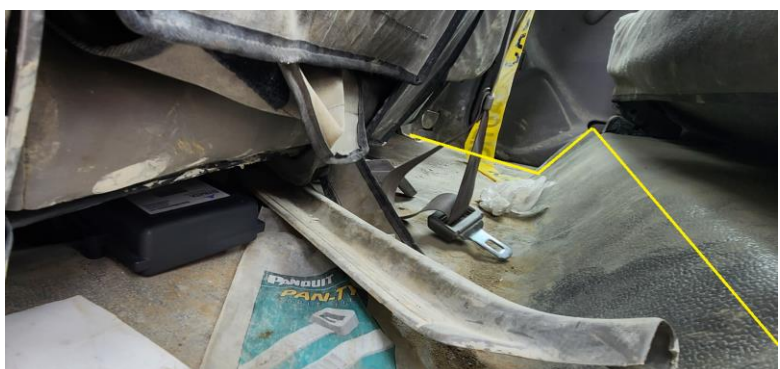

	Toyota Landcruiser 100 series SUV Interface Agreement	Effective Date /2023	Doc Number SPA-ENG-SOW-230001
		Doc Type Scope of Works	Revision 1

		
<u>Power connection</u> • DC supply can be taken from Newtrax old supply. Make sure power is triggered from ignition (IGN) • Run power cable and IGN following existing OEM cables • Follow cables into cab and run safely to the IM underneath the passenger seat		
<u>Park brake Sensor</u> • Connect to GND/12VDC of park brake sensor. Talk to workshop auto sparky to obtain input signal type and location. • Run signal cable to interface module		