
# DUB-1 THE PANEL

Every button and knob, and where each page is, as of 1.4.0 (build c1fdc41). FM-1 firmware.

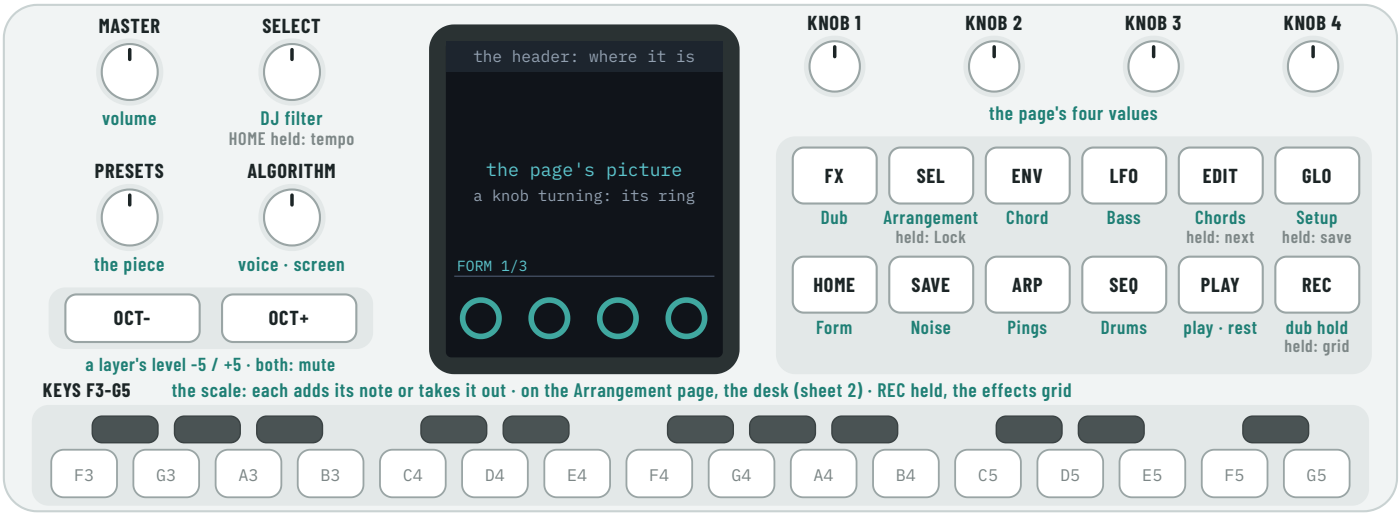


## 1 · WHERE EACH PAGE IS `a tap, again, again`

Each press the next page, then the first again; the button lit, blinking past its first page (Song, Song mode: steady). The page's name and place (2/4): above the knobs.

| | |
|---|---|
| HOME | **Form** › Song › Key (tempo, root, mode, swing) |
| ENV | **Chord** › Chord voice › Chord FM › Chord LFO |
| ARP | **Pings** › Pings voice › Pings FM |
| LFO | **Bass** › Bass voice › Bass FM |
| SEQ | **Drums** › Kick › Hats › Pattern (steps: white keys) |
| SAVE | **Noise** › Noise voice › Noise LFO |
| FX | **Dub** › Echo |
| GLO | **Setup** › Song mode (Endless, Song, Set; Values) |
| EDIT | **Chords** (the keys: the slot's root) › Walk |
| SEL | **Arrangement**: one page, it stays; the keys the desk (sheet 2) |

## 2 · A TAP `PLAY · REC · OCT · keys`

| | |
|---|---|
| PLAY | Play or rest, as you press it; in Song or Set mode, a song from its intro. Lit while playing. |
| REC | **Dub hold**: the echo repeats what it holds, the chord holds, the rest plays on. Again: let go. Lit while on. |
| OCT- / OCT+ | On a layer's pages and a channel strip: its level, 5 a press; held, it goes on. Elsewhere nothing. |
| KEYS | The scale: a key adds its note or takes it out (the root stays; three notes at least); lit, the notes in it. MIDI notes in, channel 1, the same. |

## 3 · THE ENCODERS

| | |
|---|---|
| SELECT | The **DJ filter**, every page: left shut (a low-pass), right open (a high-pass). Not saved.<br>`Shut 100 · Off, the notch · Open 100` |
| ALGORITHM | A layer's pages: its **voice** (the drums: the kit). Noise: its character. LFO pages: the Target. Chords, Walk: the walk. Elsewhere: the screen's picture. |
| PRESETS | The **piece**, one of eight, each as you left it. |

## 4 · TWO AT ONCE

| | |
|---|---|
| HOME + PLAY | Playing: the **outro** from the next phrase, in any Song mode. Again: back to the main. |
| HOME + SELECT | The **tempo**, from any page.<br>`40 to 140` |
| OCT- + OCT+ | Let go within a second: the layer **muted** or back, its level kept (the drums: kick and hats). Held 5 s: the update mode. Held at power-on: the panel's calibration. |

## 5 · HELD, HELD ON `0.5 s · 1.5 s`

| | |
|---|---|
| ENV ARP LFO SEQ<br>FX · SAVE | Held: a **nudge**, a few sound values a step, pulled back to the recipe; the page that moved most comes up. Held on: a **shake**, another voice (the drums: a kit), every value a big step; the bass a new groove too. FX: the space (shake: a new echo time); SAVE: the noise. |
| HOME | Held on: **shake all**, the chord, pings, bass, drums and noise at once. |
| EDIT | Held, let go: the **next chord** (on the bar while playing). Held on: **new chords**, the walk's walked again (yours, the gaps and the one playing kept). |
| GLO | Held, let go: **saves** all eight pieces. Held on: the piece back to its recipe (RESET, not saved). |
| SEL | Held, let go, any page: **Lock** on or off; each phrase keeps the kick, the groove and the plan. |
| REC | Held 0.3 s: the **effects grid** on the white keys, each while its key is held (even after REC). The knobs rest. |

## 6 · THE KNOBS `KNOB 1–4`

| | |
|---|---|
| STEPS | A few clicks are single steps; a quick turn speeds up, half a turn sweeping 0–100. A switch: one place a click. |
| NOTCH | Centred on 0 (a tick over the ring): it stops at 0 on its way through; three clicks on leave it. |
| BIG RING | While one turns: its value large in the middle, its name and what it does (not on Chords, Pattern). |
| NUMBERS | A ring's number shows 1.5 s as its page opens; units and words always. **Values: Always** (Song mode) keeps them. |
| GREY | Does nothing there: FM on a voice not FM (Colour, Bite still work); Ratio on two operators. |

### TAP · HELD · HELD ON

A tap: under 0.5 s. Held: 0.5 s (REC: 0.3 s). Held on: 1.5 s, nothing turned meanwhile.

### LEAVING A PAGE

Another page's button. From the Arrangement page, any (HOME: Form); the mutes and solos stay.