
DUB-1 CHORDS

ENV and EDIT: the chord's part, the eight slots, the walk and the key, as of 1.4.0 (build 6cfdcac). FM-1 firmware.



Chords (EDIT): slot 1 outlined and playing; its notes under the slots, the root dotted.

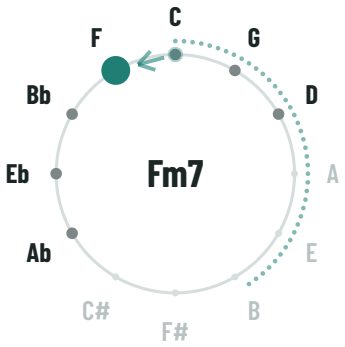

THE WALK PAGE'S CIRCLE OF FIFTHS

THE CIRCLE
C at the top, a fifth a step clockwise: a neighbour is a close chord, across it a far one

THE KEY
Its notes bright, the rest faint (here F Dorian, Basic's)

THE ROOT
The chord's root: a dot, white with each kick (red in dub hold)

A CHANGE
An arrow from the root before, fading over four bars

THE DOTS
On the way to the next chord, filling as Change runs out

1 · THE CHORD PAGE ENV · its part

DENSITY KNOB 1	Stabs a bar, one to six, each count its own Euclidean figure off the beat. `1 one · 3 three · 6 six (a click a count)`
THROWS KNOB 2	How often a stab is thrown into the echo (its dry 6 dB down, the feedback up); more in a Break. `0 none, a fill's last still · 50 ~1 in 8 · 100 ~1 in 3`
CHANGE KNOB 3	How long a chord lasts; it moves at a bar's start. `2 · 4 · 8 · 16 · 32 · 64 bars · Hold (EDIT only)`
VARY KNOB 4	The stabs' turns, more or less than Form's Vary (sheet 4). `Hold · 0 as Form's · +50`

2 · THE CHORDS PAGE EDIT, a tap

The eight coming: **teal** the walk's (degrees: they follow the key), white yours, **(HOLDS)** a gap (the chord before goes on).

SLOT KNOB 1	The slot you're writing, 1–8. The one playing, edited: heard at once.
KEYS	Its root, any note. A walk's chord becomes yours, kind and type kept; a gap, a minor chord.
CHORD · TYPE KNOB 2 · 3	Its kind (**Empty**: a gap) and its type (8).
PLAY KNOB 4	**Endless**: slot 1 plays; at each change all move up a slot and the walk writes slot 8. **Loop**: the slots in turn, round after the last that isn't a gap; nothing new written.
ALGORITHM	The walk (5): the teal ones walked again at once.

3 · EDIT tap · held · held on

A TAP	The Chords page; again the Walk page; again back. Any page's button leaves.
HELD 0.5 s	Let go: the **next chord**, at the next bar (resting: at once; in dub hold: when it ends).
HELD ON 1.5 s	**New chords**: the walk's slots walked again; yours, the gaps and the one playing kept.

4 · THE WALK PAGE EDIT again

WALK KNOB 1	Home, Wander or Free: how far it roams (also ALGORITHM).
CHANGE KNOB 2	The Chord page's Change, the same setting.
AT THE LEFT	The chord, the walk (or LOOP 2/8), the eight slots.

5 · HOME, WANDER, FREE

The walk's next chord, in a seven-note mode. Never the same one again, never one with a diminished fifth.

	BACK HOME	AWAY, IT LEANS ON
HOME	2 in 3	IV, then VII, V and VI
WANDER	1 in 3	IV, VI, V, VII: wider
FREE	1 in 7	all alike

Wander and Free rarely step straight back. A five-note mode: every degree alike. Every piece starts on Wander.

6 · THE KEY PAGE HOME, a third time

TEMPO KNOB 1	Beats a minute; also HOME held + SELECT, any page. `40 – 140`
ROOT KNOB 2	The key's root: the scale and the chord move with it. `C – B`
MODE KNOB 3	The scale (8), loaded whole. A key played adds or takes out a note: **Custom**.
SWING KNOB 4	The off semicorcheas (16ths) late, everything on them. `50% straight – 70%`

7 · THE WALK'S VOICING

SEVEN NOTES	Root, fifth, seventh, tenth (an open seventh); now and then, with Vary, a ninth without its fifth.
FIVE NOTES	Stacked in fourths, three notes. The Japanese modes' half-steps never side by side: the upper an octave up.

8 · KINDS, TYPES, MODES KNOB 2 · KNOB 3 · Mode

CHORD	NOTES
MAJOR	1 3 5
MINOR	1 b3 5
SUS2	1 2 5
SUS4	1 4 5
DIM	1 b3 b5
AUG	1 3 ♯5

TYPE	PLAYED, LOW TO HIGH
TRIAD	1 5 8 10
6	1 5 6 10
7	1 5 b7 10
MAJ7	1 5 7 10
9 · 11	1 b7 9 10 · 1 b7 10 11
ADD9	1 5 9 10

MODE	NOTES
MINOR	1 2 b3 4 5 b6 b7
MAJOR	1 2 3 4 5 6 7
DORIAN	1 2 b3 4 5 6 b7
MIXOLYD.	1 2 3 4 5 6 b7
PENT MIN	1 b3 4 5 b7
PENT MAJ	1 2 3 5 6
PHRYGIAN	1 b2 b3 4 5 b6 b7

MODE	NOTES
LYDIAN	1 2 3 ♯4 5 6 7
HIRAJOSH	1 2 b3 5 b6
IN	1 b2 4 5 b6
IWATO	1 b2 4 b5 b7
YO	1 2 4 5 6
INSEN	1 b2 4 5 b7
CUSTOM	the keys' own

8 and 10: the root and the third an octave up. Dim's 7: a diminished seventh. On a sus, a type that lands on its note takes the fifth an octave up instead. The modes in the knob's order. Shown as Fm7, AbM7, C7sus4.