DUB-1 DRUMS

SEQ: the kick, the hats, the rim and the clap, as of 1.4.0 (build 3c00820). FM-1 firmware.



Drums 1/4: Hits' ring in segments; TIGHT, the kit.



Kick 2/4: Tune, Length, Punch, Rumble.



Hats 3/4: Level, Tone, Length.



Pattern 4/4: five lanes; a key took it over.



Hits 55: Offbeats, the four zones round the ring.

1 · THE DRUMS PAGE SEQ · its part

KICK KNOB 1
The kick's shape, a switch: **Four** (four on the floor), **Ghost** (two and four 10 dB down), **Half** (one and three), **One** (the downbeat). From the next bar.
`Four · Ghost · Half · One`

HITS KNOB 2
How busy the hats are, in four zones (card 3).
`0 no hats · 100 the shaker's twelve`

VARY KNOB 3
The kick's and hats' changes, more or less than Form's Vary. Far left **Hold**: the kick and the shaker kept (a section still brings its own kick).
`Hold · 0 as Form's · +50`

KNOB 4
Empty. Duck is the Arrangement page's; Swing the Key page's.

2 · HOW THE KICK PLAYS a shape a phrase

ITS NOTE
The key's root, F1 to B1 (44-62 Hz); below F, its fifth. One note a piece.

HELD
A shape for 2 to 6 phrases (fewer as Vary rises), then drawn again round the knob: further from it with Vary up. On Four, always four in Full and Groove.

SECTIONS
A Thin a step sparser; out in a Break and a fill's second half. Back whole after a Break.

OPENING
Four for two phrases, then down to the knob over six (till it's turned).

3 · HITS' ZONES KNOB 2, in segments

The shaker grows through all four, 0 to 12 steps, the last faded in. Said: "Hits 55, Offbeats".

SHAKER 0 – 14
"The shaker alone, a step more as it turns"; at 0: "No hats at all". The steps before the beats first.

OPEN HAT 15 – 39
"The open hat joins on one and three's offbeat": two a bar.

OFFBEATS 40 – 69
"The open hat on every offbeat": the four "ands", the style's figure.

RIM 70 – 100
"The rim joins on two and four: the dub snare", a short tok thrown into the echo.

The looseness rests some, the same each A bar; a busy B bar plays all. A Thin or Break: no shaker, no rim.

4 · THE KICK PAGE SEQ again

TUNE KNOB 1
The kick's pitch, from the key's note.
`-12 · 0 · +12 semitones`

LENGTH KNOB 2
How long it booms, around the kit's.
`-50 x0.44 · 0 · +50 x2.3`

PUNCH KNOB 3
Its click and its start pitch.
`-50 no click · 0 the kit's · +50`

RUMBLE KNOB 4
A dark roar under the kick: unpitched, 32-80 Hz, mono; its tail 2.5 to 5 s, ducked by each kick, swelling to the next. The pieces 14 (Steppers) to 62 (Fog).
`0 none · 49 -14 dB · 100 -7 dB`

5 · THE HATS PAGE SEQ a third time

LEVEL KNOB 1
The shaker and the open hat against the kick: the Hats strip's Level.
`0 -12 dB · 50 the piece's · 100 +12 dB`

TONE KNOB 2
Dark to bright, round the piece's own.
`-50 the darkest · 0 · +50 the brightest`

LENGTH KNOB 3
How long they ring, around the kit's.
`-50 x0.44 · 0 · +50 x2.3`

6 · THE PATTERN PAGE SEQ a fourth time

KEYS
White 1-16 (F3-G5): the lane's steps, on or off. A black key held + a white: that step accented.

LANE KNOB 1
Kick, Shaker, Open, Rim, Clap.

ACCENT KNOB 2
How much quieter the other steps.
`0 alike · 50 · 100 -8 dB`


CHANCE KNOB 3
How likely the lane's steps play.
`0 – 100 % (the clap's 5)`

PLAY KNOB 4
Auto (generated) or **Pattern** (yours). The first key takes Auto's over. No looseness, no B bars; the sections still take lanes out.

7 · THE CLAP Auto

RARE
On two or four now and then: 3% + 5% x the drums' Vary a chance, in Full and Groove. Three bursts and a tail, into the plate.

8 · THE KICK'S SHAPES · THE HATS, A VALUE IN EACH ZONE before the looseness' rests

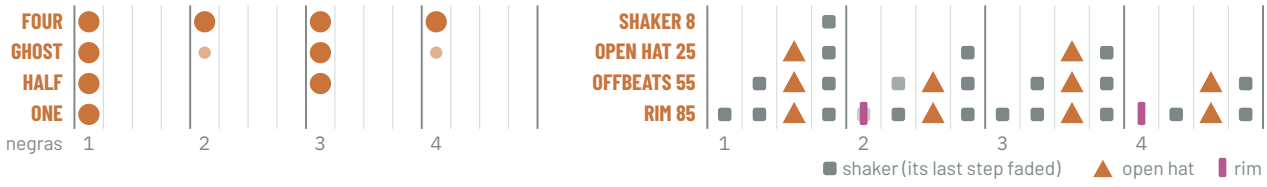

THE KIT

ALGORITHM, any drums page: Tight, Deep (long, 808-ish), Punch (short, hard), Soft (a muffled thump), Dusty (darker, noisier hats).

LEVEL, STRIPS, SEQ HELD

OCT- / OCT+: the whole kit. SEL: white 4 (B3) the Kick strip, white 5 (C4) the Hats'; black 5 (D#4), black 4 (C#4): solo, throw. SEQ held: a nudge; held on: another kit.