Alexander's
Contract Services, Inc.

DZ Reader

Quick reference guide.

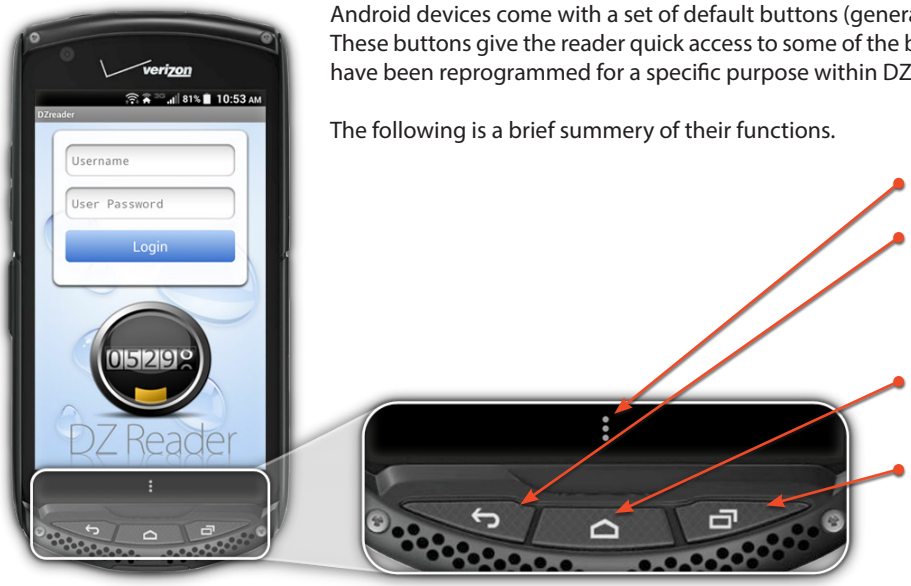

Android devices come with a set of default buttons (generally directly below the screen). These buttons give the reader quick access to some of the basic Android functions. Some of these menu items have been reprogrammed for a specific purpose within DZ Reader.

The following is a brief summery of their functions.

Menu: This will pop up the in-app menu.

Back: When in DZ Reader, this button will move back to the last activity the reader was on (IE: going from the Search screen back to the Read screen).

Home: This button will always take the reader to the Android Home screen.

Recent Apps: Used to return to DZReader after having used the Home Button to exit the App.

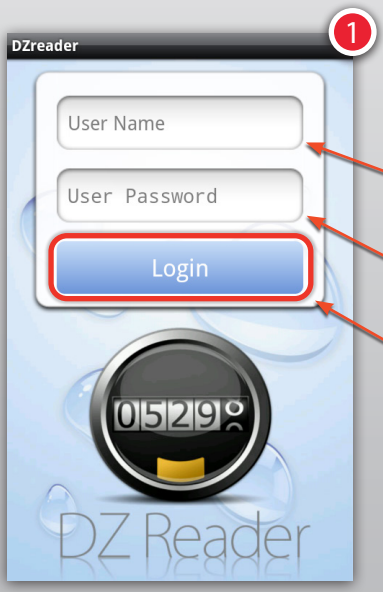

Login Screen

When launching DZReader for the first time, you will arrive on the Login screen.

Tap the "User Name" box and enter your user name.

Tap the "Password" box and enter your password.

Tap "Login".

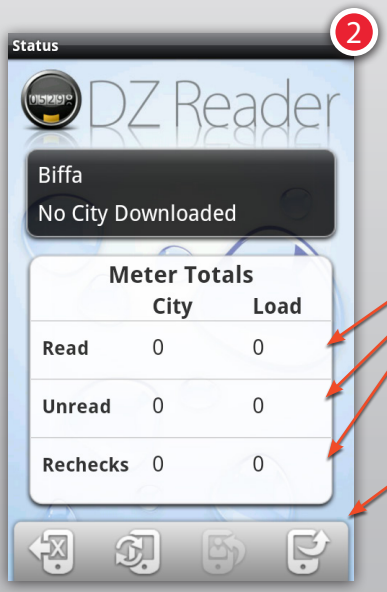

Status Screen - Basics

Once logged in, the reader will land on the Status screen. It is layed out as follows.

Top box:
- User Name and Current city

Meter Totals:
- Total Read meters
- Total Unread meters
- Total Recheck meters

Quicklink Buttons
- Exit/Logout
- Sync
- Load manager (if applicable)
- Send Reads

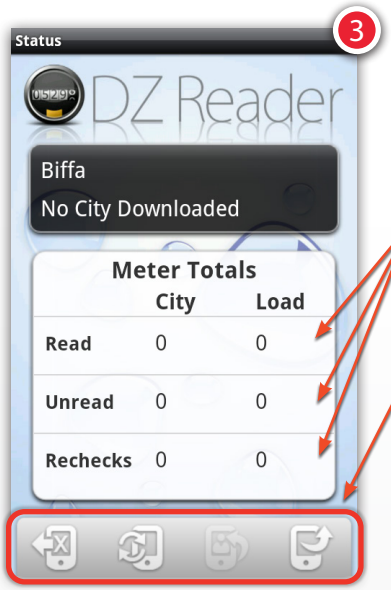

Status Screen - Quicklink buttons

Jump buttons:
The Read, Unread, and Recheck rows are also "Jump" buttons.

Read: shows all meters
Unread: shows unread meters
Recheck: shows rechecks.

Quicklink Buttons:
1. Exit/Log out.
2. Sync/Select City.
3. Load Manager (if applicable).
4. Send Reads; will send all reads, without performing a full sync.

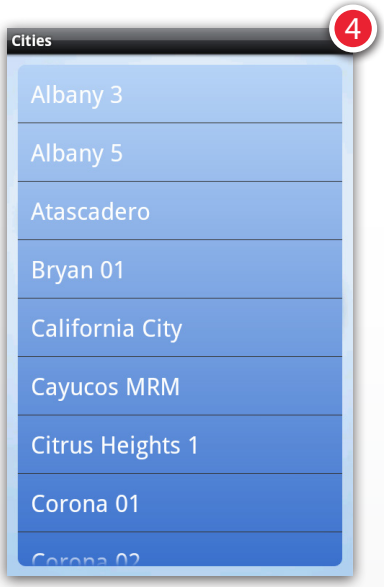

Select City

Start by clicking the Sync button, choose the desired city by simply tapping its name. If the reader can only access 1 city, it will sync automatically.

DZreader will automatically download any/all routes assigned to the particular reader within the chosen city.

It is good practice to only assign a reader the routes he/she will be reading that day, and not assign them the entire city.

Doing so will greatly affect Sync time.

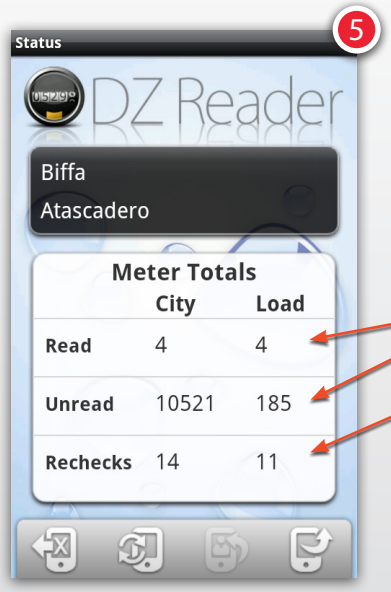

Status Screen - With City loaded

Once the reader has loaded a city, this Status screen will populate with the specifics of the reader's load.

From this screen the reader can choose the type of meter to be read. By simply tapping either:

Read (shows all meters)
Unread (shows unread meters)
or
Rechecks (shows rechecks)

The reader can quickly start reading.

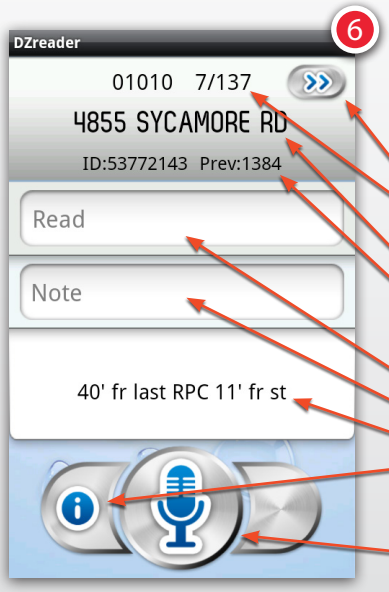

Read Screen - Basics

On the Read Screen, the reader will be shown data for the current meter.

- Next/Previous route button.
- Route number and Meter count for that route.
- Meter Address.
- Meter ID and Previous Read (if the reader has permission to see them).
- Read Box.
- Note Box.
- Meter Location note.
- Info button (brings up additional info on current meter/location).
- Read by Voice button.

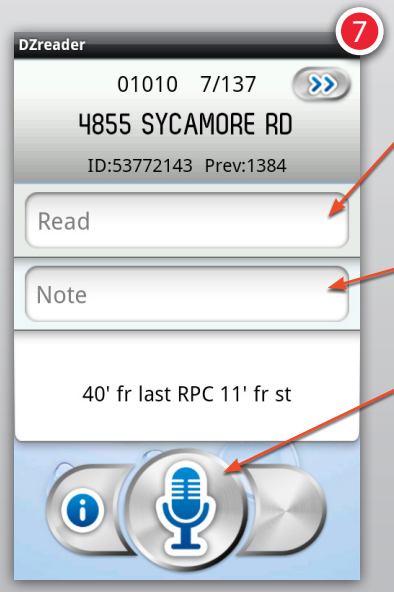

Read Screen - Basics Cont.

To enter a read, simply tap the read box. A keypad will pop up allowing a read to be entered. (See #9)

Note works the same way. To leave a Note, simply tap the Notes box. (See #11)

To read meters "Hands Free" simply tap the "Voice Read" button and speak the read.

Note: Voice Reading greatly affects battery life. It also requires an active internet connection (3G or WiFi).

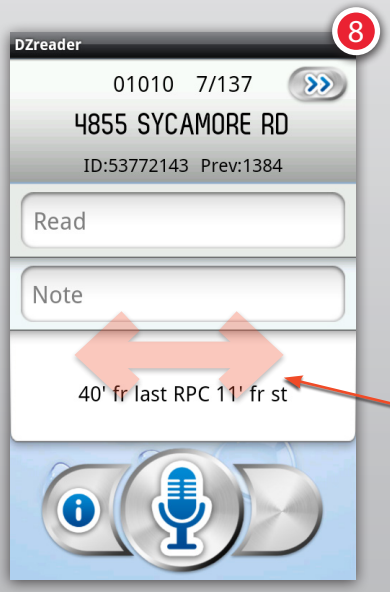

Status Screen - Cont.

Depending on the Reader and City's permissions, once a read is entered, it may require additional actions:

- If the read is out of range, ID Verification may be required. (See#10)
- A second read may also be required.
- A photo may also need to be taken.

Once a read is validated and accepted, the screen should "Auto-Next" to the next meter. Or the reader can swipe accrossed the screen to move between meters.

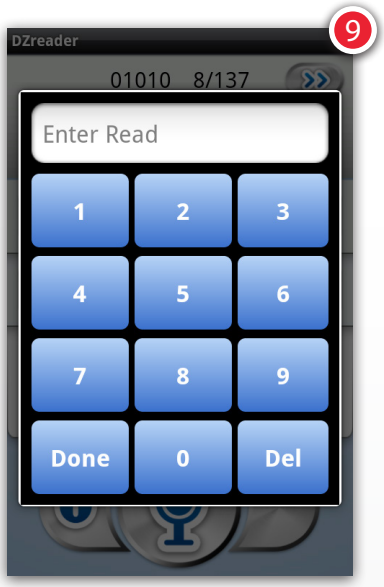

Read Screen - Entering a read

Keypad for entering a read

Simply type in the read and tap "Done".

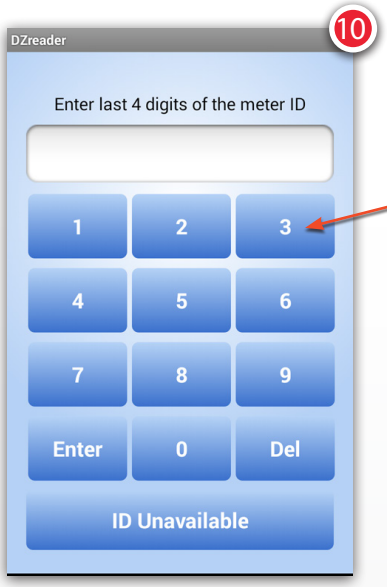

Notes Screen

If a read is out of range and the readers are required to perform an "ID unlock", DZReader will ask the reader to enter the last 4 digits of the meter ID (or as many digits as possible).

The ID entered by the reader must match the ID on record.

Taking a Photo

If the read was out of range and the city required a Photo to be taken, the camera view will apear alowing the user to take a photo.

The camera can be zoomed ising the + and - button under the shutter button.

When the reader is satisfied with the alignment and zoom, they simply tap the Shutter button to take the photo.

Saving a Photo

Once the photo is taken, the reader is presented with a few options.

Note: This will save the photo and take the reader to the Note screen.
Comment: This will save the photo and take the reader to the comment screen.
Retake: This allows the reader to retake the photo, this can be done as many times as necessary to get an acceptable photo.
Save: This saves the photo.

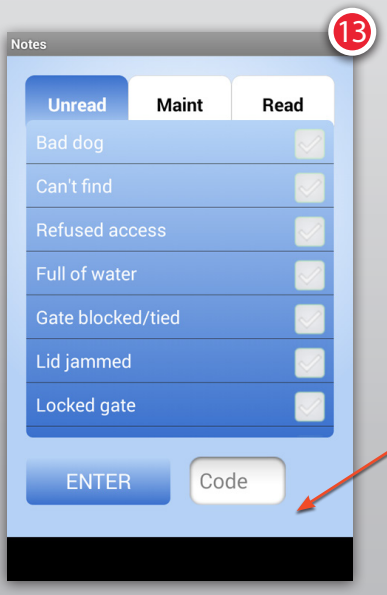

Notes Screen

If needing to enter a Note, the reader will be take to the Note Screen.

The reader can then scroll through the list and tap the required note.

Or

If the reader knows the note code, they can simply tap the Code box and enter it with the Keypad.

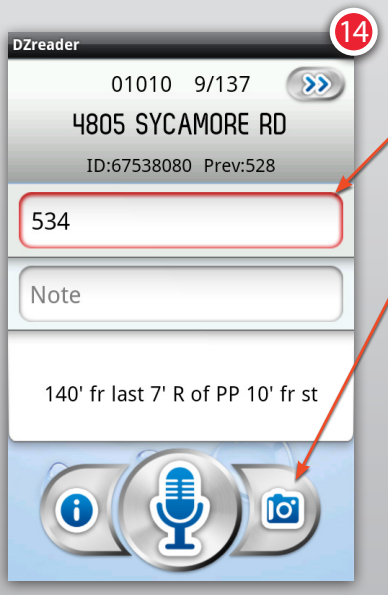

Read Screen - Read Meter

Once a meter is successfully read, the Read box outline will turn Red, showing that this is a "Read" meter.

Additionally, if the read was out of range and the city required a Photo be taken, the "Has Photo" Icon will appear here.

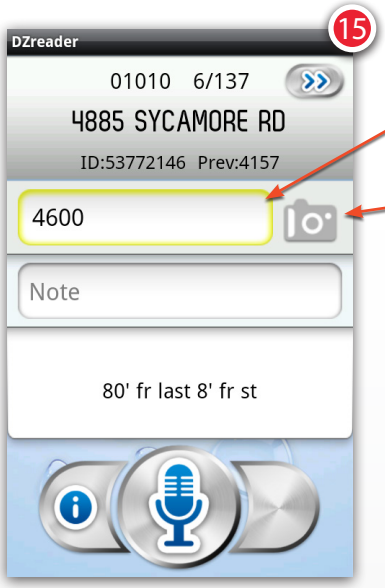

Read Screen - Recheck Meter

When performing Rechecks, the Read box will be highlighted in yellow denoting that this is a Recheck meter.

To Verify a recheck meter, simply tap the Verify icon to the right of the read box. The icon will vary depending on the action required.

1. Simply need Verification.
2. Needs Verification and a new Photo.
3. Needs verification of an existing Unread w/Note photo.

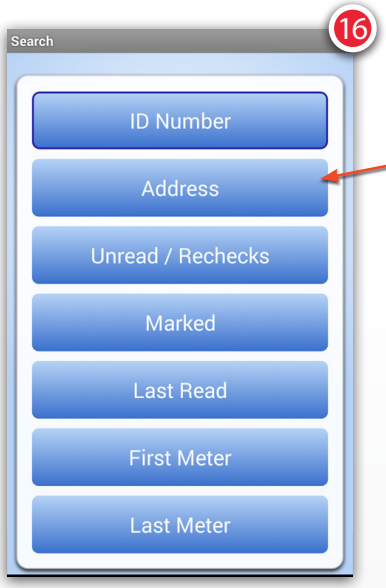

Search Screen

To reach the search screen, tap the Android Menu icon, and select Search.

The Reader can select to search in their current Route or entire Load

They can then search on the following criteria:

1. Search by ID number
2. Search by Address
3. Lists Unreads/Rechecks
4. Show Last Read meter.

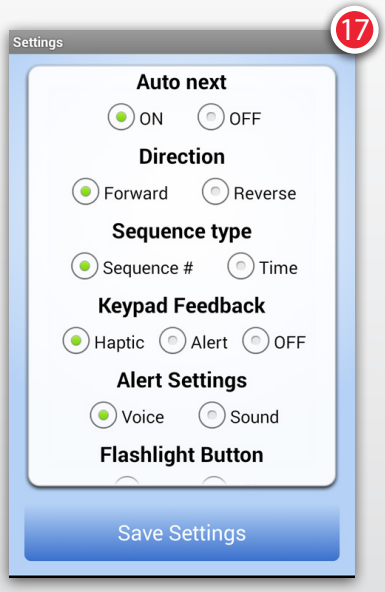

Settings Screen

The Settings screens allows the readers to choose certain application settings.

1. Auto Next.
2. Read Direction.
3. Sequence Type.
4. Keypad Feedback.
5. Alert Settings
6. Flshlight Button

After choosing settings tap "Save Settings".

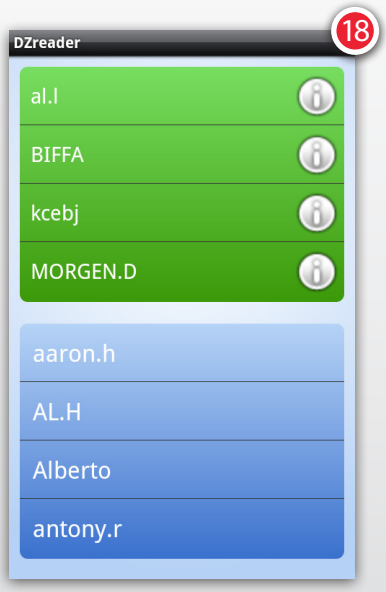

Load Manager - Select Reader

Load Manager provides Managers and Crew Leaders the ability to assign more routes to their Readers or modify their loads, in the field, in real time.

The top list shows Readers with routes already assigned.
The bottom list shows eligible Readers with no routes assigned.

Each Reader with assigned routes with have an "Info" button next to their name.
This button will show the Reader's routes and total assigned meters.

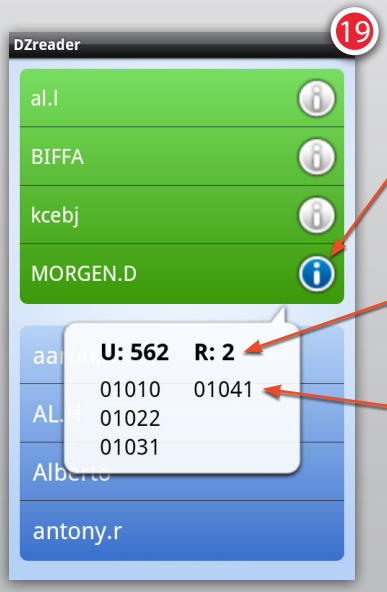

Load Manager - Info Bubble

When viewing the list of Assigned Readers, the user can tap the "Info" button to quickly see the routes and total meters assigned to that particular Reader.

This "Info Bubble" also shows a total count of Unread and Recheck meters.

It then lists the assosiated routes in numeric order.

To add routes to a specific reader, simply tap the Reader's name.

Load Manager - Route Assignment

After selecting a Reader, the Route Assignment scrren will be presented.

This screen displays the available Unread and Recheck routes.

To select a route, simply tap it. That route's check box will turn green showing that it is now assigned to this Reader.

The bottom will show the Total meter count.

When done selecting routes, tap "Assign Routes".

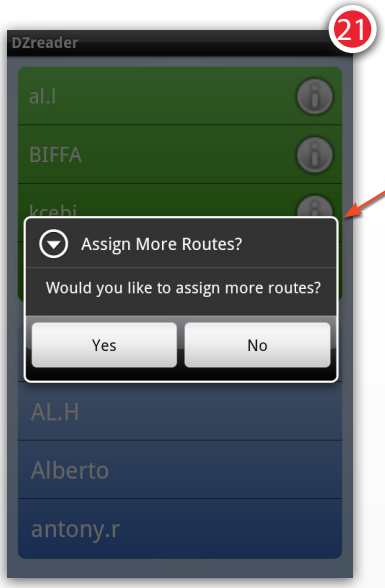

Load Manager - Assign More...

After completing route assignement for a Reader, the user will be returned to the Select Reader page, and asked if he wished to Assign More Routes to other Readers.

Tapping "Yes" will allow the user to select an other Reader and assign more or modify their routes.

Tapping "No" will return the user to the Status Page.

Note: If the reader has edited his own load, a sync will be performed automatically.

Freeform Comments

Readers can enter Freeform comments for each meter.

Simply tap Menu > Comments

The comment box will drop from the top bar and a keyboard will pop up at the bottom.

Readers can also take a photo relative to the comment being left.

Tap "X" to cancel or "Done" to save the comment.

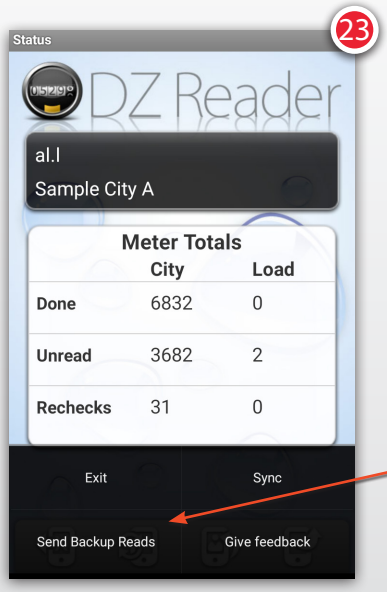

Status Screen - Send Backup Reads

In case of lost reads, or in case not all reads/data was transmitted durring a sync, DZReader has a built-in backup system.

The Backup are packaged as a daily bundle.

DZReader keeps up to 30 days of backups.

From the Status Screen:
1. Tap the Menu button
2. Select Send Backup Reads

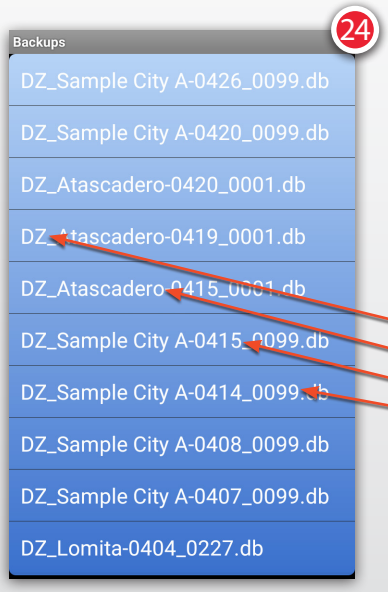

Backup Reads

From this screen the user has the ability to send backup reads from any day he has read.

DZReader keeps up to 30 days of backups.

The naming convention is as follows:
- DZ prefix
- City/Cycle Name
- Date (MMDD)
- DZ internal City ID

Simply pick the backup day you need to send.