

HCV Module for Vitocal Heat Pumps

Description

HCV (Home Control Viessmann) is an adapter that integrates Viessmann heat pumps

supporting E3 communication via CAN into a home control environment, without requiring advanced technical knowledge. In other words, apart from connecting the HCV module to the internal CAN bus and configuring Wi-Fi access, no further settings or expertise are required.

Once installed, data retrieved via the CAN bus can be viewed using any local web browser. If integration into a home control environment is not required, the installation process is complete at this stage. Current data can then be queried at any time by navigating to the address `hcv.local` in a browser.

Vitocal 250	
WarmwasserTemperatur	51.3
Aussentemperatur	17.9
MischerTemperatur	23.6
Wasserdruck	1.7
WaermetauscherTemperatur	9.7
StatusHeizungspumpe	on
WarmwasserUmwaelzpumpe	on
StatusMischerPumpe	on
RaumTemperaturSoll	23.0
AktuelleZeit	16:37
EnergieaufnahmeProTagInKWh	28.0
MischerStatus	on
VerfluessigerEinlassTemp.	18.1
RuecklaufTemperatur	25.4
LuefterEinsDrehzahl%	10
LuefterZweiDrehzahl%	15
VerdampferTemperatur	9.2
KompressorDrehzahl%	20
WaermepumpeStatus	on
AktuelleHeizleistungW	4603

Initial Installation and Reset

By default, the integrated Access Point mode is active, allowing the HCV module to be accessed via the address `192.168.1.1`. This state is indicated by a flashing red LED. The network named "HCV" will appear in your mobile phone's network settings and can be selected. Once connected, you can enter and save your local network's credentials

(SSID and password). To switch to standard Wi-Fi mode: disconnect the power supply (USB plug), flip switch 2 to the "OFF" position, and reconnect the power. Once the HCV module's status LED flashes green, the device can be accessed via the regular Wi-Fi network using the address `hcv.local`.



Note: Under the "Vitocal Data" menu item—which also serves as the HCV module's main page—the message "No device detected" is displayed if no valid CAN messages are detected. The display updates once at least one valid message is recognized. The messages in the "Vitocal 250" window are displayed in German.

In the event of an issue, the local network settings can be modified at any time by flipping switch 2 to the "ON" position and subsequently restarting the device.

MQTT Broker Configuration

The screenshot shows a web interface titled "Home Control Viessmann V:0.83". Below the header is a section titled "MQTT Konfiguration". It contains four input fields: "Broker IP" with the value "111.222.33.4", "Broker Port" with the value "1883", "Broker User" with the value "User", and "Broker Password" with a masked value "*****". At the bottom of this section is a blue button labeled "speichern".

Once a connection has been successfully established, the broker's address—and, if applicable, the username and password—can be entered via the "MQTT Broker Config" menu option. Saving the configuration data triggers a restart of the HCV module.

As soon as CAN messages valid for a Vitocal heat pump are detected, they also appear as MQTT messages on the local network or within the MQTT broker.

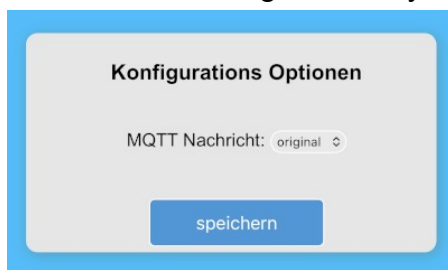
Note: The values (DIDs) currently defined in the Open3E datapoints are the ones transmitted.

We would like to take this opportunity to thank the creators of the document that served as the basis for the CAN messages for their work.

As previously mentioned, the CAN messages displayed in the browser are translated into German. The same setting can be applied to MQTT messages by selecting "German" under the "HCV Options" menu item. The advantage of the German version is that the MQTT messages are shorter.

MQTT Broker Message Format

The MQTT messages sent by the HCV module can be customized. Either the data IDs defined in the OpenE3datapoints document are used, or the German-language text strings are employed. This selection can be found under the "HCV Options" menu item.

The screenshot shows a web interface titled "Konfigurationen Optionen". It contains a dropdown menu labeled "MQTT Nachricht:" with the value "original" selected. At the bottom of this section is a blue button labeled "speichern".

CAN Bus Installation

The connection for detecting messages from Viessmann heat pumps is made via the internal CAN bus of the Vitocal indoor unit. Since this connection is already in use, the HCV module's sensor cable must be connected in parallel. Pay attention to the CAN bus polarity when doing so. The terminal on the HCV module corresponding to CAN High is marked in black.

Setting switch 1 to the "ON" position activates the CAN terminating resistor. This must be switched off when using the internal connection!

Note: The maximum length of the cable between the Vitocal connection and the HCV module connector must not exceed 10 meters.

It should also be noted that the CAN connection is galvanically isolated to prevent interference on both the CAN bus and the connected devices.

Status LED

LED flashes red: Access Point mode is selected via switch 2, or there is no connection to the configured local WLAN.

LED flashes red and green: Connection to the local WLAN established, but no CAN message detected.

LED flashes green: WLAN and CAN are active.

HCV Firmware Update

The HCV module's software can be updated via OTA (Over-the-Air), meaning directly over the network. Current versions are available on the embdes.com website. In the HCV menu, you will find this function under "Firmware update".



Support

For questions, errors, or suggestions, please write to info@embdes.com.

HCV MQTT Messages (e.g., in ioBroker)

If the MQTT messages are to be integrated into a home automation application, this can be done by simply selecting the corresponding objects in the ioBroker MQTT tree.

 mqtt			
 0			
 1054	1054	 folder	
 EVC	EVC	 state	variable
	mqtt client variable		
 HCV	HCV	 folder	
 vcal	vcal	 folder	
 AllengraSensor	HCV/vcal/AllengraSensor	 state	variable
	mqtt client variable		
 BackendConnectionStatus	HCV/vcal/BackendConnect	 state	variable
	mqtt client variable		
 CentralHeatingPump	HCV/vcal/CentralHeatingP	 state	variable
	mqtt client variable		
 CompressorInletPressureSensor	HCV/vcal/CompressorInlet	 state	variable
	mqtt client variable		
 CompressorInletTemperatureSensor	HCV/vcal/CompressorInlet	 state	variable
	mqtt client variable		
 CompressorOilTemperatureSensor	HCV/vcal/CompressorOilTe	 state	variable
	mqtt client variable		
 CompressorOutletPressureSensor	HCV/vcal/CompressorOutl	 state	variable
	mqtt client variable		
 CompressorOutletTemperatureSensor	HCV/vcal/CompressorOutl	 state	variable
	mqtt client variable		
 CompressorSpeedPercent	HCV/vcal/CompressorSpee	 state	variable
	mqtt client variable		
 CurrentThermalCapacitySystem	HCV/vcal/CurrentThermalC	 state	variable
	mqtt client variable		
 DomesticHotWaterPump	HCV/vcal/DomesticHotWat	 state	variable
	mqtt client variable		
 DomesticHotWaterSensor	HCV/vcal/DomesticHotWat	 state	variable
	mqtt client variable		
 EconomizerLiquidTemperatureSensor	HCV/vcal/EconomizerLiqui	 state	variable
	mqtt client variable		