CHILTONLIBRARY



Frame Dimensions



FRAME DIMENSIONS

NOTE

Frame dimensions are listed in metric scale millimeter (mm). All dimensions are from center to center of Principal Locating Point (PLP), or from center to center of PLP and fastener location.


VEHICLE PREPARATION-

Position the vehicle on a level work surface. Using screw or bottle jacks, adjust the vehicle PLP heights to the specified dimension above a level work surface. Vertical dimensions can be taken from the work surface to the locations indicated were applicable.


INDEX

DESCRIPTION	FIGURE
Under Body Dimensions	Figure 1
Under Hood Dimensions (1 of 2)	Figure 2
Under Hood Dimensions (2 of 2)	Figure 3
Front View Dimensions	Figure 4


Under Body Dimensions

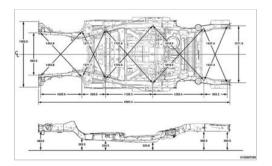

Under Hood Dimensions (1 of 2)

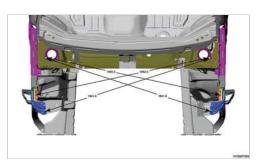

Under Hood Dimensions (2 of 2)

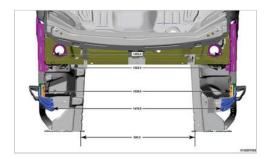

Front View Dimensions



FRAME DIMENSIONS

NOTE

Frame dimensions are listed in metric scale millimeter (mm). All dimensions are from center to center of Principal Locating Point (PLP), or from center to center of PLP and fastener location.

VEHICLE PREPARATION-


Position the vehicle on a level work surface. Using screw or bottle jacks, adjust the vehicle PLP heights to the specified dimension above a level work surface. Vertical dimensions can be taken from the work surface to the

locations indicated were applicable.


INDEX

DESCRIPTION	FIGURE
Under Body Dimensions	Figure 1
Under Hood Dimensions (1 of 2)	Figure 2
Under Hood Dimensions (2 of 2)	Figure 3
Front View Dimensions	Figure 4


Under Body Dimensions

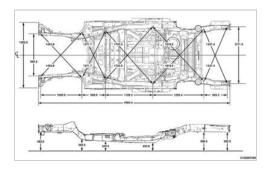

Under Hood Dimensions (1 of 2)

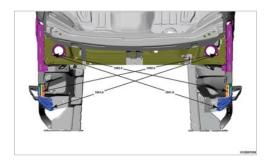

Under Hood Dimensions (2 of 2)

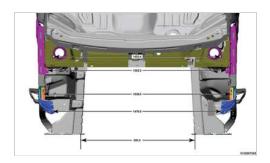

Front View Dimensions

