CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

NOTE

The procedure for replacing the recliner motor assembly is the same for both the 60 and 40 third row power folding seats. The following steps should be performed only on the seat with the inoperative recliner motor assembly.


- 1. Remove the effected third row power folding seat, (Refer to Body/Seats/SEAT/Removal and Installation) (Refer To List 1).
- 2. Remove the seat back cushion and cover assembly, (Refer to Body/Seats/PANEL, Seat Back, Front/Removal and Installation).




3. Disconnect the wiring harness connector (1) from the motor.



4. Remove the torque rod cap (1).

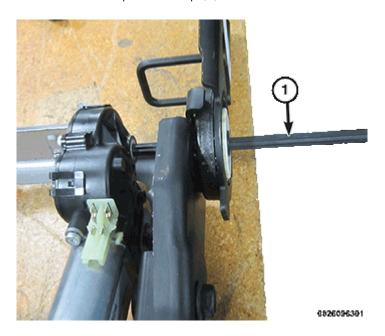

5. Slide the torque rod (1) out from the seat rack.

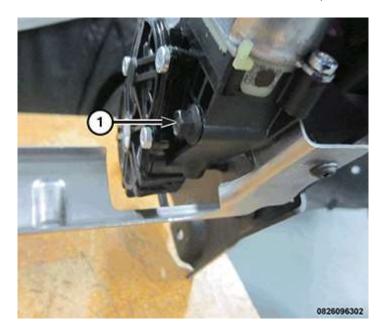

6. Remove the screw (1) securing the motor to the bracket.

NOTE

Take care not to disturb the recliner mechanism any more than necessary to remove the motor. Improper part alignment on installation can result in poor seat recliner operation.

7. Remove the motor.

INSTALLATION

- 1. Insert the torque rod through the rod opening and guide it through the motor torque rod opening.
- 2. Install the cap securing the rod to the seat.
- 3. Install and tighen the bolt securing the motor to the bracket.
- 4. Connect the wiring harness connector to the motor.
- 5. Install the seat back cushion and cover assembly, (Refer to Body/Seats/PANEL, Seat Back, Front/Removal and Installation).
- 6. Install the effected third row power folding seat, (Refer to Body/Seats/SEAT/Removal and Installation) (Refer To List 1).
- 7. Perform the third row power folding seat recliner calibration, (Refer to Electrical/8N Power Systems/Power Seats Standard Procedure)(Refer To List 2). Verify proper seat operation.

Refer To List:

List 1

- 23 Body / Seats, First Row / SEAT, Front / Removal and Installation
- 23 Body / Seats, Second Row, Stow-n-Go / SEAT, Stow-n-Go / Removal and Installation
- 23 Body / Seats, Third Row, Stow-n-Go / SEAT / Removal and Installation
- 23 Body / Seats, Third Row, Power Folding / SEAT / Removal and Installation

List 2

- 08 Electrical / 8N Power Systems / Power Seats, Front / Standard Procedure
- 08 Electrical / 8N Power Systems / Power Seats, Third Row / Standard Procedure