CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL



- 1. Move the third row seats to the upright position.
- 2. Lift the screw cover (2) and remove the screw (1), then remove the cargo hooks.

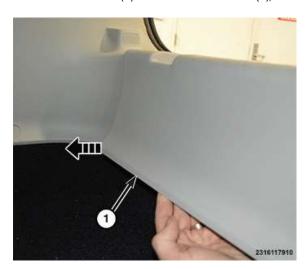

3. By hand, first release the four lower edge clips by pulling the lower edge (1) FORWARD.


1 Listen

Dictionary

Translate



4. Starting at one end, lift the liftgate scuff plate (1) to release the clips (2), and remove.

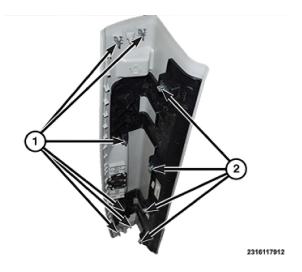

5. This graphic shows the clips on the backside of the liftgate scuff plate. The four clips (2) located at the lower front edge and the six clips (1) on the top-side of the liftgate scuff plate.

INSTALLATION

- 1. Position the liftgate scuff plate and engage the top retainers, the lower edge retainers.
- 2. Install the cargo hooks and tighten the screws securely.

NOTE

Make sure the liftgate scuff plate engages into the weatherstrip properly.