CHILTONLIBRARY




Seat Belt Retractor - Second Row Center

SEAT BELT RETRACTOR - SECOND ROW CENTER

REMOVAL

WARNING

To avoid serious or fatal injury during and following any seat belt or child restraint anchor service, carefully inspect all seat belts, buckles, mounting hardware, retractors, tether straps, and anchors for proper installation, operation, or damage. Replace any belt that is cut, frayed, or torn. Straighten any belt that is twisted. Tighten any loose fasteners. Replace any belt that has a damaged or ineffective buckle or retractor. Replace any belt that has a bent or damaged latch plate or anchor plate. Replace any child restraint anchor or the unit to which the anchor is integral that has been bent or damaged. Never attempt to repair a seat belt or child restraint component. Always replace damaged or ineffective seat belt and child restraint components with the correct, new and unused replacement parts listed in the Mopar® Parts Catalog. Failure to follow these instructions may result in possible serious or fatal injury.

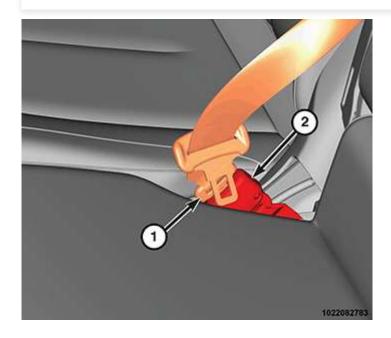


1. Disconnect the seat belt (1) from the lower anchor (2).


NOTE

It is not necessary to completely remove the headliner from the vehicle. Lowering it to rest on the seat backs will allow access to the fasteners for the second row seat belt retractor nuts and bolt.

- 2. Lower the headliner. (Refer to Body/Interior/HEADLINER/Removal and Installation).
- 3. If equipped, remove the rear sunshade from the roof interior. (Refer to Body/Sunroof, Dual Pane/SUNSHADE, Sunroof/Removal and Installation).

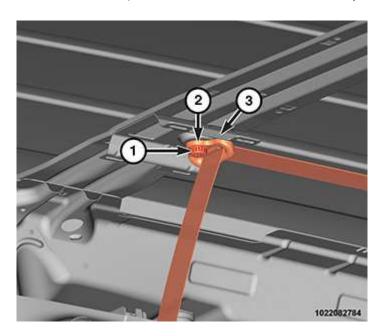

4. Remove the screw (1) that secures the second row center rear seat belt upper anchor plate (2) to the roof bracket (3).

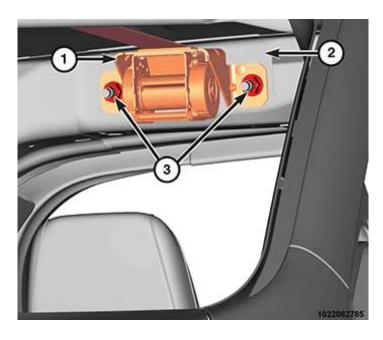


- 5. Remove the two nuts (3) that secure the second row center seat belt retractor (1) to the rear header (2).
- 6. Remove the second row center seat belt and retractor from the vehicle as a unit.


INSTALLATION

WARNING


To avoid serious or fatal injury during and following any seat belt or child restraint anchor service, carefully inspect all seat belts, buckles, mounting hardware, retractors, tether straps, and anchors for proper installation, operation, or damage. Replace any belt that is cut, frayed, or torn. Straighten any belt that is twisted. Tighten any loose fasteners. Replace any belt that has a damaged or ineffective buckle or retractor. Replace any belt that has a bent or damaged latch plate or anchor plate. Replace any child restraint anchor or the unit to which the anchor is integral that has been bent or damaged. Never attempt to repair a seat belt or child restraint component. Always replace damaged or ineffective seat belt and child restraint components with the correct, new and unused replacement parts listed in the Mopar® Parts Catalog. Failure to follow these instructions may result in possible serious or fatal injury.

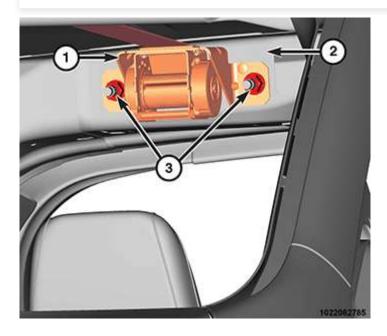

- 1. Position the second row center seat belt and retractor (1) to the rear header (2). Be certain the seat belt webbing is not twisted between the retractor and the top of the seat back.
- 2. Install the two nuts (3) that secure the retractor to the rear header. Tighten the nuts to the proper (Torque Specifications).

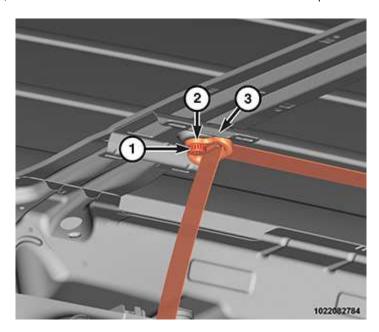

- 3. Install the screw (1) that secures the second row center seat belt upper anchor plate (2) to the roof bracket (3). Tighten the screw to the proper (Torque Specifications).
- 4. If equipped, install the rear sunshade to the roof interior. (Refer to Body/Sunroof, Dual Pane/SUNSHADE, Sunroof/Removal and Installation).
- 5. Install the headliner. (Refer to Body/Interior/HEADLINER/Removal and Installation).

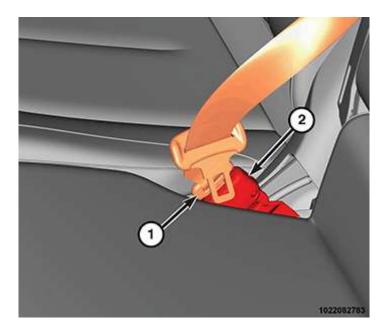

6. Connect the second row center seat belt (1) to the lower anchor (2).