CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION


REMOVAL

- 1. Disconnect and isolate the negative battery cable. If equipped with an Intelligent Battery Sensor (IBS), disconnect the IBS connector first before disconnecting the negative battery cable.
- 2. Remove the scuff plate from the liftgate opening sill. (Refer to Body/Interior/PLATE, Scuff, Liftgate Sill/Removal and Installation).

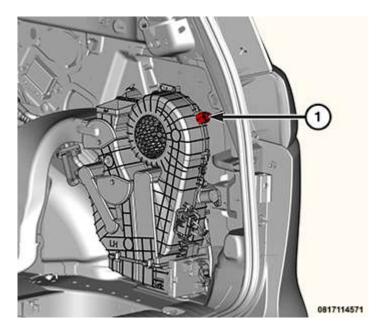

- 3. Move the quarter trim panel away from the lower right inner D-pillar far enough to access the power liftgate chime (1). (Refer to Body/Interior/PANEL, D-Pillar Trim/Removal and Installation).
- 4. Disconnect the body wire harness connector from the chime pigtail wire connector.
- 5. Disengage the retainer integral to the chime pigtail wire connector from the body sheet metal.
- 6. Disengage the retainer integral to the chime housing from the body sheet metal.
- 7. Remove the chime from the vehicle.

INSTALLATION

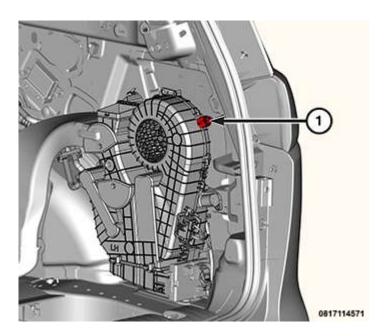

- 1. Position the power liftgate chime to the Right inner D-pillar in the vehicle (1).
- 2. Engage the retainer integral to the chime housing into the hole in the inner D-pillar.
- 3. Reconnect the chime pigtail wire connector to the body wire harness connector for the chime.
- 4. Engage the retainer integral to the chime pigtail wire connector with the hole in the inner D-pillar.
- 5. Reinstall the quarter trim panel to the lower right inner D-pillar. (Refer to Body/Interior/PANEL, D-Pillar Trim/Removal and Installation).
- 6. Reinstall the scuff plate onto the liftgate opening sill.(Refer to 23 Body/Interior/PLATE, Scuff, Liftgate Sill/Removal and Installation).
- 7. Connect the negative battery cable. If equipped with an Intelligent Battery Sensor (IBS), connect the IBS connector to the negative battery cable.