# **CHILTON**LIBRARY




## **Removal & Installation**

### **REMOVAL AND INSTALLATION**

### **REMOVAL**


- 1. Remove the left rear quarter trim panel (Refer to 23 Body/Interior/PANEL, Quarter Trim, Rear/Removal and Installation).
- 2. Release the clip and disconnect the lockout rod.

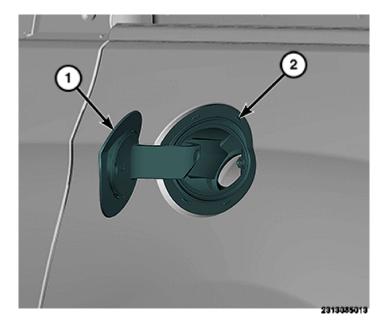

- 3. Open the door (1).
- 4. Using trim stick
  Trim Stick




or equivalent, release the four retaining tabs (2).

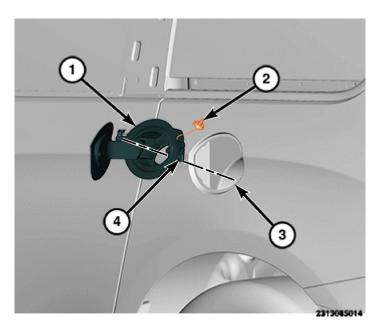


- 5. Remove the fuel filler housing assembly (1) from the hole in the body (3).
- 6. Disconnect the release cable (2) and the wire harness connector (4).

### **INSTALLATION**

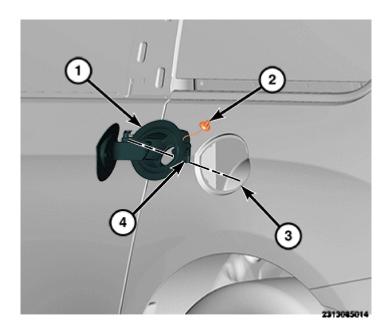

- 1. Connect the wire harness connector (4) and the release cable (2).
- 2. Position the fuel filler housing assembly (1) into the hole (3) in the body.

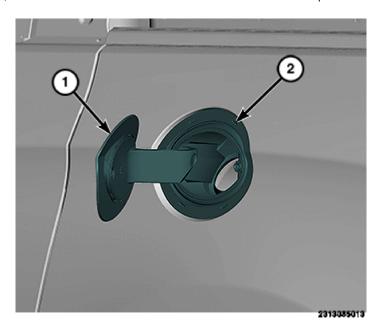

- 3. Seat the four retaining tabs (2) fully and close the door (1).
- 4. Connect the lockout rod and secure the clip fully.
- 5. Install the left rear quarter trim panel (Refer to Body/Interior/PANEL, Quarter Trim, Rear/Removal and Installation).