# **CHILTON**LIBRARY



## **Removal & Installation**


#### **REMOVAL AND INSTALLATION**

#### **REMOVAL**


#### WARNING

Disable the airbag system before attempting any front seat diagnosis or service. Disconnect and isolate the negative battery (ground) cable and wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to follow these instructions may result in accidental airbag deployment and possible serious or fatal injury.

- 1. Position the seat being serviced all the way forward.
- 2. Remove the outboard seat cushion side trim panel from the seat (Refer to Body/Seats/SIDE SHIELDS, Seat Cushion, Front/Removal and Installation).

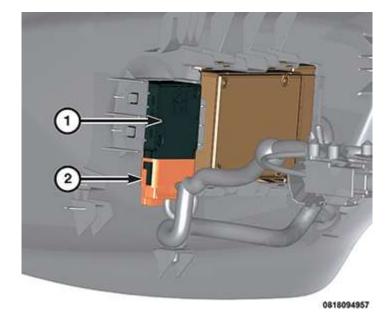

3. Disconnect the electric connector (2) from the lumbar control switch (1).

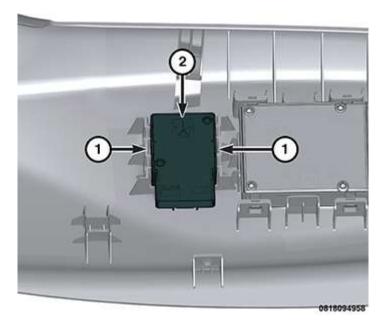

4. Using Trim Stick

Trim Stick



or equivalent, carefully disengage the two tabs (1) that secure the lumbar control switch (2) to the seat cushion side trim panel.

### **INSTALLATION**

- 1. Connect the electrical connector to the power lumbar control switch. Make sure the connector is fully engaged to the switch.
- 2. Position the lumbar control switch to the seat cushion side trim panel and engage the four retaining tabs that secure the switch to the trim panel. Make sure the retaining tabs are fully engaged.
- 3. Install the outboard seat cushion side trim panel (Refer to Body/Seats/SIDE SHIELDS, Seat Cushion, Front/Removal and Installation).