# **CHILTON**LIBRARY




## **Removal & Installation**

#### **REMOVAL AND INSTALLATION**


### **REMOVAL**

**REMOVAL** 

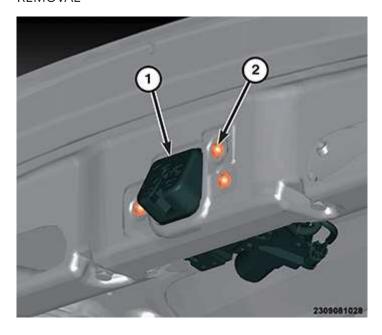

- 1. Remove the lower liftgate trim panel (Refer to Body/Decklid/Hatch/Liftgate/Tailgate/PANEL, Trim, Liftgate/Removal and Installation).
- 2. Disconnect the wire harness connector from the liftgate latch (1).
- 3. Remove the three bolts (2) and the liftgate latch.

#### **INSTALLATION**

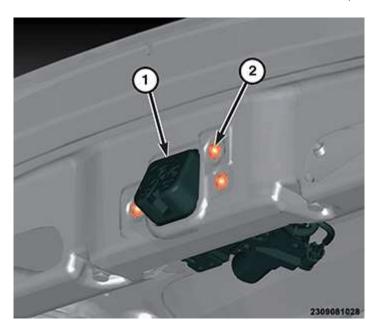

- 1. Install the liftgate latch (1) and the three bolts (2).
- 2. Tighten the liftgate latch bolts to the proper (Torque Specifications).
- 3. Connect the wire harness connector to the liftgate latch.
- 4. Install the lower liftgate trim panel (Refer to Body/Decklid/Hatch/Liftgate/Tailgate/PANEL, Trim, Liftgate/Removal and Installation).