# **CHILTON**LIBRARY



## **Removal & Installation**

#### **REMOVAL AND INSTALLATION**

#### **REMOVAL**

#### NOTE

It is not necessary to remove the seatback.




2319098220

- 1. Remove the second row, center seat from the vehicle.
- 2. By hand, pull to remove the front cover (1).





- 3. By hand, pull the cover (1) forward and outward to remove. Remove the screw behind this cover.
- 4. Remove the screws (3) and then the side cover (2). Do this on both sides of the seat.

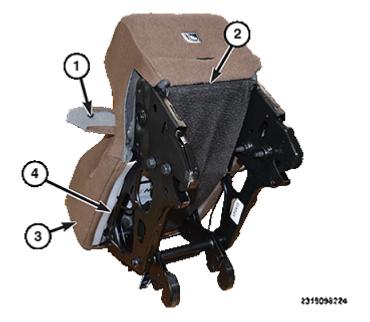

#### NOTE

It is not necessary to remove the seatback.

- 5. Remove the push fastener (1) on both sides of the seat.
- 6. Release the J-hook and open the lower cover panel (2).
- 7. Release the trim J-hooks (4) around the perimeter of the seat cushion.

8. Remove the seat cover (3) and cushion as an assembly, from the seat frame.




2319098227

### NOTE

Be careful not to damage the clips molded into the seat cushion. If the clips or cushion are damaged during removal, replace the cushion.

- 9. Pull the seat cover (2) away from the seat cushion (1), releasing the hook and loop fasteners (4) first.
- 10. Using a hook tool, start at one end to release the clip strips (3) and the seat cover.

#### **INSTALLATION**

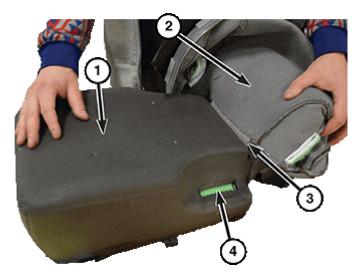

2319098227

- 1. Pull the seat cover (2) over the seat cushion (1), installing the clip strips (3) first.
- 2. Pull the seat cover tight and engage the hook and loop fasteners (4).
- 3. Position the cushion assembly onto the seat frame.



- 4. Fasten the trim J-hooks (4) around the perimeter of the seat cushion.
- 5. Fasten the J-hook for the lower cover (2).
- 6. Install the push fastener (1) on both sides of the seat.



7. Install the side covers (2) and the screws (3).

- 8. Install the screw behind the cover (1).
- 9. Position the cover (1) and push rearward to install.



2319098220

10. Install the front cover (1).