
CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

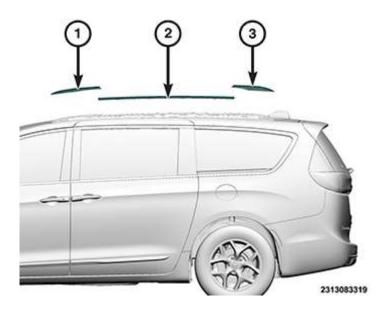

NOTE

The luggage rack rails may be serviced individually.

1. Using a trim stick


Trim Stick



or equivalent, pry up to release the retaining clips securing the front luggage rack rail cover (1) and remove the cover.

2. Using a trim stick

Trim Stick

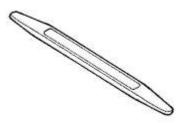


or equivalent, pry up to release the retaining clips securing the rear luggage rack rail cover (3) and remove the cover.

3. Using a trim stick

Trim Stick




or equivalent, pry up to release the retaining clips securing the center luggage rack rail cover (2) and remove the cover.

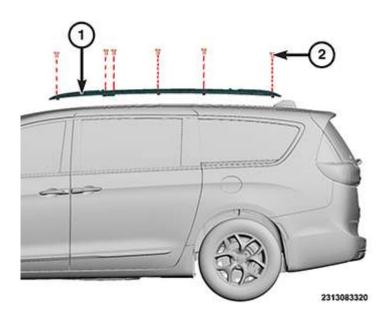

4. Remove the six luggage rack rail nuts (2).

- 5. Gently lift up on the front of the roof rail (1).
- 6. With the use of a trim stick


Trim Stick



or equivalent, start at the front and carefully pry up on the luggage rack rail (1) releasing it from the roof studs and brackets.

- 7. Continue working toward the rear of the vehicle until fully released.
- 8. Remove the luggage rack rail (1) from the vehicle.

INSTALLATION

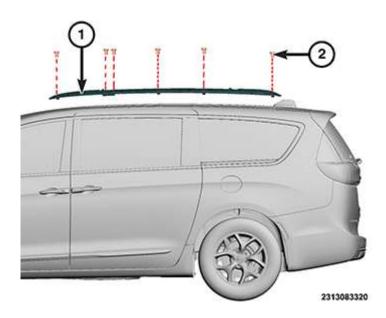


NOTE

If the luggage rack rail shows resistance when being installed it is for the opposite side.

- 1. Position the luggage rack rail (1) onto the roof, aligning the indentations on the bottom of the rail to the studs and brackets on the roof panel.
- 2. Lower the luggage rack rail (1) onto the roof panel and seat fully.

3. Install the six luggage rack rail nuts (2) and tighten from front to back securely.

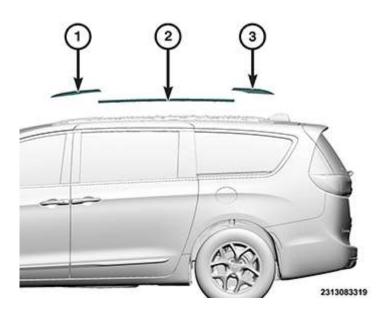

- 4. Position the center cover (2) to the roof rack rail and with hand pressure insert fully. An audible click will be heard.
- 5. Position the front cover (1) to the rail and with hand pressure insert fully. An audible click will be heard.
- 6. Position the rear cover (3) to the rail and with hand pressure insert fully. An audible click will be heard.