CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

NOTE

In the event the headliner is damaged or creased during removal, it will need to be replaced with a new headliner. Use clean gloves or make sure your hands are clean before removing the headliner.

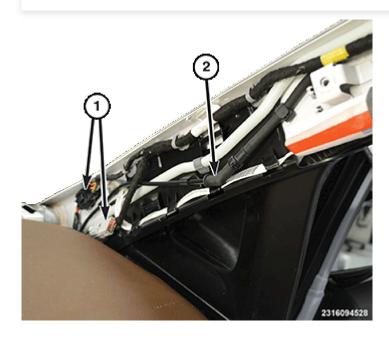


- 1. Disconnect and isolate the negative battery cable.
- 2. Remove the A-pillar trim panels (Refer to Body/Interior/PANEL, A-Pillar Trim/Removal and Installation).
- 3. Disconnect the wire harness connectors (1) and unclip the wire harness from the passenger side Apillar.
- 4. Disconnect the rear washer hose (2) and unclip the hose from the passenger side A-pillar, if equipped.

NOTE

Washer fluid may drain from this hose when disconnection. Use a container to catch the fluid, then plug the hose with a suitable stopper.

- 5. Remove the upper B-pillar trim panels (Refer to Body/Interior/PANEL, B-Pillar Trim/Removal and Installation)(Refer To List 1).
- 6. Remove the C-pillar trim panels and the C-pillar trim extensions (Refer to Body/Interior/PANEL, C-Pillar Trim/Removal and Installation).
- 7. Remove the D-pillar trim panels and the D-pillar trim extensions (Refer to Body/Interior/PANEL, D-Pillar Trim/Removal and Installation).
- 8. Remove the visors (Refer to Body/Interior/VISOR/Removal and Installation).
- 9. Remove the visor supports (Refer to Body/Interior/SUPPORT, Visor/Removal and Installation).
- 10. Remove the overhead console (Refer to Body/Interior/CONSOLE, Overhead/Removal and Installation).

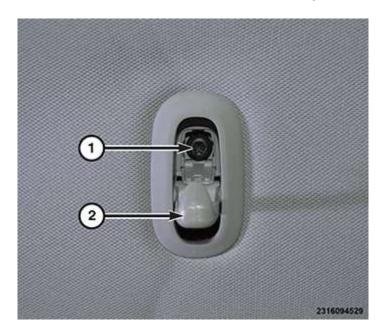

- 11. Open the coat hook, open the screw cover, remove the screw (1) and the coat hook.
- 12. Remove the passenger side rear quarter trim panel (Refer to Body/Interior/PANEL, Quarter Trim, Rear/Removal and Installation).
- 13. Remove the rear auxiliary duct.



NOTE

Lower the second and third row seats, and recline the front row seat fully rearward before the final removal steps.

- 14. Using a trim stick or equivalent, release the push fastener at the location (1) at the rear of the headliner.
- 15. With the help of an assistant starting at the rear of the vehicle, release the hook and loop fasteners by hand, then around the sunroof openings (2 and 5), if equipped
- 16. Using a long trim stick, reach up above the headliner and release the three steel retainers that retain the rear heater controls (3) bracket from the roof panel.

NOTE

The heater controls cannot be removed from the headliner until is if lowered.

17. Lower the rear of the headliner slightly and disconnect the rear window washer hose.

NOTE


The hose is attached to the headliner, be careful not to pull it loose.

18. Carefully pull the headliner downward releasing all the hook and loop fasteners.

NOTE

If the vehicle is equipped with a sunroof, there is a safety tether on the right side that needs to be released from the sunroof frame.

19. Remove the headliner through the rear of the vehicle.

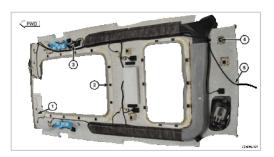


20. Headliner shown lowered for reference. (1) is a locating pin at the front. (2) shows multiple hook and loop fasteners. (3) is the heater control bracket that engages into the roof panel. (4) is the locating pin/push fastener at the rear. (5) is the rear window washer hose.

INSTALLATION

NOTE

In the event the headliner is damaged or creased during installation, it will need to be replaced with a new headliner. Use clean gloves or make sure your hands are clean before removing the headliner.

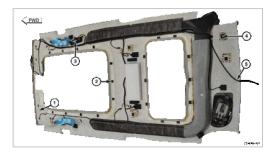

- 1. Headliner shown lowered for reference. (1) is a locating pin at the front. (2) shows multiple hook and loop fasteners. (3) is the heater control bracket that engages into the roof panel. (4) is the locating pin/push fastener at the rear. (5) is the rear window washer hose.
- 2. With the help of an assistant, position the headliner into the vehicle and connect the rear window washer hose.




3. Raise the headliner engaging the front locating pin (4) and the rear locating pin (1).

NOTE


If the vehicle is equipped with a sunroof, there is a safety tether on the right side that needs to be attached to the sunroof frame.

- 4. Engage the heater control bracket (3) into the roof panel, then the hook and loop fasteners around the sunroof openings (2 and 5).
- 5. Engage the remainder hook and loop fasteners.

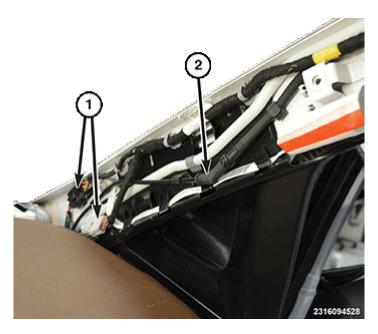

6. Connect the wire harness connectors (1) and route the wire harness to the passenger side A-pillar.

- 7. Connect the rear washer hose (2) and route the hose to the passenger side A-pillar.
- 8. Install the rear auxiliary duct.
- 9. Install the passenger side rear quarter trim panel (Refer to Body/Interior/PANEL, Quarter Trim, Rear/Removal and Installation).

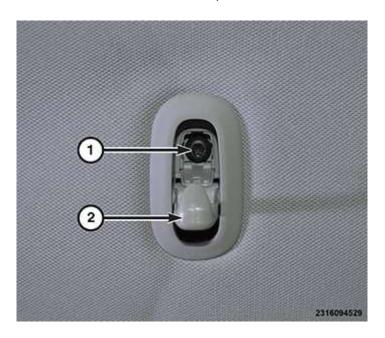

- 10. Install the coat hook (2), screw (1) and the screw cover.
- 11. Install the overhead console (Refer to Body/Interior/CONSOLE, Overhead/Removal and Installation).
- 12. Install the visor supports (Refer to 23 Body/Interior/SUPPORT, Visor/Removal and Installation).
- 13. Install the visors (Refer to Body/Interior/VISOR/Removal and Installation).
- 14. Install the D-pillar trim panels and the D-pillar trim extensions (Refer to Body/Interior/PANEL, D-Pillar Trim/Removal and Installation).
- 15. Install the C-pillar trim panels and the C-pillar trim extensions (Refer to Body/Interior/PANEL, C-Pillar Trim/Removal and Installation).
- 16. Install the upper B-pillar trim panels (Refer to Body/Interior/PANEL, B-Pillar Trim/Removal and Installation)(Refer To List 1).
- 17. Install the A-pillar trim panels (Refer to Body/Interior/PANEL, A-Pillar Trim/Removal and Installation).

Refer To List:

List 1

- 23 Body / Interior / PANEL, B-Pillar Trim, Lower / Removal and Installation
- 23 Body / Interior / PANEL, B-Pillar Trim, Upper / Removal and Installation