CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

WARNING

Disable the airbag system before attempting any component diagnosis or service of the front seats, when equipped with front seat air bags. Disconnect and isolate the negative battery (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to follow these instructions may result in accidental airbag deployment and possible serious or fatal injury.

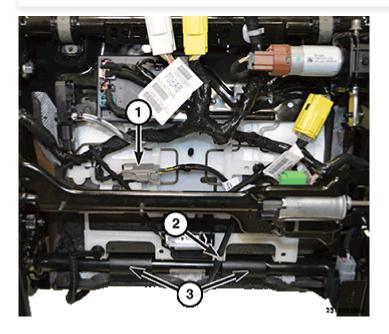

- 1. Remove the seat from the vehicle and place it on a workbench (Refer to Body/Seats/SEAT/Removal and Installation)(Refer To List 1).
- 2. Remove the front seat side shields (Refer to Body/Seats/SIDE SHIELDS, Seat Cushion, Front/Removal and Installation).

3. From under the seat disconnect the seatback heater wire harness connector (1) and unclip the harness (2).



4. Remove the two bolts (2) on each side of the seat and remove the seat back (1).


INSTALLATION

WARNING

Disable the airbag system before attempting any component diagnosis or service of the front seats, when equipped with front seat air bags. Disconnect and isolate the negative battery (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to follow these instructions may result in accidental airbag deployment and possible serious or fatal injury.



1. Position the seat back (1) and install the two seat back bolts (2) on each side of the seat. Tighten the seat back bolts to the proper (Torque Specifications).

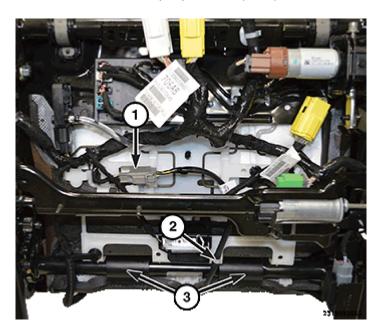

- 2. From under the seat route the harness (2) and connect the seatback heater wire harness connector (1).
- 3. Install the front seat side shields (Refer to Body/Seats/SIDE SHIELDS, Seat Cushion, Front/Removal and Installation).
- 4. Install the front seat into the vehicle (Refer to 23 Body/Seats/SEAT/Removal and Installation)(Refer To List 1).

Refer To List:

List 1

- 23 Body / Seats, First Row / SEAT, Front / Removal and Installation
- 23 Body / Seats, Second Row, Stow-n-Go / SEAT, Stow-n-Go / Removal and Installation
- 23 Body / Seats, Third Row, Stow-n-Go / SEAT / Removal and Installation
- 23 Body / Seats, Third Row, Power Folding / SEAT / Removal and Installation