
CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

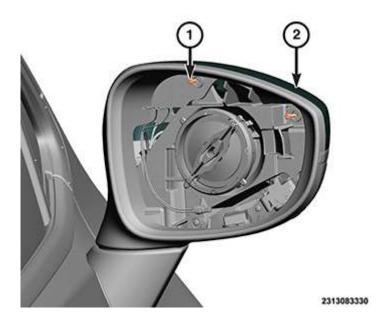


- 1. Remove the rearview mirror glass (Refer to Body/Exterior/MIRROR, Outside Rearview/Removal and Installation).(Refer To List 1)
- 2. Remove the two fasteners (1) securing the mirror cover (2) to the top of the mirror glass motor.




- 3. Pull the inboard upper corner of the mirror cover (1) outward.
- 4. Remove the rearview mirror cover (1) from the rearview mirror.

INSTALLATION

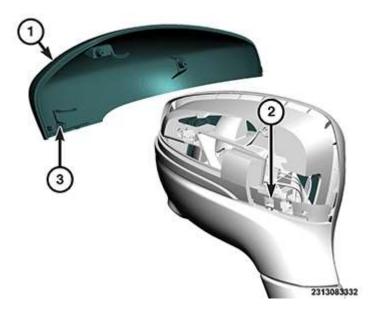

- 1. Position the mirror cover (1) back onto the mirror assembly and insert the rearview mirror cover retaining tab (3) into the slot (2)
- 2. Seat the mirror cover (1) fully.

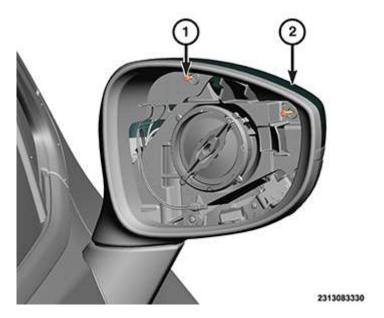

- 3. Install the two fasteners (1) securing the mirror cover (2) to the top of the mirror motor and tighten securely.
- 4. Install the rearview mirror glass (Refer to 23 Body/Exterior/MIRROR, Outside Rearview/Removal and Installation).(Refer To List 1)

Refer To List:

List 1

- 23 Body / Exterior / MIRROR, Outside Rearview / Removal and Installation
- 23 Body / Exterior / MIRROR, Outside Rearview, Cover / Removal and Installation
- 23 Body / Exterior / MIRROR, Outside Rearview, Glass / Removal and Installation