CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL




2319098220

- 1. Remove the second row, center seat from the vehicle.
- 2. By hand, pull to remove the front cover (1).




- 3. By hand, pull the cover (1) forward and outward to remove. Remove the screw behind this cover.
- 4. Remove the screws (3) and then the side cover (2). Do this on both sides of the seat.

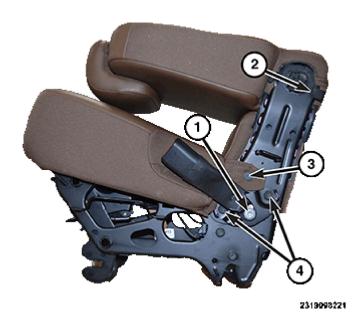

- 5. Remove the seat belt buckle (1).
- 6. Remove the push fastener (3) on both sides of the seat frame.
- 7. Remove the bolts (4) and then the seatback frame assembly.
- 8. If necessary to remove the seatback cover then the seatback cushion (Refer to Body/Seats/COVER, Seat Back/Removal and Installation)(Refer To List 1).

INSTALLATION

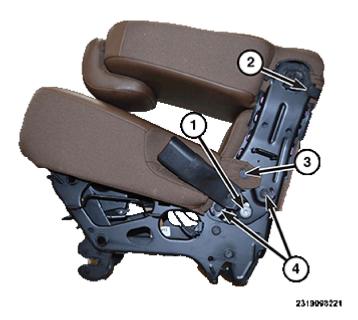

- 1. Position the seatback frame assembly and install the bolts (4). Tighten the second row center seatback bolts to the proper (Torque Specifications).
- 2. Install the push fastener (3) on both sides of the seat frame.
- 3. Install the seat belt buckle (1) (Refer to 10 Restraints/BUCKLE, Seat Belt/Removal and Installation).



- 4. Install the side covers (2) and the screws (3).
- 5. Install the screw behind the cover (1).
- 6. Position the cover (1) and push rearward to install.



2319098220

7. Install the front cover (1).

Refer To List:

List 1

- 23 Body / Seats, First Row / COVER, Seat Back, Front / Removal and Installation
- 23 Body / Seats, Second Row / COVER, Seat Back Second Row Center / Removal and Installation
- 23 Body / Seats, Second Row, Stow-n-Go / COVER, Seat Back, Stow-n-Go / Removal and Installation
- 23 Body / Seats, Third Row, Stow-n-Go / COVER, Seat Back / Removal and Installation
- 23 Body / Seats, Third Row, Power Folding / COVER, Seat Back, Third Row / Removal and Installation