
CHILTONLIBRARY



Removal & Installation


REMOVAL AND INSTALLATION

REMOVAL

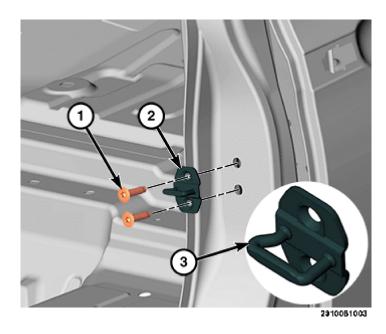

- 1. Open the front door.
- 2. Mark the front door latch striker (2) location on the face of the outer B-pillar to aid installation.
- 3. Remove the two screws (1) that secure the striker (2) to the B-pillar.
- 4. Remove the striker from the B-pillar.

INSTALLATION

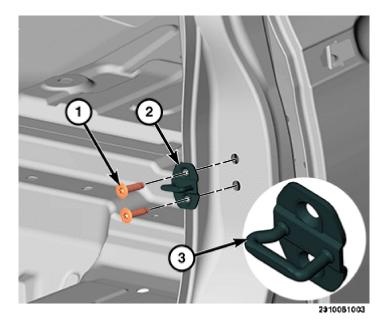

NOTE

Make sure the protrusion (3) is orientated towards the interior of the vehicle.

- 1. Position the front door latch striker (2) on the face of the outer B-pillar.
- 2. Install the two screws (1) that secure the striker to the B-pillar.
- 3. Tighten the two screws (1) that secure the striker (2) to the proper (Torque Specifications).
- 4. Adjust the latch striker position as necessary to achieve proper door spacing and latch operation.