CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION


REMOVAL

NOTE

It is very important to follow the removal steps closely in order to prevent damage to the quarter trim panel.

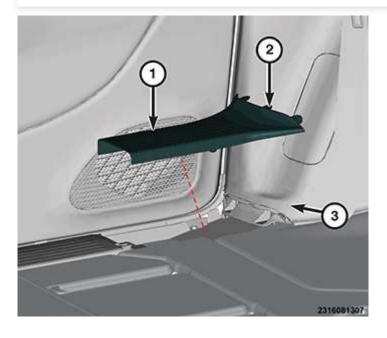

- 1. Fold the second row seats into the floor.
- 2. Using a trim stick, lift the front of the scuff plate extension (1) then pull forward to release the tabs (2) and remove.
- 3. Remove the liftgate scuff plate (Refer to Body/Interior/PLATE, Scuff, Liftgate Sill/Removal and Installation).
- 4. Remove the D-pillar trim panel (Refer to Body/Interior/PANEL, D-Pillar Trim/Removal and Installation).

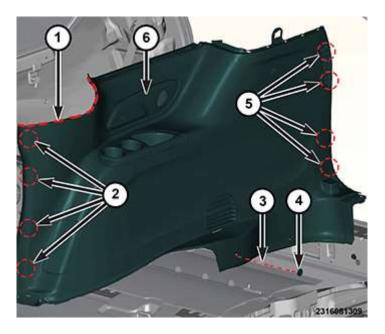


NOTE


It is very important to follow the removal steps closely in order to prevent damage to the quarter trim panel.

- 5. Remove the screw covers (4) and screws (3) at the bottom of the quarter trim panel (6).
- 6. Using a trim stick or equivalent, **carefully** release the top of the quarter trim panel (1) from the C-pillar trim panel.
- 7. Using a trim stick or equivalent, starting at the top and release the four fasteners (2) at the front edge the quarter trim panel.
- 8. Using a trim stick or equivalent, starting at the top and release the four fasteners (5) at the rear edge the quarter trim panel.
- 9. Pull straight away at the center of the quarter trim panel and remove.
- 10. If necessary, disconnect the wire harness connectors and remove the quarter trim panel.

INSTALLATION

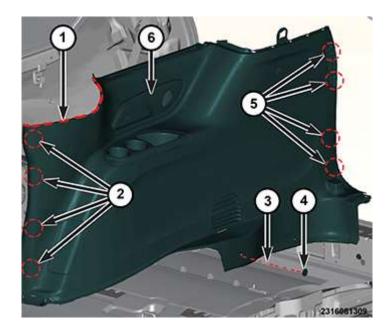

- 1. Position the quarter trim panel (6) in the vehicle and connect the wire harness connectors.
- 2. Carefully locate the clips (2 and 5), then hand tap the quarter trim panel to engage the retaining clips.
- 3. Engage the top of the quarter trim panel (1) to the C-pillar trim panel.
- 4. Install the screws (3) and tighten securely. Install the screw covers (4).
- 5. Install the D-pillar trim panel (Refer to 23 Body/Interior/PANEL, D-Pillar Trim/Removal and Installation).
- 6. Install the liftgate sill scuff plate (Refer to 23 Body/Interior/PLATE, Scuff, Liftgate Sill/Removal and Installation).

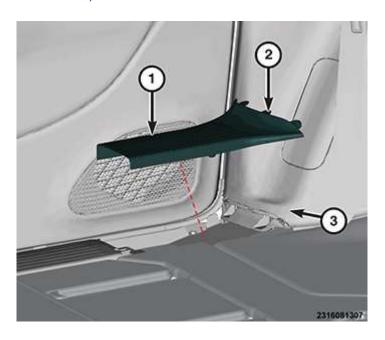

7. Install the scuff plate extension (1).