# CHILTONLIBRARY




# Seat Belt Buckle - Third Row Center or Right

## **SEAT BELT BUCKLE - THIRD ROW CENTER OR RIGHT**

#### **REMOVAL**


#### WARNING

To avoid serious or fatal injury during and following any seat belt or child restraint anchor service, carefully inspect all seat belts, buckles, mounting hardware, retractors, tether straps, and anchors for proper installation, operation, or damage. Replace any belt that is cut, frayed, or torn. Straighten any belt that is twisted. Tighten any loose fasteners. Replace any belt that has a damaged or ineffective buckle or retractor. Replace any belt that has a bent or damaged latch plate or anchor plate. Replace any child restraint anchor or the unit to which the anchor is integral that has been bent or damaged. Never attempt to repair a seat belt or child restraint component. Always replace damaged or ineffective seat belt and child restraint components with the correct, new and unused replacement parts listed in the Mopar® Parts Catalog. Failure to follow these instructions may result in possible serious or fatal injury.

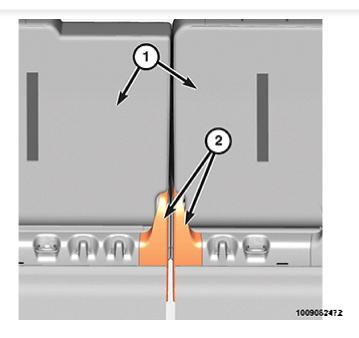

1. Fold the appropriate left or right 3rd row seat (1) to the Stow-N-Go position.

2. Remove the trim cap (2) from the center or right rear seat belt buckle anchor plate to the seat cushion frame.

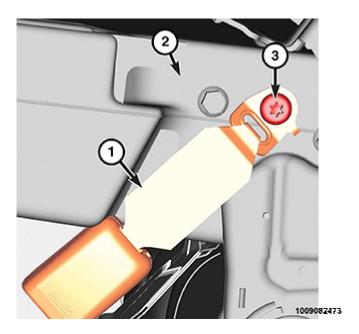


- 3. Remove the screw (3) that secures the center or right seat belt buckle (1) anchor plate to the side of the seat cushion frame (2).
- 4. Remove the seat belt buckle (1) from the 3rd row seat.


### **INSTALLATION**

# WARNING

To avoid serious or fatal injury during and following any seat belt or child restraint anchor service, carefully inspect all seat belts, buckles, mounting hardware, retractors, tether straps, and anchors for proper installation, operation, or damage. Replace any belt that is cut, frayed, or torn. Straighten any belt that is twisted. Tighten any loose fasteners. Replace any belt that has a damaged or ineffective buckle or retractor. Replace any belt that has a bent or damaged latch plate or anchor plate. Replace any child restraint anchor or the unit to which the anchor is integral that has been bent or damaged. Never attempt to repair a seat belt or child restraint component. Always replace damaged or ineffective seat belt and child restraint components with the correct, new and unused replacement parts listed in the Mopar® Parts Catalog. Failure to follow these instructions may result in possible serious or fatal injury.

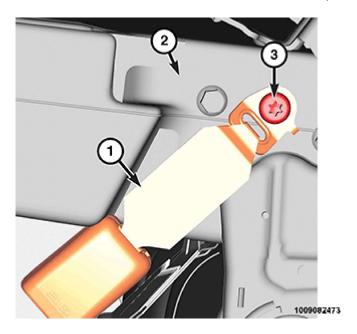

- 1. Fold the appropriate left or right 3rd row seat to the Stow-N-Go position.
- 2. Position the appropriate 3rd row seat belt buckle (1) anchor plate onto the side of the seat cushion frame (2).
- 3. Install the screw (3) that secures the buckle anchor plate to the seat. Tighten the screw to the proper (Torque Specifications).

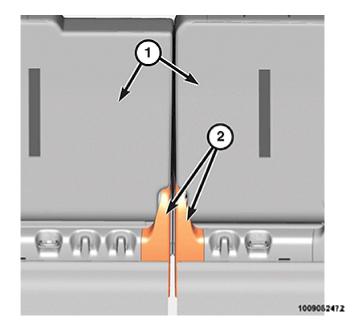

- 4. Install the trim cap (2) onto the seat cushion frame.
- 5. Restore the left or right 3rd row seat to the seating position.