
CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION


REMOVAL

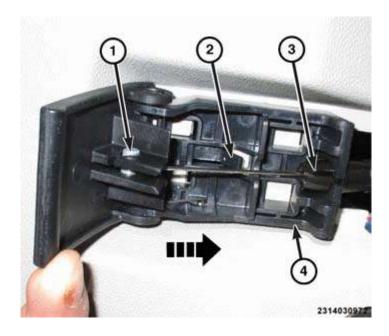

- 1. Disconnect and isolate the negative battery cable.
- 2. Remove the left cowl side panel (Refer to Body/Interior/PANEL, Cowl Trim, Side/Removal and Installation).
- 3. Remove the hood release handle (4). Lift the retaining tab (2) and slide the handle forward to remove it from the steering column opening cover.

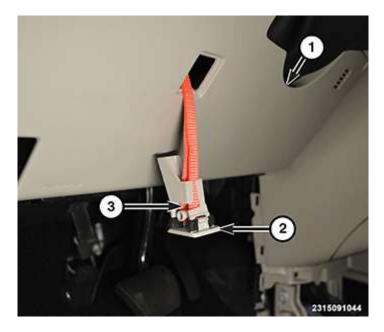


- 4. Using a trim stick or equivalent, remove the manual park brake release handle (2) from the steering column opening cover (1).
- 5. Remove the strap (3) from the manual park brake release handle.

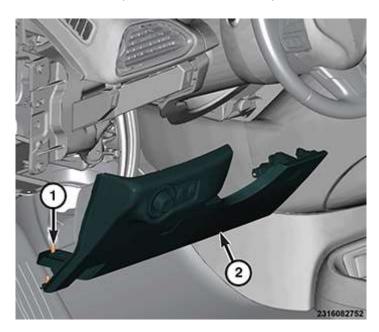


- 6. Remove the push fasteners (1) at the bottom of the steering column opening cover (2).
- 7. Using a trim stick or equivalent, remove the steering column opening cover and disconnect the wire harness connectors.


INSTALLATION

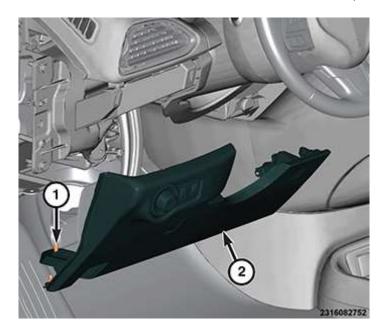


1. Position the steering column opening cover (2) near the instrument panel and connect the wire harness connectors.

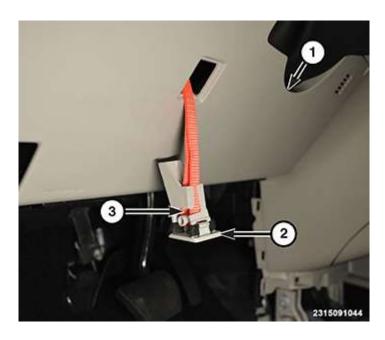

2. Feed the strap (3) through the steering column opening cover (1) and hook it onto the manual park brake release handle (2).

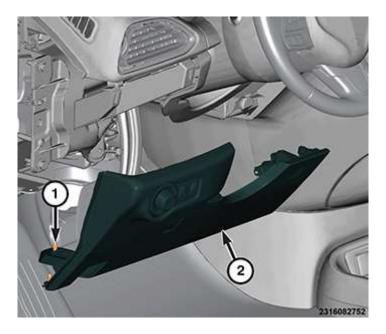

- 3. Install the steering column opening cover (2) onto the instrument panel and hand tap to engage the retaining clips.
- 4. Install the push fasteners (1) at the bottom of the steering column opening cover.

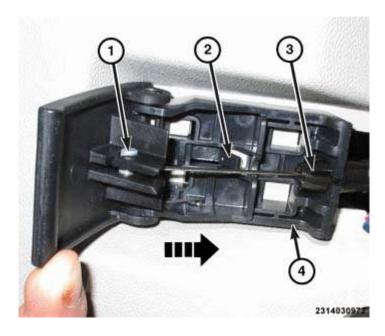

- 5. Position the hood release handle (4) onto the steering column opening cover and slide rearward until the retaining tab (2) snaps into place.
- 6. Install the cowl side trim panel (Refer to 23 Body/Interior/PANEL, Cowl Trim, Side/Removal and Installation).
- 7. Connect the negative battery cable.