# **CHILTON**LIBRARY




## Seat Belt Buckle - Third Row Left

#### **SEAT BELT BUCKLE - THIRD ROW LEFT**

#### **REMOVAL**

#### WARNING

To avoid serious or fatal injury during and following any seat belt or child restraint anchor service, carefully inspect all seat belts, buckles, mounting hardware, retractors, tether straps, and anchors for proper installation, operation, or damage. Replace any belt that is cut, frayed, or torn. Straighten any belt that is twisted. Tighten any loose fasteners. Replace any belt that has a damaged or ineffective buckle or retractor. Replace any belt that has a bent or damaged latch plate or anchor plate. Replace any child restraint anchor or the unit to which the anchor is integral that has been bent or damaged. Never attempt to repair a seat belt or child restraint component. Always replace damaged or ineffective seat belt and child restraint components with the correct, new and unused replacement parts listed in the Mopar® Parts Catalog. Failure to follow these instructions may result in possible serious or fatal injury.

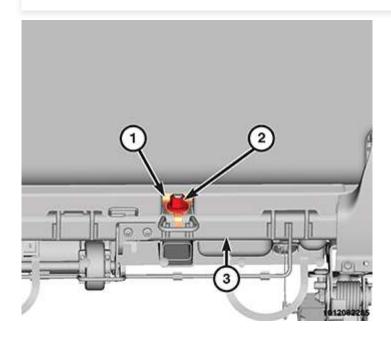


- 1. Remove the 3rd row left seat cover enough to expose the nut that secures the buckle anchor to the seat frame. (Refer to 23 Body/Seats/COVER, Seat Cushion, Third Row/Removal and Installation)(Refer To List 1).
- 2. Remove the nut (2) that secures the left rear seat belt buckle anchor (1) to the top of the seat cushion frame (3).
- 3. Remove the left buckle unit from the rear seat.

#### INSTALLATION

#### WARNING

To avoid serious or fatal injury during and following any seat belt or child restraint anchor service, carefully inspect all seat belts, buckles, mounting hardware, retractors, tether straps, and anchors for proper installation, operation, or damage. Replace any belt that is cut, frayed, or torn. Straighten any belt that is twisted. Tighten any loose fasteners. Replace any belt that has a damaged or ineffective buckle or retractor. Replace any belt that has a bent or damaged latch plate or anchor plate. Replace any child restraint anchor or the unit to which the anchor is integral that has been bent or damaged. Never attempt to repair a seat belt or child restraint component. Always replace damaged or ineffective seat belt and child restraint components with the correct, new and unused replacement parts listed in the Mopar® Parts Catalog. Failure to follow these instructions may result in possible serious or fatal injury.

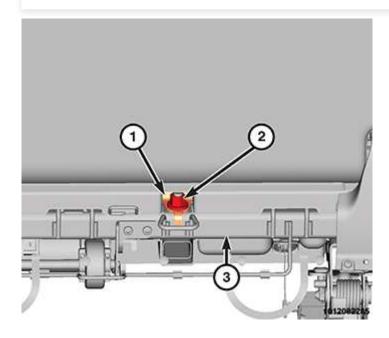

1. Position the left rear seat belt buckle anchor plate (1) onto the weld stud on the top side of the seat cushion frame (3).

- 2. Install the nut (2) that secures the buckle anchor plate to the seat. Tighten the screw to the proper (Torque Specifications).
- 3. Install the left rear seat cover. (Refer to Body/Seats/COVER, Seat Cushion, Third Row/Removal and Installation)(Refer To List 1).

#### **Refer To List:**

### List 1

- 23 Body / Seats, First Row / COVER, Seat Cushion, Front / Removal and Installation
- 23 Body / Seats, Second Row / COVER, Seat Cushion Second Row Center / Removal and Installation
- 23 Body / Seats, Second Row, Stow-n-Go / COVER, Seat Cushion, Stow-n-Go / Removal and Installation
- 23 Body / Seats, Third Row, Stow-n-Go / COVER, Seat Cushion / Removal and Installation
- 23 Body / Seats, Third Row, Power Folding / COVER, Seat Cushion / Removal and Installation