# **CHILTON**LIBRARY




# Seat Belt Buckle - Second Row Bench Seat

#### **SEAT BELT BUCKLE - SECOND ROW BENCH SEAT**

## **REMOVAL**

## **WARNING**

To avoid serious or fatal injury during and following any seat belt or child restraint anchor service, carefully inspect all seat belts, buckles, mounting hardware, retractors, tether straps, and anchors for proper installation, operation, or damage. Replace any belt that is cut, frayed, or torn. Straighten any belt that is twisted. Tighten any loose fasteners. Replace any belt that has a damaged or ineffective buckle or retractor. Replace any belt that has a bent or damaged latch plate or anchor plate. Replace any child restraint anchor or the unit to which the anchor is integral that has been bent or damaged. Never attempt to repair a seat belt or child restraint component. Always replace damaged or ineffective seat belt and child restraint components with the correct, new and unused replacement parts listed in the Mopar® Parts Catalog. Failure to follow these instructions may result in possible serious or fatal injury.

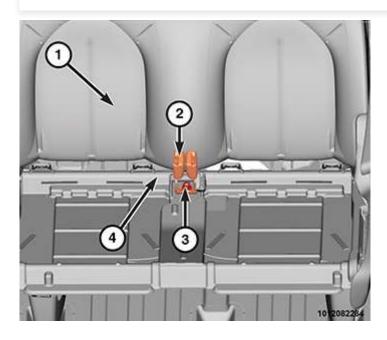


- 1. Remove the second row bench lower seat cushion and cover. (Refer to Body/Seats/COVER, Seat Cushion, Second Row/Removal and Installation)(Refer To List 1).
- 2. Remove the nut (3) that secures the double seat belt buckle lower anchor (2) to the rear edge of the cushion frame (4) on the top side of the bench seat.
- 3. Remove the double buckle unit (2) from the seat.

#### **INSTALLATION**

## **WARNING**

To avoid serious or fatal injury during and following any seat belt or child restraint anchor service, carefully inspect all seat belts, buckles, mounting hardware, retractors, tether straps, and anchors for proper installation, operation, or damage. Replace any belt that is cut, frayed, or torn. Straighten any belt that is twisted. Tighten any loose fasteners. Replace any belt that has a damaged or ineffective buckle or retractor. Replace any belt that has a bent or damaged latch plate or anchor plate. Replace any child restraint anchor or the unit to which the anchor is integral that has been bent or damaged. Never attempt to repair a seat belt or child restraint component. Always replace damaged or ineffective seat belt and child restraint components with the correct, new and unused replacement parts listed in the Mopar® Parts Catalog. Failure to follow these instructions may result in possible serious or fatal injury.

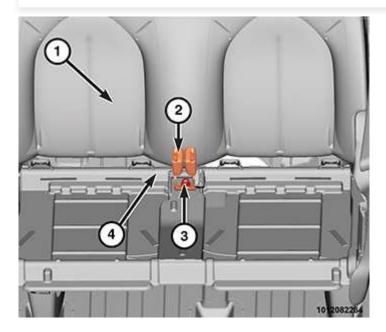

- 1. Position the double seat belt buckle lower anchor (2) to the rear edge of the cushion frame (4) on the top side of the bench seat.
- 2. Install the nut (3) that secures the double buckle unit to the seat frame. Tighten the nut to the proper (Torque Specifications).

3. Install the second row bench seat cushion and cover. (Refer to Body/Seats/COVER, Seat Cushion, Second Row/Removal and Installation)(Refer To List 1).

## **Refer To List:**

## List 1

- 23 Body / Seats, First Row / COVER, Seat Cushion, Front / Removal and Installation
- 23 Body / Seats, Second Row / COVER, Seat Cushion Second Row Center / Removal and Installation
- 23 Body / Seats, Second Row, Stow-n-Go / COVER, Seat Cushion, Stow-n-Go / Removal and Installation
- 23 Body / Seats, Third Row, Stow-n-Go / COVER, Seat Cushion / Removal and Installation
- 23 Body / Seats, Third Row, Power Folding / COVER, Seat Cushion / Removal and Installation