
CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

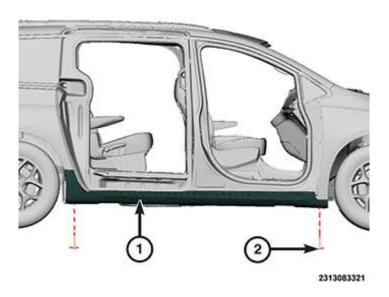

1. Remove the front and rear fasteners (2) securing the sill cladding (1).

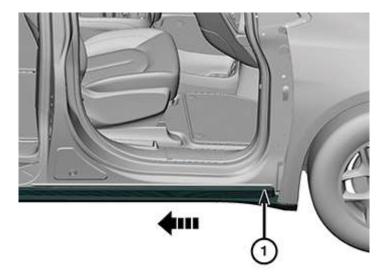

2313083322


2. Using trim remover

Remover, Trim




or equivalent, starting at the front of the sill cladding (1), release the top sill cladding clips from the body side aperture.

3. Continue working to the rear of the vehicle.

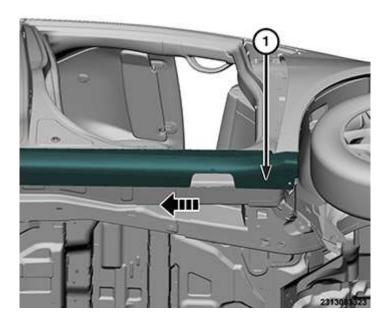


- 4. Starting at the front of the sill cladding (1), release the bottom sill cladding clips from the sill.
- 5. Continue working to the rear of the vehicle.
- 6. Remove the sill cladding from the vehicle.

INSTALLATION

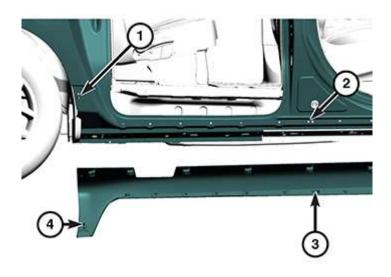


2313083324

- 1. Position the sill cladding to the vehicle.
- 2. Align the locating studs (3 and 4) on the sill cladding to the corresponding holes (1 and 2) in vehicle and seat fully.

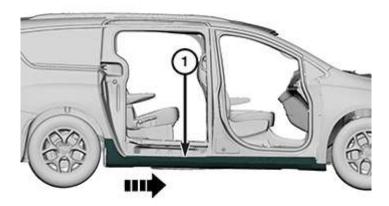

2313083325

- 3. Starting at the rear of the sill cladding, fully seat the bottom sill cladding clips into the sill, working to the front.
- 4. Starting at the rear, fully seat the top sill cladding clips into the body side aperture, working to the front.

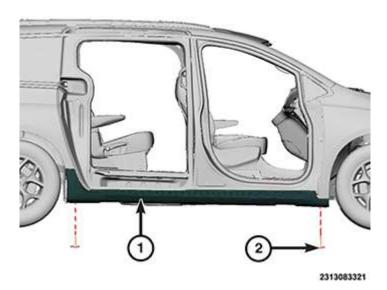

5. Install the front and rear fasteners (2) securing the sill molding (1) tighten securely.