
CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION


REMOVAL

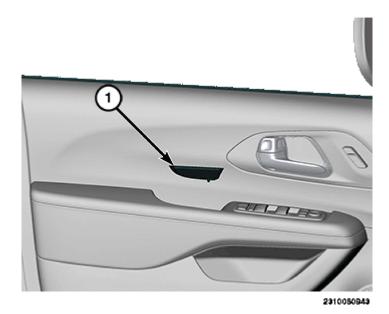


- 1. For PHEV vehicles, power down the 12-volt system (Refer to 08 Electrical/Standard Procedure).
- 2. Disconnect and isolate the negative battery cable. If equipped with an Intelligent Battery Sensor (IBS), disconnect the IBS connector first before disconnecting the negative battery cable.
- 3. Remove the window switch assembly (Refer to 08 Electrical/Power Windows/SWITCH, Power Window/Removal and Installation).
- 4. Using a small flat bladed tool or equivalent, remove the pull cup trim mat (1).

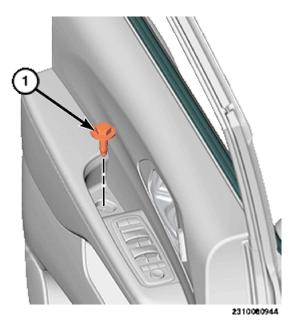


5. Remove the bolt (1).

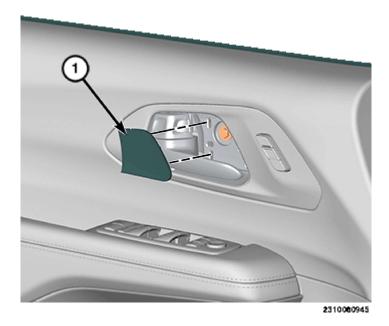

6. Using a small flat bladed tool or equivalent, remove the trim cover (1).

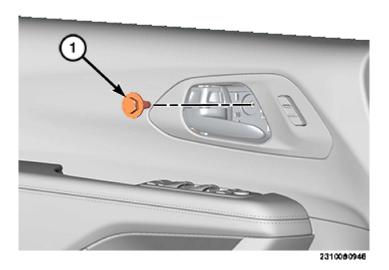

7. Remove the bolt (1).

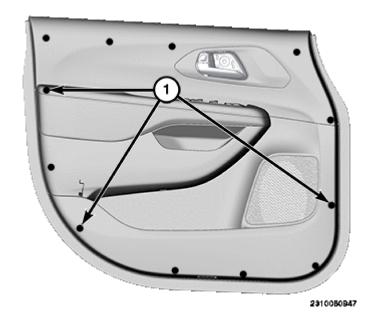


8. Using special tool


Remover, Trim



, separate the 12 attachment fasteners (1).

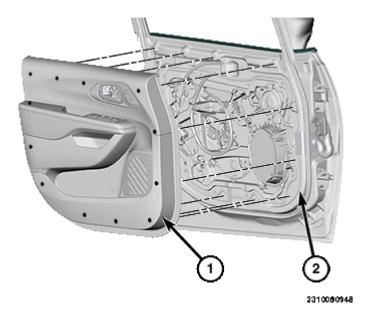


9. Separate the trim panel assembly (1) from the door (2).

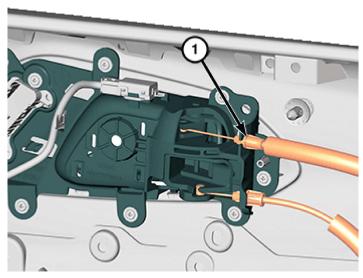

2310080937

- 10. Disconnect the trim panel wire harness connectors.
- 11. Disconnect the interior handle cables (1) and remove the trim panel assembly.

INSTALLATION

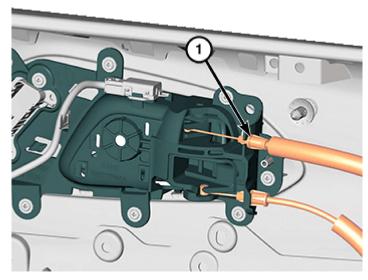


2910080937


NOTE

Prior to installing the door trim panel, replace any trim panel retaining clips that may have been damaged during the removal process.


1. Connect the interior handle cables (1) and connect the trim panel wire harness connectors.

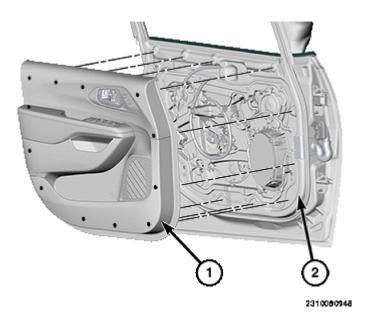


2. Position the trim panel assembly (1) back onto the door (2).

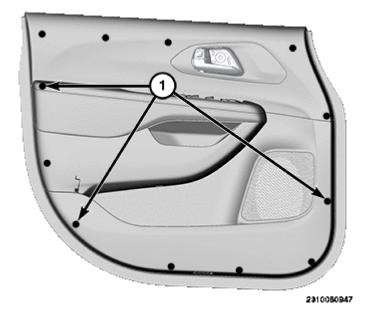


3. Seat the 12 attachment fasteners (1) fully.

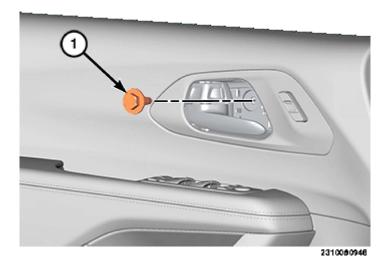

4. Install the bolt (1) and tighten to the proper (Torque Specifications).

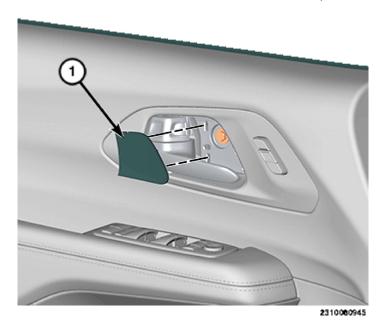

5. Install the trim cover (1) and seat fully.

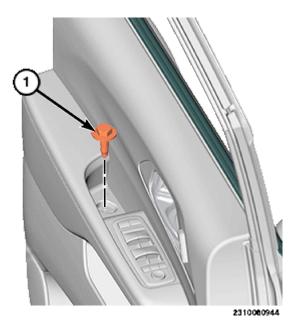

6. Install the bolt (1) and tighten to the proper (Torque Specifications).



- 7. Install the pull cup trim mat (1) and seat fully.
- 8. Install the window switch assembly (Refer to 08 Electrical/Power Windows/SWITCH, Power Window/Removal and Installation).
- 9. For PHEV vehicles, power up the 12-volt system (Refer to 08 Electrical/Standard Procedure).
- 10. Connect the negative battery cable. If equipped with an Intelligent Battery Sensor (IBS), connect the IBS connector to the negative battery cable.