
CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

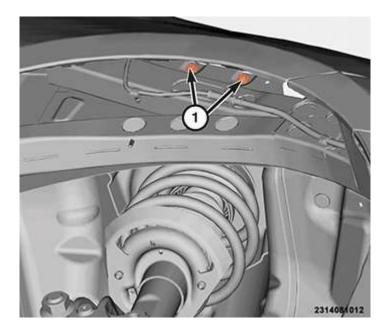


- 1. Open and support the hood with a suitable prop or block.
- 2. Using a grease pencil or equivalent, mark the position of the hood hinge to aid in installation.
- 3. Remove the front wheelhouse splash shield (Refer to 23 Body/Exterior/SHIELD, Splash/Removal and Installation)(Refer To List 1).
- 4. Remove the two hood hinge bolts (1) from the body.

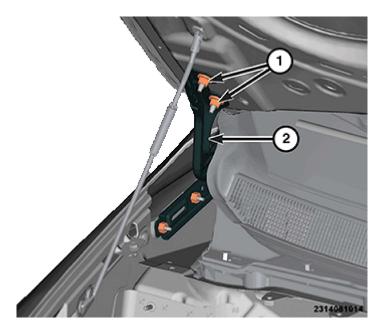


5. Remove the two hood hinge nuts (1) and the hood hinge (2).

INSTALLATION

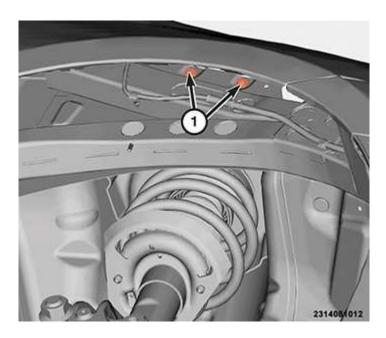

- 1. Position the hood hinge onto the vehicle and loosely install the bolts (1).
- 2. With the help of an assistant, align the hood hinge with the reference mark made previously and tighten the hood hinge to body bolts to the proper (Torque Specifications).

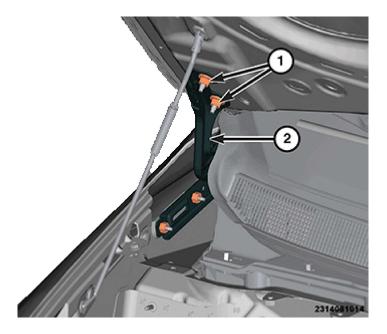

- 3. Position the hood to the hood hinge (2) and loosely install the nuts (1).
- 4. Align the hood hinge with the reference mark made previously and tighten the hood hinge to hood nuts to the proper (Torque Specifications).
- 5. Verify proper hood latch operation and fit of hood. Adjust if necessary (Refer to Body/Body Structure/Gap and Flush/Specifications).
- 6. Install the front wheelhouse splash shield (Refer to Body/Exterior/SHIELD, Splash/Removal and Installation)(Refer To List 1).

Refer To List:

List 1

- 23 Body / Exterior / SHIELD, Splash, Front Wheelhouse / Removal and Installation
- 23 Body / Exterior / SHIELD, Splash, Rear Wheelhouse / Removal and Installation