
CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION


REMOVAL

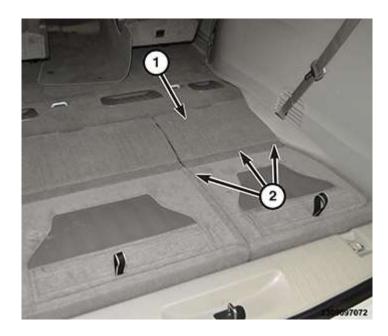

- 1. Fold the third row seat into the floor.
- 2. Using a trim stick, release the push fasteners (2) and remove the hinge cover (1).

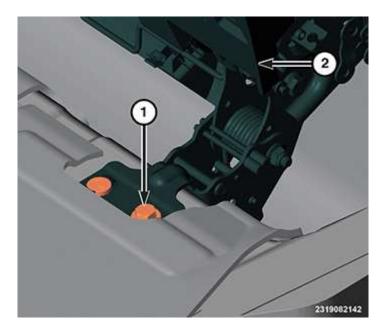


3. With the third row seat folded into the floor well, remove the top-side bolts (1) that secure the hinges to the floor.

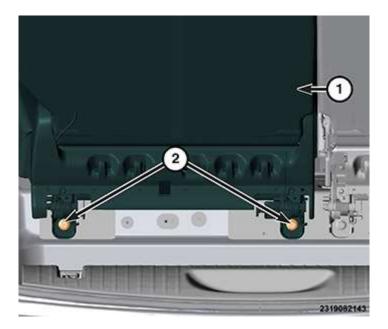


- 4. Raise the seat (1) to the upright position. Try not to latch the front leg into the floor. If latched, you will need to release the latch by hand.
- 5. Disconnect the electrical connectors.
- 6. Remove the bolts (2) that secure the hinges to the floor and remove the seat.


INSTALLATION

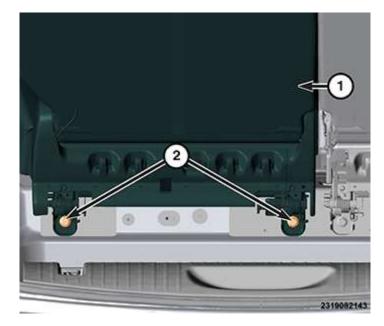

- 1. Position the third row seat (1) into the vehicle.
- 2. Connect the electrical connectors.
- 3. Install the third row seat bolts (2) and tighten to the proper (Torque Specifications).

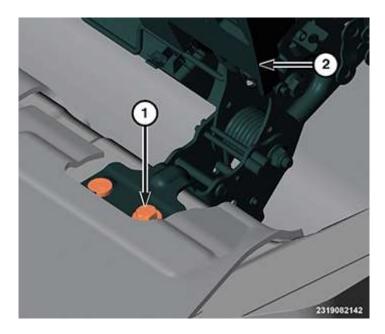

- 4. Fold the third row seat into the floor well.
- 5. Install the third row seat bolts (1) and tighten to the proper (Torque Specifications).

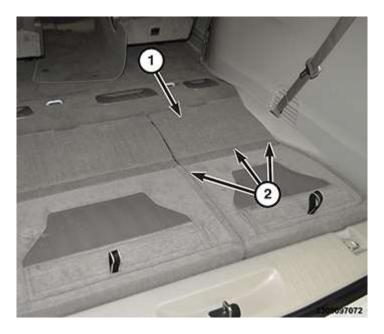

- 6. Install the hinge cover (1).
- 7. Using an appropriate scan tool, recalibrate the seats as required and verify proper seat operation (Refer to Electrical/8N Power Systems/Power Seats Standard Procedure)(Refer To List 1).

Refer To List:

List 1

- 08 Electrical / 8N Power Systems / Power Seats, Front / Standard Procedure
- 08 Electrical / 8N Power Systems / Power Seats, Third Row / Standard Procedure