
CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION


REMOVAL

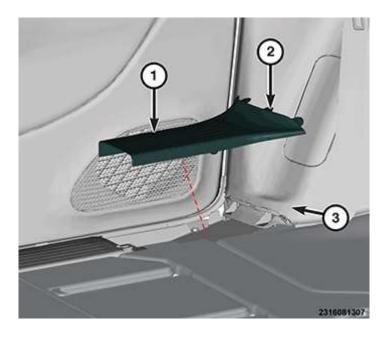

- 1. Fold the second row seats into the floor.
- 2. Using a trim stick, lift the front of the scuff plate extension (1) then pull forward to release the tabs (2) and remove.

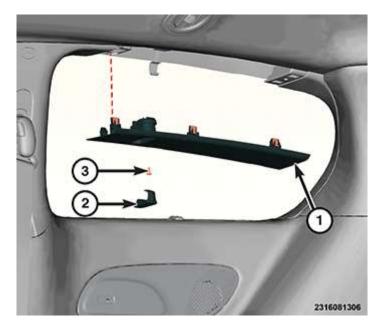


- 3. Open the coat hook (2) and remove the screw (3).
- 4. Using a trim stick or equivalent, remove the C-pillar extension trim panel (1).
- 5. Move the seat belt height adjuster to the lowest position.
- 6. Using a trim stick or equivalent, remove the bolt cover then the seat belt turning loop bolt.

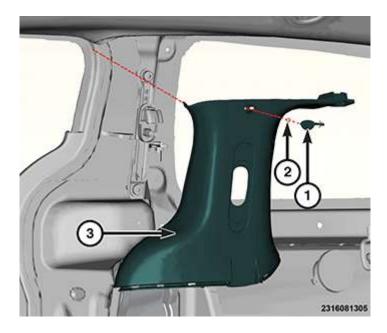

- 7. Using a small flat bladed tool, remove the screw cover (1) then the screw (2).
- 8. Using a trim stick release the front edge of the quarter trim panel and from the bottom of the C-pillar trim panel (3).
- 9. Pull at the bottom of the C-pillar trim panel and remove.

INSTALLATION

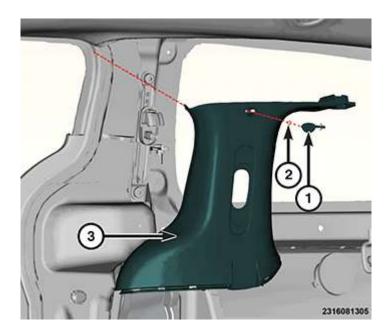


1. Align the C-pillar trim panel (3) to the seat belt height adjuster bezel and body side, then hand tap to engage the retaining clips.


NOTE

Move the seat belt height adjuster up and down to check that it works properly. If is does not work properly, remove the C-pillar trim panel and align the seat belt height adjuster bezel.

- 2. Install the screw (2) and tighten securely. Install the screw cover (1).
- 3. Engage the quarter trim panel to the C-pillar trim panel and body side.
- 4. Install the seat belt turning loop bolt and cover (Refer to Restraints/RETRACTOR, Seat Belt/Removal and Installation).

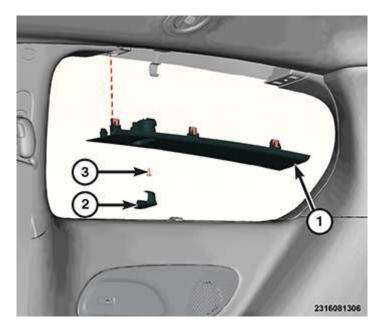

- 5. Install the C-pillar extension trim panel (1).
- 6. Install the screw (3) and tighten securely.

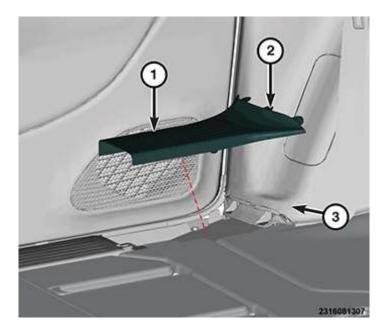

7. Install the scuff plate extension (1).