CHILTONLIBRARY




Removal & Installation


REMOVAL AND INSTALLATION

REMOVAL

1. Remove the right rear quarter trim panel. (Refer to 23 - Body/Interior/PANEL, Quarter Trim, Rear/Removal and Installation).

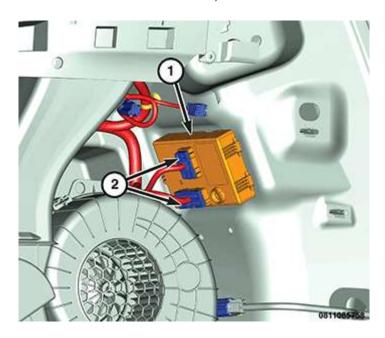


2. Disconnect the wire harness connectors (2) from the Power LiftGate Module (PLGM) (1).

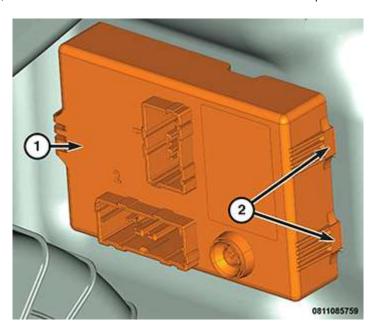


- 3. Depress the alignment mounting tab (1) and lift up on the that section of the module and pull slightly aft to disengage the rear alignment mounting tabs (2).
- 4. Remove the PLGM from the vehicle.

INSTALLATION

1. Position the power liftgate control module to the rear quarter panel for installation.

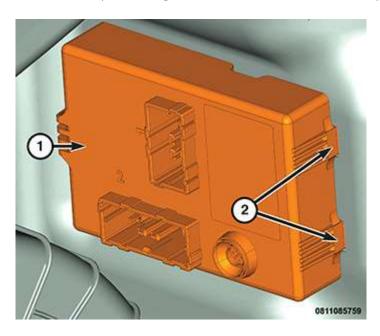

- 2. Insert the alignment mounting tab (1) into the locating slot on the inner quarter panel.
- 3. Seat the PLGM against the panel, verifying that the rear alignment mounting tabs (2) are engaged to the panel.

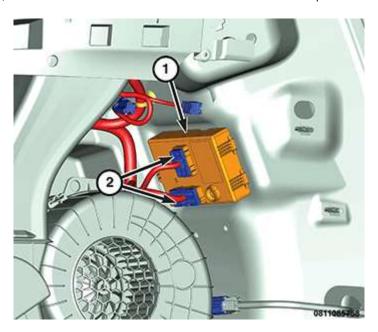

- 4. Connect the wire harness connectors (2) to the PLGM (1).
- 5. Install the right rear quarter trim panel. (Refer to Body/Interior/PANEL, Quarter Trim, Rear/Removal and Installation).