
CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

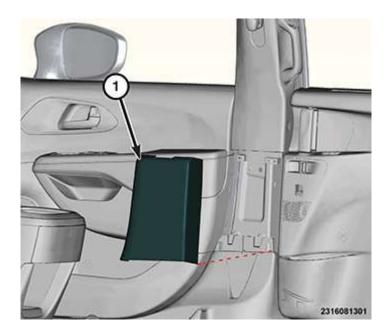


- 1. Move the front seat to the full forward position.
- 2. Spread the bottom of the B-pillar extension (1), then pull out to release the retaining clips and remove.

NOTE

Disconnect the front seat position switch, if equipped.

- 3. Move the seat belt height adjuster to the lowest position.
- 4. Using a trim stick or equivalent, remove the bolt cover then the seat belt turning loop bolt.

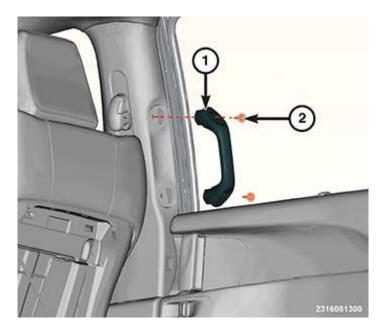

5. Using a small flat bladed tool, remove the bolt covers then the grab handle bolts (2). Remove the grab handle (1).



6. Pull at the bottom (2) of the upper B-pillar trim panel (3) to release the retaining clips, then lower it to remove the upper tabs (1) from the body.

NOTE

Disconnect the power door switch, if equipped.


INSTALLATION




- 1. Insert the upper tabs (1) of the upper B-pillar trim panel (3) into the body.
- 2. Align the seat belt height adjuster bezel and hand tap to engage the retaining clips.

NOTE

Move the seat belt height adjuster up and down to check that it works properly. If it does not work properly, remove the B-pillar trim and align the seat belt height adjuster bezel.

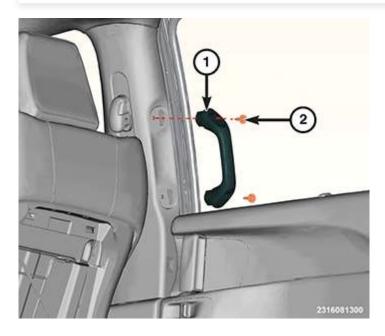

3. Install the grab handle bolts (2) and tighten securely. Install the bolt covers.

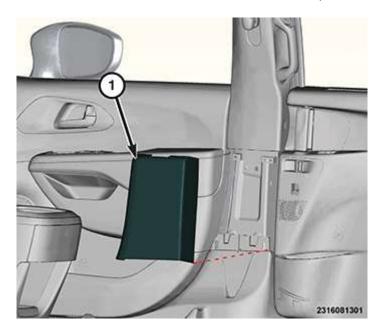

- 4. Position the B-pillar extension (1) and hand tap to engage the retaining clips.
- 5. Install the front seat belt turning loop and cover (Refer to Restraints/RETRACTOR, Seat Belt/Removal and Installation).