# **CHILTON**LIBRARY



# **Removal & Installation**


#### **REMOVAL AND INSTALLATION**

### **REMOVAL**


### WARNING

Disable the airbag system before attempting any front seat diagnosis or service. Disconnect and isolate the negative battery (ground) cable and wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to follow these instructions may result in accidental airbag deployment and possible serious or fatal injury.

1. Disconnect and isolate the negative battery cable.

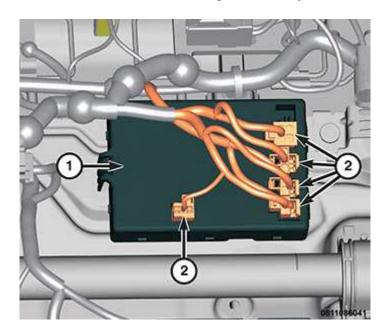

2. Disconnect the electrical connectors (2) from the Heated Seat Module (HSM) (1).

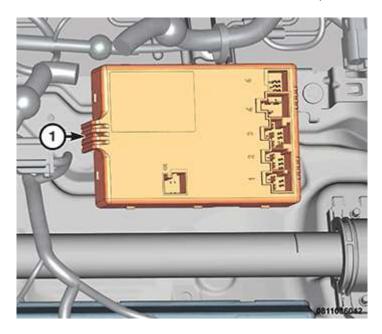


- 3. Disengage the retaining tab (1) that secures the rear of the HSM to the bracket.
- 4. Disengage the two front retaining tabs from the bracket and remove the HSM.

#### **INSTALLATION**


## WARNING

Disable the airbag system before attempting any front seat diagnosis or service. Disconnect and isolate the negative battery (ground) cable and wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to follow these instructions may result in accidental airbag deployment and possible serious or fatal injury.

1. Position the Heated Seat Module (HSM) to the bracket and engage the two front retaining tabs. Make sure the front retaining tabs are correctly engaged to the bracket.

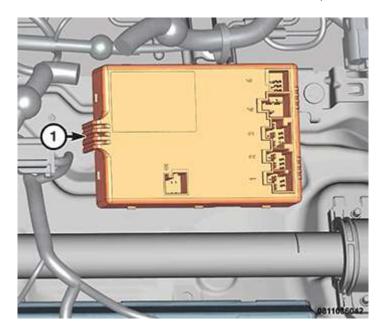

2. Engage the rear HSM retaining tab (1). Make sure the rear retaining tab is fully engaged to the bracket.

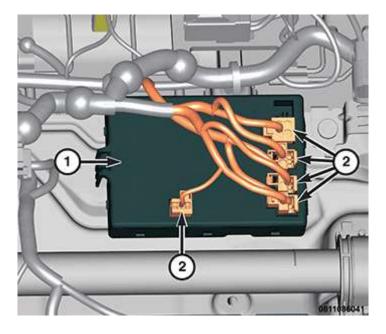

- 3. Connect the electrical connectors (2) to the HSM (1).
- 4. Connect the negative battery cable.