
# **CHILTON**LIBRARY



# **Removal & Installation**


#### **REMOVAL AND INSTALLATION**

## **REMOVAL**

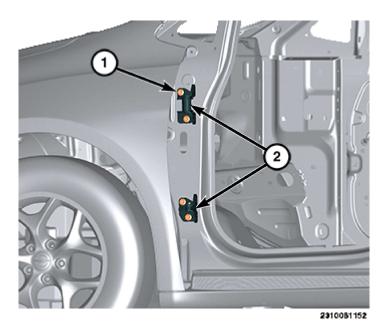

- 1. Remove the door from the vehicle (Refer to Body/Door Front/DOOR/Removal and Installation).
- 2. Mark the upper or lower hinge (1) location on the outside of the lower A-pillar to aid installation.
- 3. Remove the fasteners (2) that secure the hinge to the outside of the lower A-pillar.
- 4. Remove the hinge from the A-pillar.

## **INSTALLATION**

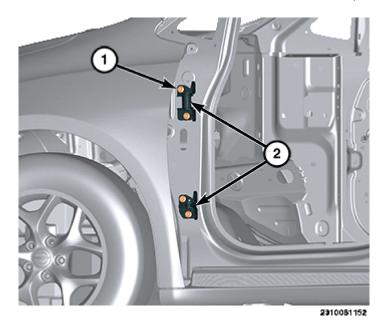

NOTE

A suitable body sealant should be used when removing or moving the hinges.

- 1. Position and align the upper or lower hinge (2) to the outside face of the lower A-pillar using the reference marks made when removing and install the fasteners (1).
- 2. Tighten the fasteners to the proper (Torque Specifications).
- 3. Install the front door onto the vehicle (Refer to 23 Body/Door Front/DOOR/Removal and Installation).
- 4. Adjust the door if necessary (Refer to Body/Door Front/DOOR/Adjustments).