
CHILTONLIBRARY



Removal & Installation


REMOVAL AND INSTALLATION

REMOVAL

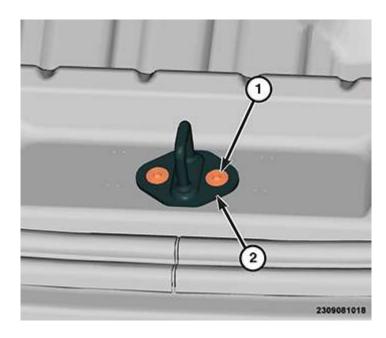

- 1. Remove the liftgate sill plate (Refer to Body/Interior/PLATE, Scuff, Liftgate Sill/Removal and Installation)
- 2. Mark the liftgate striker (2) location on the inside of the liftgate opening with a grease pencil to aid during installation.
- 3. Remove the two bolts (1) and the liftgate striker.

INSTALLATION

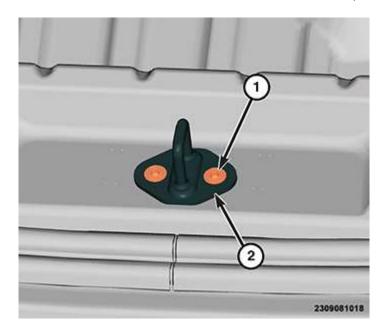

- 1. Position the liftgate striker (2) to the body and align using the marks made during removal.
- 2. Install two bolts (1) and tighten the liftgate striker bolts to the proper (Torque Specifications).
- 3. Adjust the liftgate striker position as necessary to achieve proper liftgate latch operation.
- 4. Install the liftgate sill plate (Refer to Body/Interior/PLATE, Scuff, Liftgate Sill/Removal and Installation).