
CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION


REMOVAL

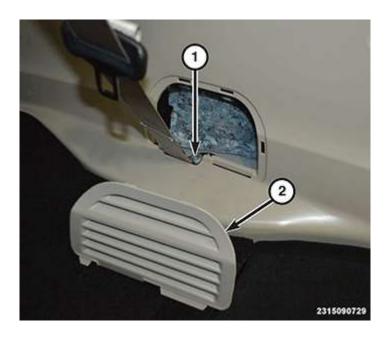

- 1. Observe all warnings for seat belt retractor removal and installation (Refer to Restraints/RETRACTOR, Seat Belt/Removal and Installation).
- 2. If servicing the right side D-pillar, remove the cover panel (2) in the quarter trim panel for the lower seat belt anchor (1) and unbolt the lower seat belt anchor.

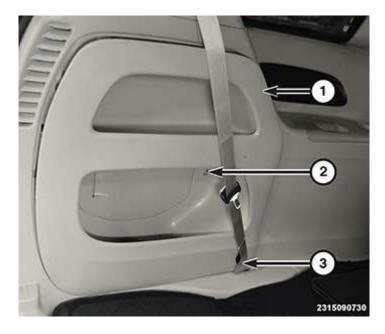


3. If servicing the left side D-pillar, remove the screws (2) then the cover panel (1) in the quarter trim panel for the lower seat belt anchor (3) and unbolt the lower seat belt anchor.

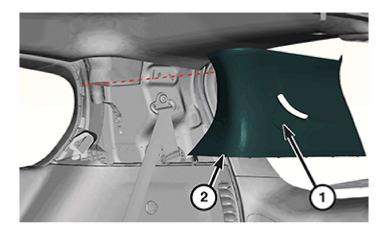


2316081304

- 4. Remove the seat belt cover (1) by hand.
- 5. Using a trim stick or equivalent, release the retaining clips at the rear and top of the D-pillar trim panel (2).
- 6. Using a trim stick release the bottom of the D-pillar trim panel from the quarter trim panel, then pull at the front edge to release the front retaining clips.
- 7. If servicing the left side D-pillar, disconnect the liftgate switch.

8. Using a flat bladed tool, press the tab to disengage the airbag tether and slide it out of D-pillar trim panel.

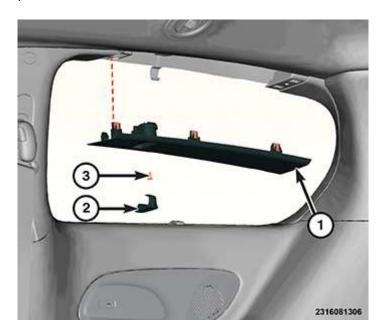


- 9. If necessary to remove the C-pillar extension (1), open the coat hook (2) and remove the screw (3).
- 10. Using a trim stick or equivalent, remove the C-pillar extension trim panel.

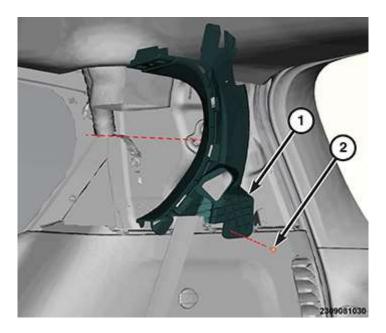


- 11. If necessary to remove the D-pillar extension (1), first remove the rear duct tube and the screw (2).
- 12. Remove the curtain airbag push-fastener that is installed through the D-pillar extension, then unclip and lower the extension to remove.


INSTALLATION

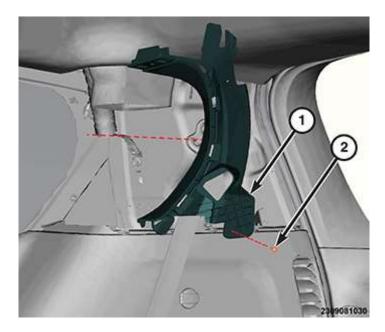

- 1. Observe all warnings for seat belt retractor removal and installation (Refer to Restraints/RETRACTOR, Seat Belt/Removal and Installation).
- 2. If necessary, install the D-pillar extension (1) and the screw (2). Tighten the screw securely.
- 3. Install the curtain airbag push-fastener and the rear duct tube.

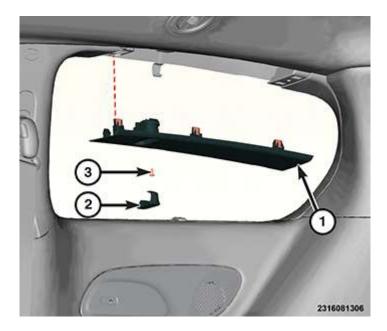

4. If necessary, install the C-pillar extension (1), then the coat hook (2). Tighten screw (3) securely.

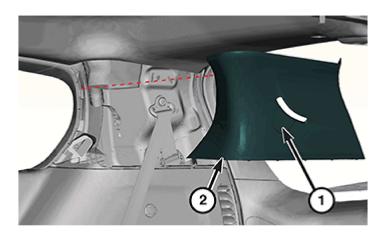


2316081304

- 5. Route the seat belt through the D-pillar trim panel (2).
- 6. Install the airbag tether to the backside of the D-pillar trim panel.
- 7. If servicing the left side D-pillar, connect the liftgate switch.
- 8. Install the front edge of the D-pillar trim panel to the body.
- 9. Engage the bottom of the D-pillar trim panel into the quarter trim panel.
- 10. Engage the retaining clips at the rear and top of the D-pillar trim panel.


NOTE

Make sure the D-pillar trim panel engages into the weatherstrip properly.

- 11. Install the seat belt cover (1).
- 12. Install the lower seat belt anchor (Refer to 10 Restraints/RETRACTOR, Seat Belt/Removal and Installation).

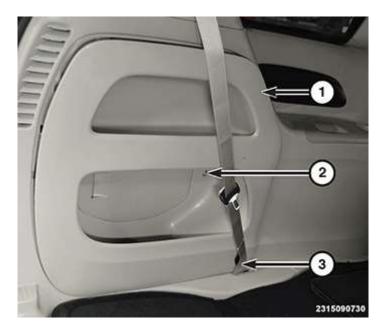

13. If servicing the left side D-pillar, install the cover panel (1) in the quarter trim panel.

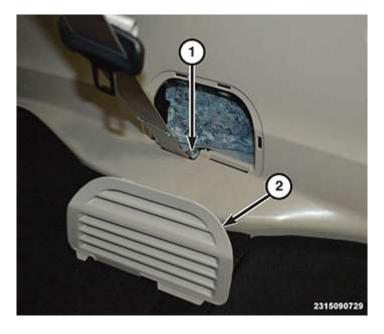

14. If servicing the right side D-pillar, install the cover panel (2) in the quarter trim panel.