CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

NOTE


The seat can be service while in vehicle.



- 1. Remove the 2nd row center seat, if equipped.
- 2. Using a hook tool, remove the clip from behind the recline handle (2) then pull outward to remove the handle.
- 3. Remove the two screws (1).
- 4. Using a trim stick, release the front of the outboard side shield (3) then lift and remove.



- 5. Remove the screw (2) at the backside of the inboard side shield (1).
- 6. Using a trim stick, release the front of the inboard side shield then lift and remove.

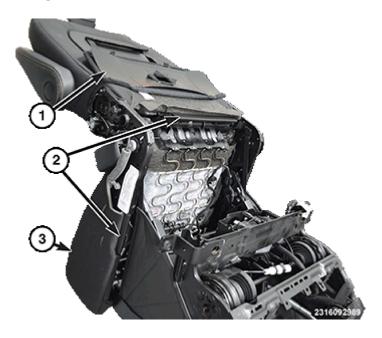

- 7. Release the J-hook and open the lower cover panel (1).
- 8. Release the J-hooks (2) from the rear and sides of the seat cushion.
- 9. Release the trim J-hook at the front of the seat cushion, and remove the push fasteners at the front of the seat cushion.
- 10. Disconnect the wire harness connector for the seat heater, if equipped.
- 11. Remove the seat cover (3) and the seat foam as an assembly, from the seat frame.



NOTE

Be careful not to damage the clips molded into the seat cushion. If the clips or cushion are damaged during removal, replace the cushion.

- 12. Pull the seat cover (1) away from the seat foam (2), releasing the hook and loop fasteners (4) first.
- 13. Using a hook tool, start at one end to release the clip strips (3) and the seat cover.

INSTALLATION



1. Position the seat cover (1) onto the seat foam (2) and engage the clip strips (3).

2. Pull the seat cover tight and engage the hook and loop fasteners (4).



- 3. Position the cushion assembly (3) onto the seat frame.
- 4. Pull the seat cover tight and fasten all the J-hook fasteners (2) and push fasteners at the front of the seat cushion.
- 5. Close and fasten the lower cover panel (1).



6. Install the inboard side shield (1) and screw (2).



- 7. Install the outboard side shield (3) and screws (1).
- 8. Install the recline handle (2).