CHILTONLIBRARY



Body Opening Dimensions

Listen Dictionary Translate

BODY OPENING DIMENSIONS


NOTE

Body opening dimensions are listed in metric scale millimeter (mm). Principal Locating Points (PLP), fastener locations, and holes are measured to center, unless noted otherwise.


Position the vehicle on a level work surface. Remove any weatherstrips, door strikers or any other parts that may interfere with the reference point.

DESCRIPTION	FIGURE
Windshield Opening	Figure 1
Front Door Opening	Figure 2
Sliding Door and Quarter Glass Opening	Figure 3
Liftgate Opening	Figure 4

Windshield Opening

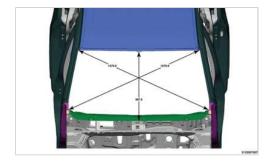


Front Door Opening

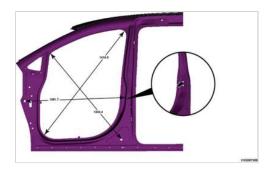

Sliding Door and Quarter Glass Opening



Liftgate Opening

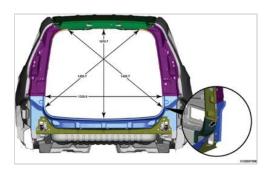

BODY OPENING DIMENSIONS


NOTE

Body opening dimensions are listed in metric scale millimeter (mm). Principal Locating Points (PLP), fastener locations, and holes are measured to center, unless noted otherwise.


Position the vehicle on a level work surface. Remove any weatherstrips, door strikers or any other parts that may interfere with the reference point.

DESCRIPTION	FIGURE
Windshield Opening	Figure 1
Front Door Opening	Figure 2
Sliding Door and Quarter Glass Opening	Figure 3
Liftgate Opening	Figure 4


Windshield Opening

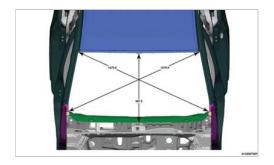

Front Door Opening

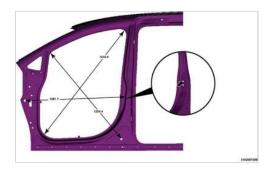

Sliding Door and Quarter Glass Opening

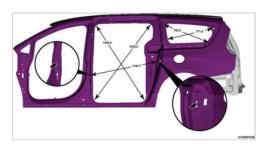

Liftgate Opening

