
# **CHILTON**LIBRARY




## **Removal & Installation**

### **REMOVAL AND INSTALLATION**


### **REMOVAL**

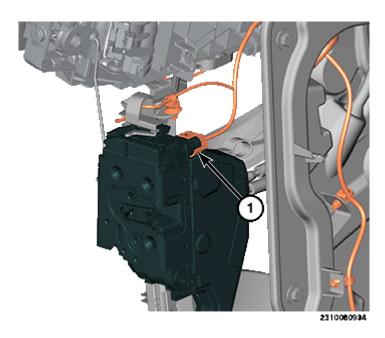


- 1. Remove the carrier plate (Refer to Body/Door Front/PLATE, Carrier/Removal and Installation).
- 2. Disconnect the wire harness connector (1).

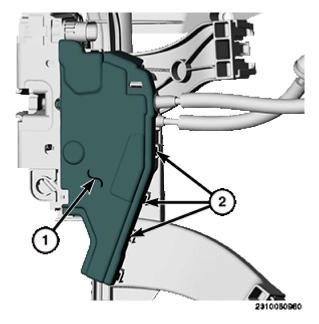

3. Release the latch cover tabs (2) and remove the latch cover (1).

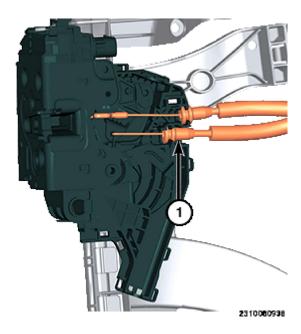


4. Disconnect handle and lock cables (1) and remove the latch assembly.

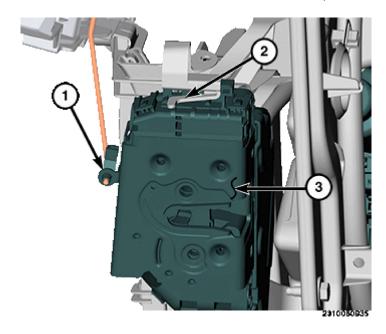


- 5. Release the clip (1) and disconnect the link rod.
- 6. Release the clip (2) and remove the latch assembly (3) from the presenter bracket.


### **INSTALLATION**

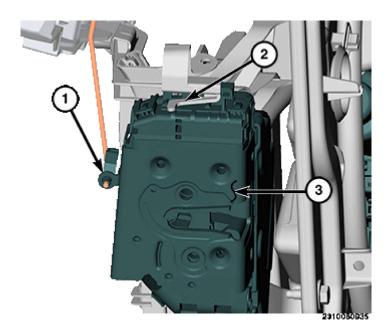


- 1. Install the latch assembly (3) onto the presenter bracket and seat the clip (2) fully.
- 2. Connect the link rod and seat the attachment clip (1) fully.

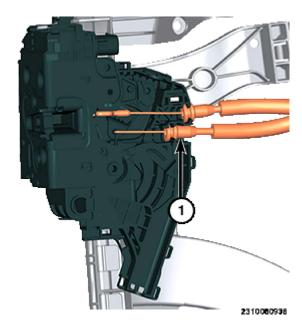

3. Connect the handle and lock cables (1).

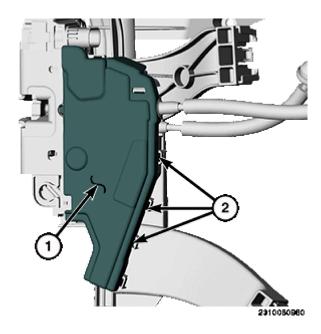

4. Install the latch cover (1) and seat the latch cover retaining tabs (2) fully.

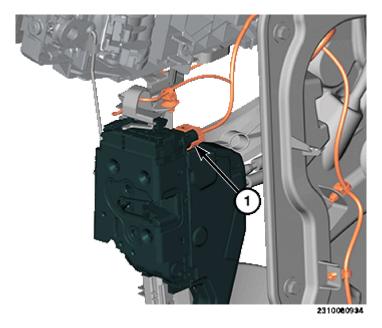

- 5. Connect the wire harness connector (1).
- 6. Install the carrier plate (Refer to Body/Door Front/PLATE, Carrier/Removal and Installation).