
CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

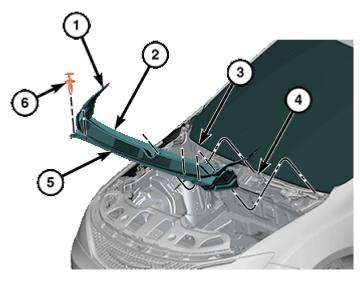

2320002773

- 1. Remove the wiper arms (Refer to Electrical/8R Wipers/Washers/ARM, Wiper/Removal and Installation).
- 2. Using a trim stick

Trim Stick



or equivalent, release the cowl end cap retainers (1) from the fender edge.

3. Push down and inward to release the cowl panel end cap rear hook from the fender edge.


- 4. Using trim stick or equivalent, release the cowl end cap retainers from the cowl panel cover.
- 5. Remove the cowl panel end cap (1) from the vehicle.
- 6. Remove the four push pin retainers (6),

CAUTION

Use care when working with the retaining channel on the bottom of the windshield. If the retaining channel is damaged the windshield will require replacement.

- 7. Lift the front (5) of the cowl panel cover and carefully push it towards the windshield releasing it (2) from the cowl frame (3).
- 8. Remove the cowl panel cover from the vehicle.

INSTALLATION

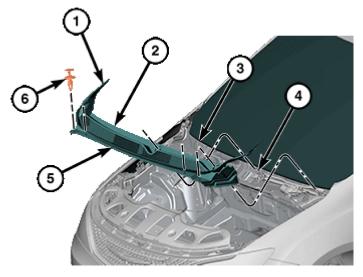

2320002773

CAUTION

Use care when working with the retaining channel on the bottom of the windshield. If the retaining channel is damaged the windshield will require replacement.

- 1. Position and align and the cowl panel cover (5) onto the vehicle.
- 2. Insert the rear of the cowl panel cover (2) into the cowl frame (3) fully.
- 3. Insert the four push pin retainers (6)

- 4. Insert the cowl panel end cap (1) retainers into the cowl panel cover.
- 5. Tuck the cowl panel end cap rear hook onto the fender edge.
- 6. Insert the cowl panel end cap retainers into the fender edge.
- 7. Install the wiper arms, (Refer to Electrical/8R Wipers/Washers/ARM, Wiper/Removal and Installation).