
CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION


REMOVAL

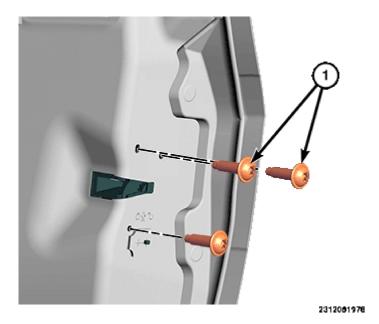

- 1. Position the glass in the full up position.
- 2. Open the door and remove the rear latch assembly bolts (1).

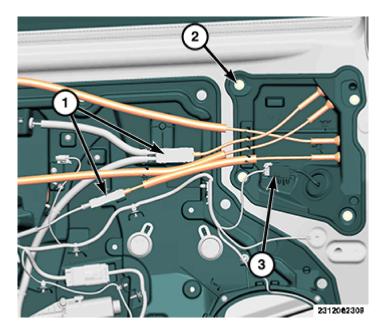


- 3. Remove the interior handle (Refer to Body/Doors Sliding/HANDLE, Interior/Removal and Installation). (Refer To List 1)
- 4. Disconnect the wire harness connector (3).
- 5. Open the cable covers (1) and disconnect the control cables, (Refer to Body/Doors Sliding/CABLE/Removal and Installation).(Refer To List 2)
- 6. Remove the four bolts (2).

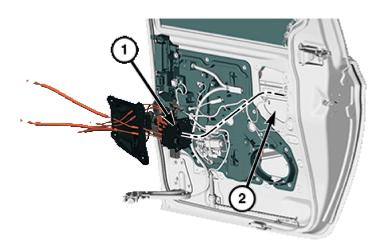

2312061998


7. Separate the carrier plate assembly from the door, move the assembly rearward in the door and remove the latch presenter assembly (1) from the door interior (2) with the carrier plate.

INSTALLATION

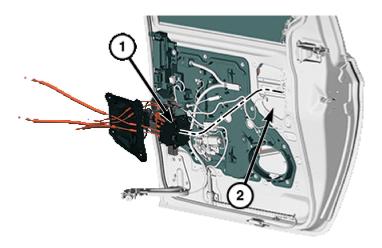


2312081998

1. Position the latch presenter assembly (1) back into the door cavity (2) and install the carrier plate assembly.

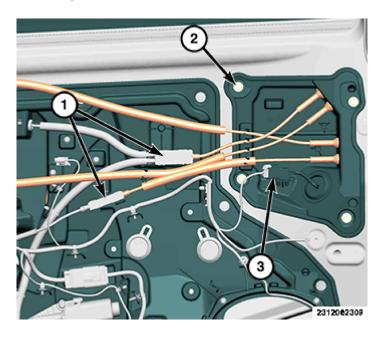

- 2. Install the four bolts (2) and tighten to the proper (Torque Specifications).
- 3. Connect the wire harness connector (3).
- 4. Connect the cables (1) (Refer to Body/Doors Sliding/CABLE/Removal and Installation).(Refer To List 2)

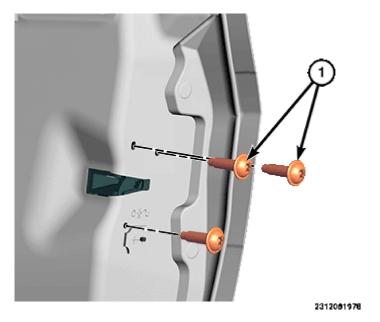

- 5. Install the rear latch mounting screws (1) and tighten to the proper (Torque Specifications).
- 6. Install the interior handle (Refer to 23 Body/Doors Sliding/HANDLE, Interior/Removal and Installation).(Refer To List 1)

Refer To List:

List 1

- 23 Body / Doors Sliding / HANDLE, Exterior / Removal and Installation
- 23 Body / Doors Sliding / HANDLE, Interior / Removal and Installation

List 2

- 23 Body / Doors Sliding / CABLE, Front Latch / Removal and Installation
- 23 Body / Doors Sliding / CABLE, Hold Open Latch / Removal and Installation
- 23 Body / Doors Sliding / CABLE, Inside Handle / Removal and Installation
- 23 Body / Doors Sliding / CABLE, Lock / Removal and Installation
- 23 Body / Doors Sliding / CABLE, Outside Handle / Removal and Installation