
CHILTONLIBRARY




Rear Carpet

REAR CARPET

REMOVAL

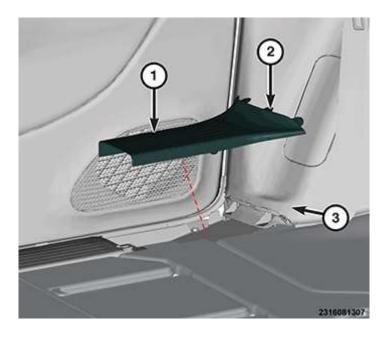


- 1. Stow the third row seats.
- 2. Stow the second row Stow-n-Go seats.
- 3. Using a trim stick or equivalent, lift the front edge of the scuff plate extension (1) then pull forward to remove the tabs (2) from the quarter trim panel (3).

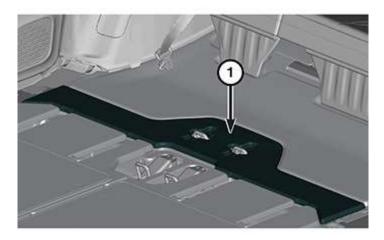

2319082137


4. Using a trim stick or equivalent, release the retaining clips and remove the rear center filler panel (1).

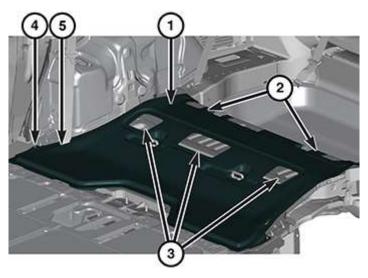

2319082141


- 5. Using a trim stick or equivalent, release the retaining clips at the **rear** of the floor vent bezels (3) and remove.
- 6. Remove the plastic nut fasteners (2 and 4), then the rear floor carpet (1).

INSTALLATION

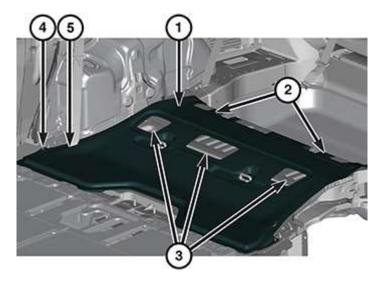


2319082141

- 1. Position the rear floor carpet (1) into the vehicle.
- 2. Install the plastic nut fasteners (2 and 4).
- 3. Install the floor vent bezels (3).

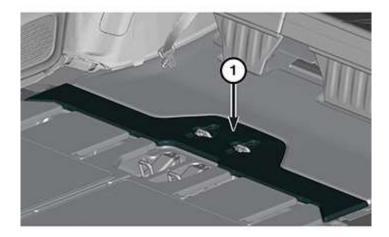

2319082137

4. Install the rear center filler panel (1).

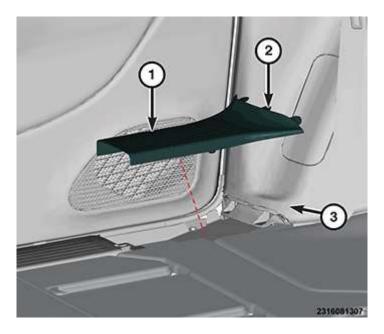

5. Install the scuff plate extension (1).