
CHILTONLIBRARY



Diagnosis & Testing - Sunroof Switch

DIAGNOSIS AND TESTING - SUNROOF SWITCH

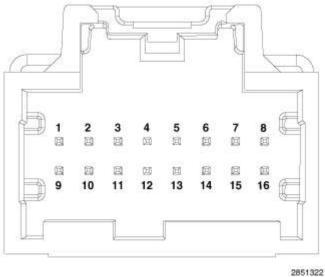

- 1. Disconnect and isolate the battery negative cable.
- 2. Remove the overhead console from the headliner. (Refer to Body/Interior/CONSOLE, Overhead/Removal and Installation).
- 3. Disconnect the overhead wire harness connector from the overhead console connector receptacle.
- 4. Using a multimeter, test the continuity between the terminals of the overhead console connector receptacle while actuating the power sunroof switch or power sunshade switch as shown in the Sunroof Switch Tests or Sunshade Switch Tests table.

SUNROOF SWITCH TESTS	
SWITCH POSITION	CONTINUITY BETWEEN PINS
OFF	NO CONTINUITY
OPEN	9 and 12
CLOSE	11 and 12
VENT	10 and 12

SUNSHADE SWITCH TESTS	
SWITCH POSITION	CONTINUITY BETWEEN PINS
OFF	NO CONTINUITY
OPEN	12 and 14
CLOSE	12 and 13

5. If either switch fails any of the tests, replace the overhead console and both switches as a unit as required.