# **CHILTON**LIBRARY




# **Removal & Installation**

#### **REMOVAL AND INSTALLATION**

# **REMOVAL**


# WARNING

To avoid serious or fatal injury on vehicles equipped with airbags, disable the Supplemental Restraint System (SRS) before attempting any steering wheel, steering column, airbags, airbag curtains, knee blocker, seat belt tensioner, impact sensor or instrument panel component diagnosis or service. Disconnect the Intelligent Battery Sensor (IBS)/negative battery cable assembly from the negative battery post, then wait two minutes for the system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the SRS. Failure to take the proper precautions could result in accidental airbag deployment.

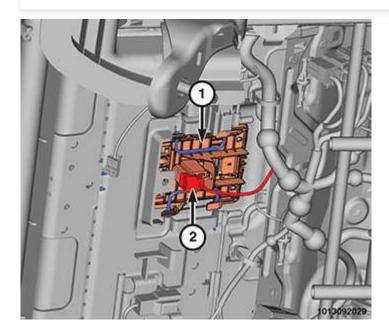

1. Remove the passenger side front seat from the vehicle. (Refer to Body/Seats/SEAT, Front/Removal and Installation)(Refer To List 1).

- 2. Remove the side shields from the front seat. (Refer to 23 Body/Seats/SIDE SHIELDS, Seat Cushion, Front/Removal and Installation).
- 3. Remove the front seat cushion and cover. (Refer to 23 Body/Seats/COVER, Seat Cushion, Front/Removal and Installation)(Refer To List 2)
- 4. Reach under the back of the front seat cushion frame to access and disconnect the seat wire harness (2) connector from the Occupant Detection Sensor (ODS) (1).

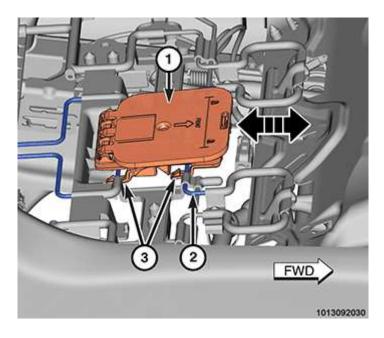


- 5. Carefully pull the ODS (1) toward the front of the seat to disengage the integral mounting latches (3) from the seat wire frame (2).
- 6. Remove the ODS (1) from the seat frame.


# **INSTALLATION**

# **WARNING**

To avoid serious or fatal injury on vehicles equipped with airbags, disable the Supplemental Restraint System (SRS) before attempting any steering wheel, steering column, airbags, airbag curtains, knee blocker, seat belt tensioner, impact sensor or instrument panel component diagnosis or service. Disconnect the Intelligent Battery Sensor (IBS)/negative battery cable assembly from the negative battery post, then wait two minutes for the system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the SRS. Failure to take the proper precautions could result in accidental airbag deployment.

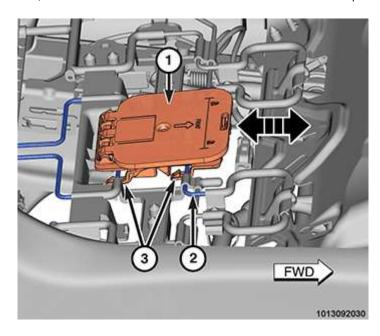

- 1. Position the ODS (1), aligning the integral mounting latches (3) to the seat wire frame (2).
- 2. Carefully push the ODS (1) toward the rear of the seat to engage the integral mounting latches (3) with the seat wire frame (2). Be certain all 4 integral mounting latches are attached to the seat wire frame.

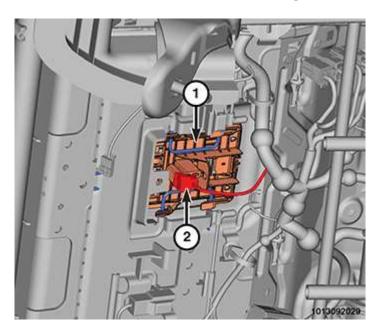

- 3. Reach under the back of the front seat cushion frame to access and connect the seat wire harness connector (2) to the ODS (1).
- 4. Install the seat cushion and cover. (Refer to 23 Body/Seats/COVER, Seat Cushion, Front/Removal and Installation)(Refer To List 2)
- 5. Install the side shields onto the front seat. (Refer to 23 Body/Seats/SIDE SHIELDS, Seat Cushion, Front/Removal and Installation).

6. Install the passenger side front seat into the vehicle. (Refer to Body/Seats/SEAT, Front/Removal and Installation)(Refer To List 1).

#### **Refer To List:**

#### List 1

- 23 Body / Seats, First Row / SEAT, Front / Removal and Installation
- 23 Body / Seats, Second Row, Stow-n-Go / SEAT, Stow-n-Go / Removal and Installation
- 23 Body / Seats, Third Row, Stow-n-Go / SEAT / Removal and Installation
- 23 Body / Seats, Third Row, Power Folding / SEAT / Removal and Installation

#### List 2

- 23 Body / Seats, First Row / COVER, Seat Cushion, Front / Removal and Installation
- 23 Body / Seats, Second Row / COVER, Seat Cushion Second Row Center / Removal and Installation
- 23 Body / Seats, Second Row, Stow-n-Go / COVER, Seat Cushion, Stow-n-Go / Removal and Installation
- 23 Body / Seats, Third Row, Stow-n-Go / COVER, Seat Cushion / Removal and Installation
- 23 Body / Seats, Third Row, Power Folding / COVER, Seat Cushion / Removal and Installation