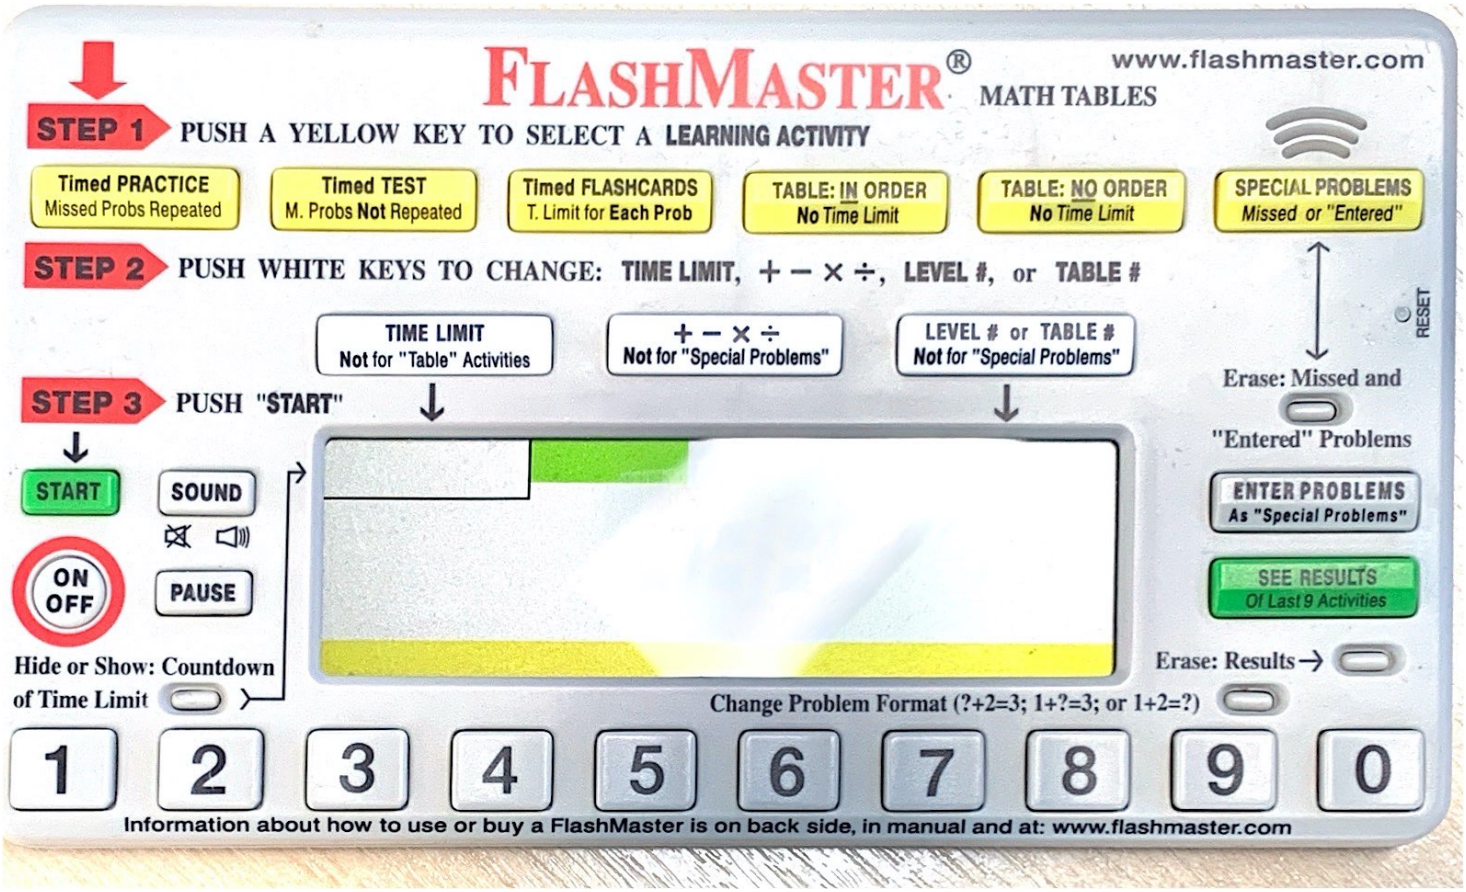
FLASHMASTER®
www.flashmaster.com
MATH TABLES
STEP 1 PUSH A YELLOW KEY TO SELECT A LEARNING ACTIVITY
Timed PRACTICE
Missed Probs Repeated
Timed TEST
M. Probs Not Repeated
Timed FLASHCARDS
T. Limit for Each Prob
TABLE: IN ORDER
No Time Limit
TABLE: NO ORDER
No Time Limit
SPECIAL PROBLEMS
Missed or "Entered"
STEP 2 PUSH WHITE KEYS TO CHANGE: TIME LIMIT, + − × ÷, LEVEL #, or TABLE #
TIME LIMIT
Not for "Table" Activities
+ − × ÷
Not for "Special Problems"
LEVEL # or TABLE #
Not for "Special Problems"
RESET
Erase: Missed and
"Entered" Problems
STEP 3 PUSH "START"
START
SOUND
ON OFF
PAUSE
ENTER PROBLEMS
As "Special Problems"
SEE RESULTS
Of Last 9 Activities
Hide or Show: Countdown of Time Limit
Erase: Results
Change Problem Format (?+2=3; 1+?=3; or 1+2=?)
1 2 3 4 5 6 7 8 9 0
Information about how to use or buy a FlashMaster is on back side, in manual and at: www.flashmaster.com

TO OPEN:
LOOSEN SCREW
PUSH

USE 2 ALKALINE 1.5V BATTERIES SIZE AA (LR6 UM-3)

S/N:MT1A 03/11/B 073087

MODEL MT1A
U. S. Pat. 6,724,355
FOR AGES 7 & UP

BUY AT: www.flashmaster.com OR: 1-800-884-3531
Made for Flashmaster LLC, Box 9321, Jackson, WY 83002
by Tronicbros & Eclat Createurs Holdings, Hunghom, Kowloon, Hong Kong in 03/11 at USmart Electronics Products factory, Tangxia Town, Dongguan, Guandong, China (1 run)
MADE IN CHINA FABRIQUE EN CHINE

Explanation of "Learning Activities" (See also manual & website)

TABLE: IN ORDER: **No** time limit. You select: (1) operation (+ , − , × , or ÷) and (2) "**Table**" number. All problems in the selected "Table" given in **ascending and then descending order.** Missed problems repeated until answered correctly. Correct answer shown if problem missed twice in a row.
TABLE: NO ORDER: Same as "TABLE: IN ORDER" except: (1) problems (belonging to the "Table" that you selected) are given in **random order** and (2) missed problems are repeated **again** after you answer the next different problem correctly.
PRACTICE: You select: (1) per-**activity** time limit, (2) operation (+ , − , × , or ÷) and (3) "**Level**" number. Problems given in **random order**. "**Level**" number controls the different frequencies with which different problems will be presented. Missed problems repeated as in "TABLE: NO ORDER".
TEST: Like "PRACTICE". Main differences: missed problems not repeated; and "CORRECT" and "NOT CORRECT" **visual** prompts not displayed. To give the exact same "Test" (or "Flashcards") on two or more FlashMasters, push the same number key on each just before pushing the "START" key.
FLASHCARDS: Like "TEST", except: (1) per-**problem** time limit; (2) total of **30 problems** (unless you change number); and (3) visual prompts.
SPECIAL PROBLEMS: Like "PRACTICE" except: all problems are taken (in random order) from up to 15 problems that are either (1) all recently **missed** problems or (2) all **"entered"** problems. See manual about "**ENTER PROBLEMS**" key and "**Erase: Missed and 'Entered' Problems**" key.

Which Problems Are Emphasized in Which "Levels"? (See also manual & www.flashmaster.com)

"Levels" for Addition Problems (Subtraction "Levels" Are Similar.)

Level 1: 0 & 1 Tables. **Level 2:** 2 Table from 2 to 8 and 3+3. **Level 3:** Rest of problems with sums less than 11. **Level 4:** Problems with sums of 11 and 9+3, 3+9, 6+6, 7+7, 8+8, & 9+9. **Level 5:** Rest of problems with sums greater than 11. **Level 6:** 0 to 9 Tables with emphasis on difficult problems. **Levels 7, 8 & 9:** Same as Level 6, but increasingly more emphasis on difficult problems.

"Levels" for Multiplication Problems (Division "Levels" Are Similar.)

Level 1: 0 & 1 Tables to 9; and 2 Table to 5. **Level 2:** 2 Table from 6 to 9; and 3, 4 & 5 Tables from 3 to 5. **Level 3:** 3 Table from 6 to 9; 4×6, 6×4, 5×6, 6×5, & 6×6; and 10 Table. **Level 4:** 4 & 5 Tables from 7 to 9. **Level 5:** 7, 8 & 9 Tables from 6 to 9. **Level 6:** 0 to 10 Tables. **Level 7:** Same as Level 6, but even more emphasis on difficult problems. **Level 8:** 11 & 12 Tables. **Level 9:** 0 to 12 Tables with emphasis on difficult problems.

"SEE RESULTS" Key and "Erase Results" Key (See also manual & www.flashmaster.com)

Push the "SEE RESULTS" key (one or more times) to display the results of up to the last 9 "learning activities" performed on the FlashMaster. **More recent** results are numbered **higher**. Push the "Erase Results" key to erase all results currently stored in the FlashMaster's memory.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
CE N11652 ST RoHS COMPLIANT